



AEMnet ADAPTER GUIDE

Series 2 Programmable Engine Management System		
Series 2 Part Number	Description	AEMnet Adapter Part Number
30-6030	Series 2 Plug & Play EMS. Manual Trans. Acura & Honda K-Series Swap. Excluding TSX & Accord. ACURA: 02-06 RSX, 02-04 RSX Type-S. HONDA: 01-05 Civic DX/LX, 01-05 Civic EX & 02-05 Civic Si	30-3430
30-6040	Series 2 Plug & Play EMS. Manual Trans. ACURA: 92-95 Integra RS/LS/GS/GS-R. HONDA: 90-95 Accord DX/LX/EX, 93-95 Del Sol S/Si, 94-95 Del Sol VTEC, 92-95 Civic DX/LX/EX/Si, 90-91 Prelude Si & 92-95 Prelude S/SE/Si/VTEC	30-3431
30-6050	Series 2 Plug & Play EMS. Manual Trans. ACURA: 98-99 CL & 00-01 Integra LS/GS/GS-R/Type-R. HONDA: 98-02 Accord DX/LX/EX & 99-00 Civic DX/LX/EX/Si	30-3432
30-6051	Series 2 Plug & Play EMS. Manual Trans. Acura & Honda J-Series Swap. J30A, J30A1, J32A, J32A1, J32A2 & J35A4	30-3432
30-6052	Series 2 Plug & Play EMS. Manual Trans. HONDA: 00-05 S2000	30-3432
30-6053	Series 2 Plug & Play EMS. Manual Trans. HONDA: 06-08 S2000 DBW	30-3432
30-6060	Series 2 Plug & Play EMS. Manual Trans. ACURA: 1997 CL & 96-99 Integra RS/LS/GS/GS-R/Type-R. HONDA: 96-97 Accord DX/LX/EX, 96-97 Del Sol S/Si/VTEC, 96-98 Civic HX/DX/LX/EX & 96-00 Prelude S/Si/VTEC/Type SH	30-3432
30-6100	Series 2 Plug & Play EMS. TOYOTA: 93-97 Supra Twin Turbo	30-3433
30-6101	Series 2 Plug & Play EMS. TOYOTA: 93-97 Supra Non-Turbo	30-3433
30-6300	Series 2 Plug & Play EMS. Manual Trans. EAGLE: 90-94 Talon TSi. MITSUBISHI: 90-94 Eclipse Turbo GS/GST/GSX & 91-92 Galant VR-4. PLYMOUTH: 90-94 LASER RS	30-3434
30-6310	Series 2 Plug & Play EMS. Manual Trans. EAGLE: 95-98 Talon TSi. MITSUBISHI: 95-99 Eclipse GST/GSX, 00-02 Eclipse RS/GS & 03-05 Lancer Evolution VIII MR/RS	30-3431
30-6311	Series 2 Plug & Play EMS. Manual Trans. DODGE: 92-96 Stealth R/T Turbo. MITSUBISHI: 91-97 3000GT VR-4	30-3431
30-6320	Series 2 Plug & Play EMS. Manual Trans. MITSUBISHI: 2006 Lancer Evolution IX MR/RS/SE	30-3435
30-6600	Series 2 Plug & Play EMS. Manual Trans. 64 Pins. INFINITI: 91-93 G20. NISSAN: 89-92 240SX LS/SE/XE, 89-95 Bluebird SR20DET, 91-93 NX SE/XE, 90-94 Pulsar GTi-R SR20DET & 91-94 Sentra SE/SE-R/XE. 50mm AEM Trigger Disc included. Some applications require the 54mm part#30-8762	30-3436
30-6601	Series 2 Plug & Play EMS. Manual Trans. 64 Pins. NISSAN: 91-93 180SX S13 SR20DET Japan, 94-95 180SX S14 SR20DET Japan & 91-93 Silvia S13 SR20DET Japan	30-3436
30-6610	Series 2 Plug & Play EMS. Manual Trans. 88 Pins. INFINITI: 94-96 G20 T. NISSAN: 95-97 200 SX SE/SE-R, 95-97 200SX S14 SR20DET Europe, 1995 240SX SE OBD1, 95-96 Altima GXE/SE/XE, 95-96 Sentra GLE/GXE/XE & 95-97 Sentra SR20DE	30-3437
30-6611	Series 2 Plug & Play EMS. Manual Trans. 88 Pins. INFINITI: 1999 G20 T. NISSAN: 97-98 200SX SE/SE-R, 1998 20SX S14 SR20DET Europe, 95-98 240SX SE/SE-R OBD2, 96-99 Altima GXE/SE/XE & 97-99 Sentra GLE/GXE/SE/XE	30-3437
30-6620	Series 2 P&P EMS. M/T. 76 Pins. NISSAN: 88-90 180SX/200SX S13 CA18DET JPN, 90-95 300ZX, 92-94 Maxima, 88-90 Silvia S13 CA18DET JPN, 94-96 Silvia S14 SR20DET JPN, 89-92 Skyline R32/GTR RB-20DET/26DETT JPN & 93-98 Skyline R33/GTR RB-20DET/25DET/26DETT JPN	30-3437
30-6820	Series 2 Plug & Play EMS. Manual Trans. SUBARU: 2004 Impreza WRX Sti	30-3438
30-6821	Series 2 Plug & Play EMS. Manual Trans. SUBARU: 05-06 Impreza WRX Sti	30-3438

Series 2 Programmable Engine Management System		
Wideband Failsafe Part Number	Description	AEMnet Adapter Part Number
30-4900	Wideband Failsafe Gauge	30-3439

AEMnet Termination Plug		
Termination Plug Part Number	Description	
35-3440-F	AEMnet Female Termination Plug	
35-3440-M	AEMnet Male Termination Plug	



AEMnet TERMINATION GUIDE

Infinity Programmable Engine Management - Host Device				
Peripheral	Peripheral	Peripheral	Peripheral	Termination Required
AQ-1 Data Logger				N/A
Dyno-Shaft				Male
Wideband Failsafe				Male
4-Channel Wideband				Male
AQ-1 Data Logger	Dyno-Shaft			N/A
AQ-1 Data Logger	Wideband Failsafe			N/A
AQ-1 Data Logger	4-Channel Wideband			N/A
Dyno-Shaft	Wideband Failsafe			Male
Dyno-Shaft	4-Channel Wideband			Male
Wideband Failsafe	4-Channel Wideband			Male
AQ-1 Data Logger	Dyno-Shaft	Wideband Failsafe		N/A
AQ-1 Data Logger	Dyno-Shaft	4-Channel Wideband		N/A
AQ-1 Data Logger	Wideband Failsafe	4-Channel Wideband		N/A
Dyno-Shaft	Wideband Failsafe	4-Channel Wideband		Male
AQ-1 Data Logger	Dyno-Shaft	Wideband Failsafe	4-Channel Wideband	Female

Series 2 Programmable Engine Management - Host Device				
Peripheral	Peripheral	Peripheral	Peripheral	Termination Required
AQ-1 Data Logger				N/A
Dyno-Shaft				Male or Female
Wideband Failsafe				Male or Female
4-Channel Wideband				Male or Female
AQ-1 Data Logger	Dyno-Shaft			N/A
AQ-1 Data Logger	Wideband Failsafe			N/A
AQ-1 Data Logger	4-Channel Wideband			N/A
Dyno-Shaft	Wideband Failsafe			Male or Female
Dyno-Shaft	4-Channel Wideband			Male or Female
Wideband Failsafe	4-Channel Wideband			Male or Female
AQ-1 Data Logger	Dyno-Shaft	Wideband Failsafe		N/A
AQ-1 Data Logger	Dyno-Shaft	4-Channel Wideband		N/A
AQ-1 Data Logger	Wideband Failsafe	4-Channel Wideband		N/A
Dyno-Shaft	Wideband Failsafe	4-Channel Wideband		Male or Female
AQ-1 Data Logger	Dyno-Shaft	Wideband Failsafe	4-Channel Wideband	N/A

EMS-4 Programmable Engine Management - Host Device				
Peripheral	Peripheral	Peripheral	Peripheral	Termination Required
AQ-1 Data Logger				N/A
Dyno-Shaft				Male or Female
Wideband Failsafe				Male or Female
4-Channel Wideband				Male or Female
AQ-1 Data Logger	Dyno-Shaft			N/A
AQ-1 Data Logger	Wideband Failsafe			N/A
AQ-1 Data Logger	4-Channel Wideband			N/A
Dyno-Shaft	Wideband Failsafe			Male or Female
Dyno-Shaft	4-Channel Wideband			Male or Female
Wideband Failsafe	4-Channel Wideband			Male or Female
AQ-1 Data Logger	Dyno-Shaft	Wideband Failsafe		N/A
AQ-1 Data Logger	Dyno-Shaft	4-Channel Wideband		N/A
AQ-1 Data Logger	Wideband Failsafe	4-Channel Wideband		N/A
Dyno-Shaft	Wideband Failsafe	4-Channel Wideband		Male or Female
AQ-1 Data Logger	Dyno-Shaft	Wideband Failsafe	4-Channel Wideband	N/A

AQ-1 Programmable Engine Management - Host Device				
Peripheral	Peripheral	Peripheral	Peripheral	Termination Required
Dyno-Shaft				Female
Wideband Failsafe				Female
4-Channel Wideband				Female
Dyno-Shaft	Wideband Failsafe			Female
Dyno-Shaft	4-Channel Wideband			Female
Wideband Failsafe	4-Channel Wideband			Female
Dyno-Shaft	Wideband Failsafe	4-Channel Wideband		Female

*** Termination Plugs - Male (Part #35-3440-M), Female (Part #35-3440-F) ***