

# INSTALLATION INSTRUCTIONS **High Clearance Rear A-Arms:** for Polaris RZRS®

Item	Description	Qty
Α	Rear Upper A-Arm, Left	1
В	Rear Upper A-Arm, Right	1
С	Rear Lower A-Arm, Left	1
D	Rear Lower A-Arm, Right	1

Item	Description	Qty
E	Brake Line Clips	2
F	Sway Bar Links	2
Н	Grease Fittings	6



### Read instructions and view illustrations before beginning.

### Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th 8:00am - 7:00pm EST Friday 9:00am - 2:00pm EST Saturday

Thank You





SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

(Kit Contents continued)

M10-1.50 x 45mm Lg. FHCS





)) M10-1.50 Nylock Nut

Do not tighten hardware completely unless noted. Keep all components removed from machine.

- 1. Raise Rear of machine off ground, secure with jack stands.
- Remove Wheels.
- Unbolt Sway Bar Links and Shocks from Lower A-Arms. See Fig. 1.
- Remove Brake Lines from A-Arms.
- Remove Spindles. See Fig. 1.
- 2. Remove stock Upper and Lower A-Arms from Frame. See Fig. 1.
- 3. Remove Sway Bar Links from machine. See Fig. 1a.
- 4. Transfer stock Bushings, or install SuperATV Poly Bushing Kit AAB-P-RZR, into A-Arms (A-D). See Fig. 2.
- Install Grease Fittings (H) into A-Arms (A-D). See Fig. 2.
- 6. Install A-Arms (A-D) to Frame with stock hardware. SuperATV recommends using Loc-Tite on Nuts when installing. See Fig. 3.
- 7. Install Sway Bar Links (F) to stock Sway Bar. See page 5.
- 8. Reinstall necessary components with stock hardware; tighten completely. See Fig. 3a.
- 9. Ensure no binding can occur, and secure Brake Lines with Brake Line Clips (E) and M5-.8 x 13mm Lg. PHMS. See Fig. 3a.



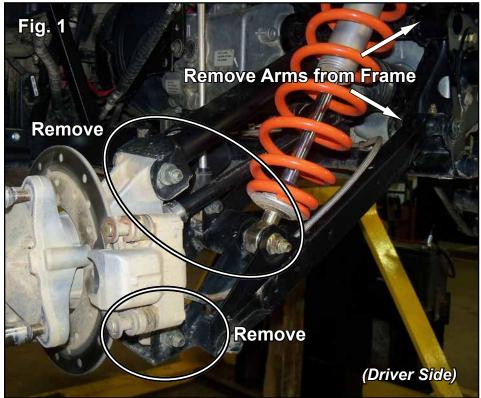




Fig. 2
Install stock Bearings or SuperATV Poly Bushing Kit AAB-P-RZR into A-Arms (A-D)



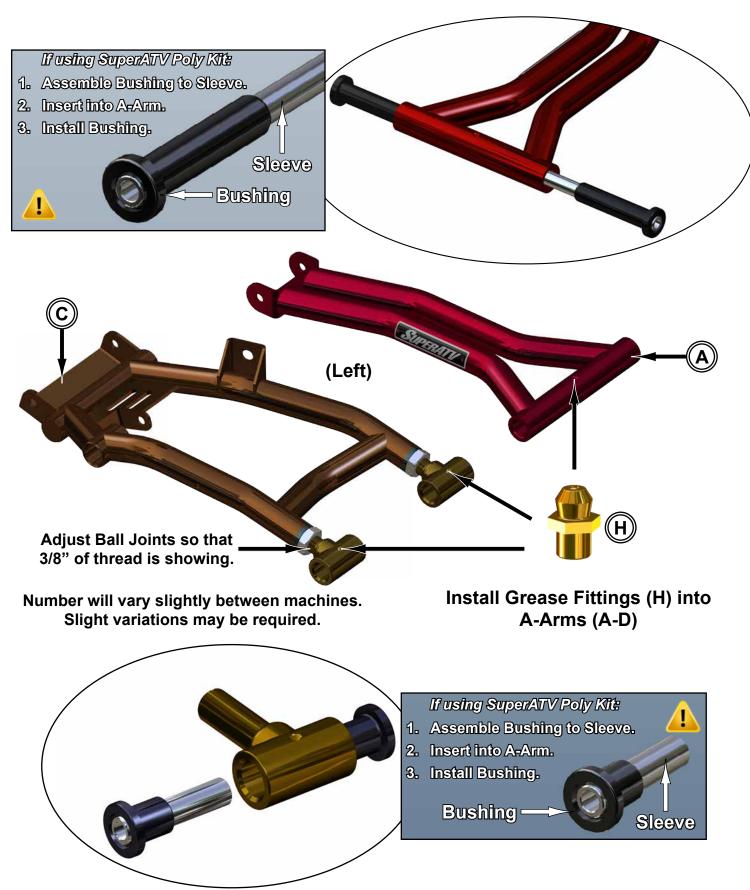

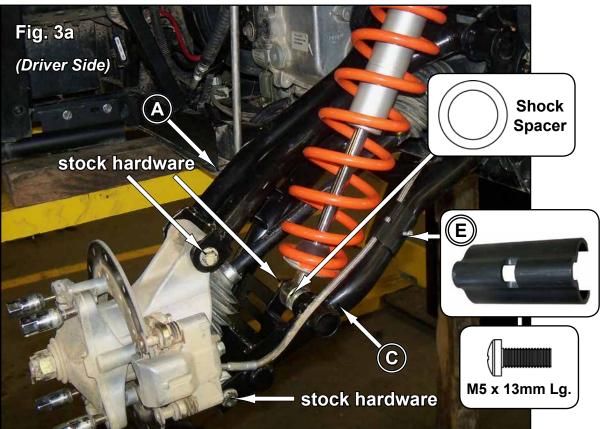

## **Sway Bar Link Installation**

- Install Sway Bar Links (F) to stock Sway Bar with Bushings, M10-1.50 x 45mm Lg. FHCS, and M10-1.50 Nylock Nuts.
- Install Sway Bar Links (F) to Lower A-Arms (C)(D) with 1/2"-13 x 1-3/4" Lg. HHCS and 1/2"-13 Nylock Nuts.

- Tighten all hardware completely.




## **CAMBER**



## Perform adjustments in small increments.



Adjustments are to be made after all suspension components have been completely assembled. Tires must not be in contact with ground when making adjustments.

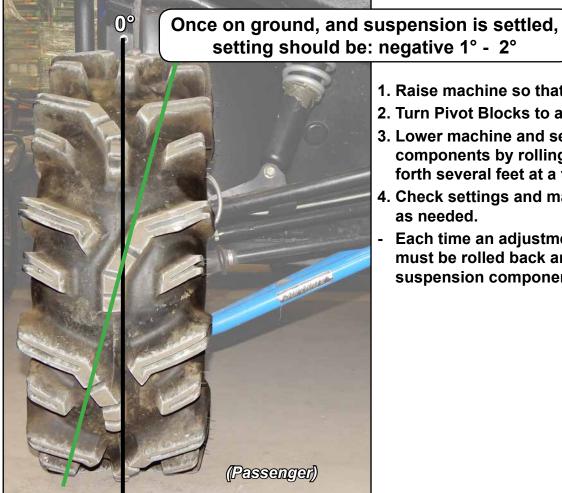

- 1. Raise machine so that tires are off ground.
- 2. Turn Pivot Blocks to adjust camber.
- 3. Lower machine and settle suspension components by rolling machine back and forth several feet at a time.
- 4. Check settings and make small adjustments as needed.
- Each time an adjustment is made, machine must be rolled back and forth to settle suspension components.

