


INSTALLATION INSTRUCTIONS

Flip Windshield: for Polaris Ranger® 570

Item	Description
A	Windshield

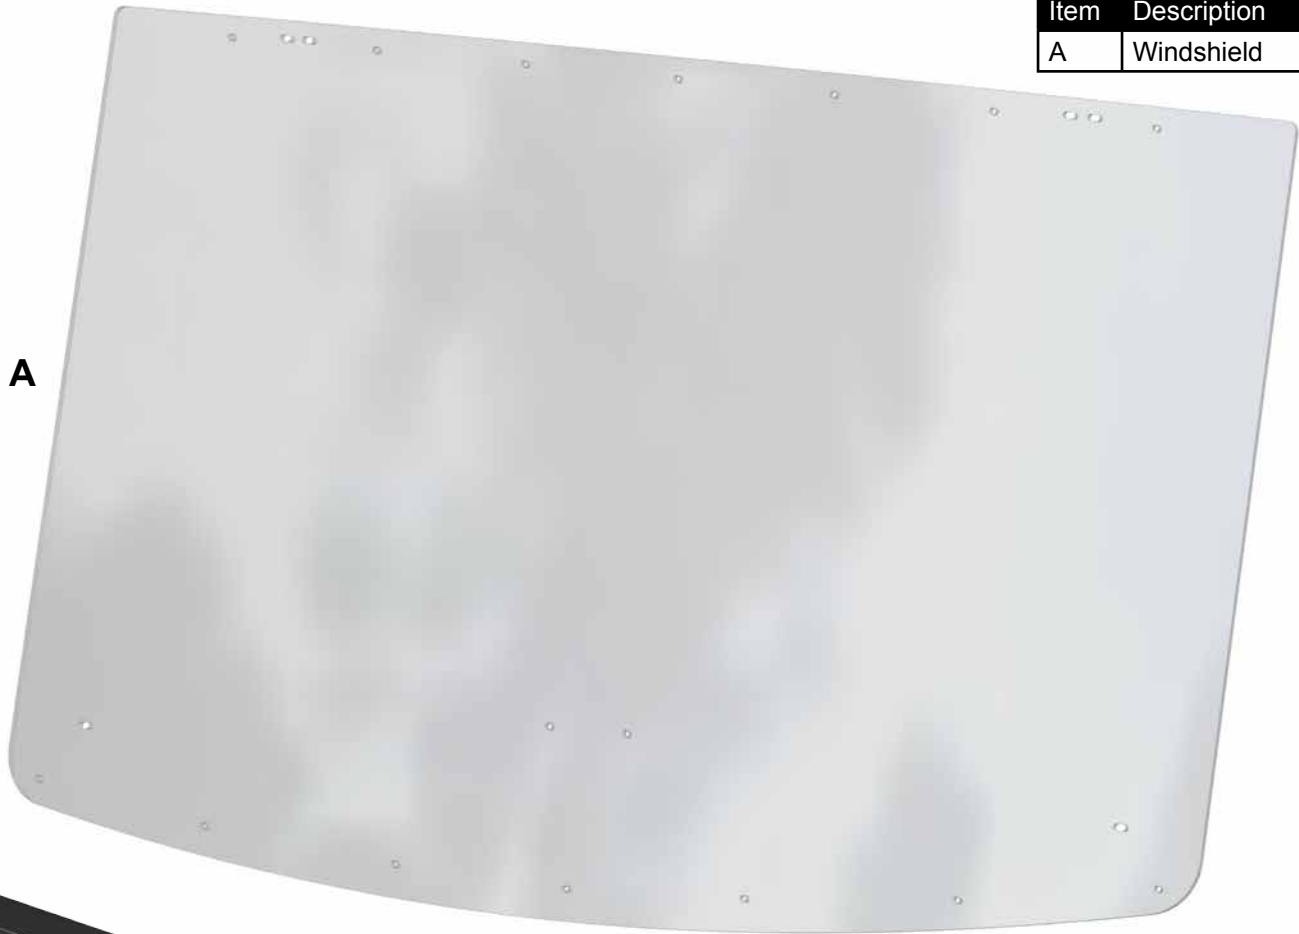

A



Bulb Seal



Gasket

Gasket is not used with this application; discard.

(kit contents continue on following pages)

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
 8:00am - 7:00pm EST Friday
 9:00am - 2:00pm EST Saturday

*Thank You
 For Choosing*



Liability Statement


SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.








SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

(kit contents continued)

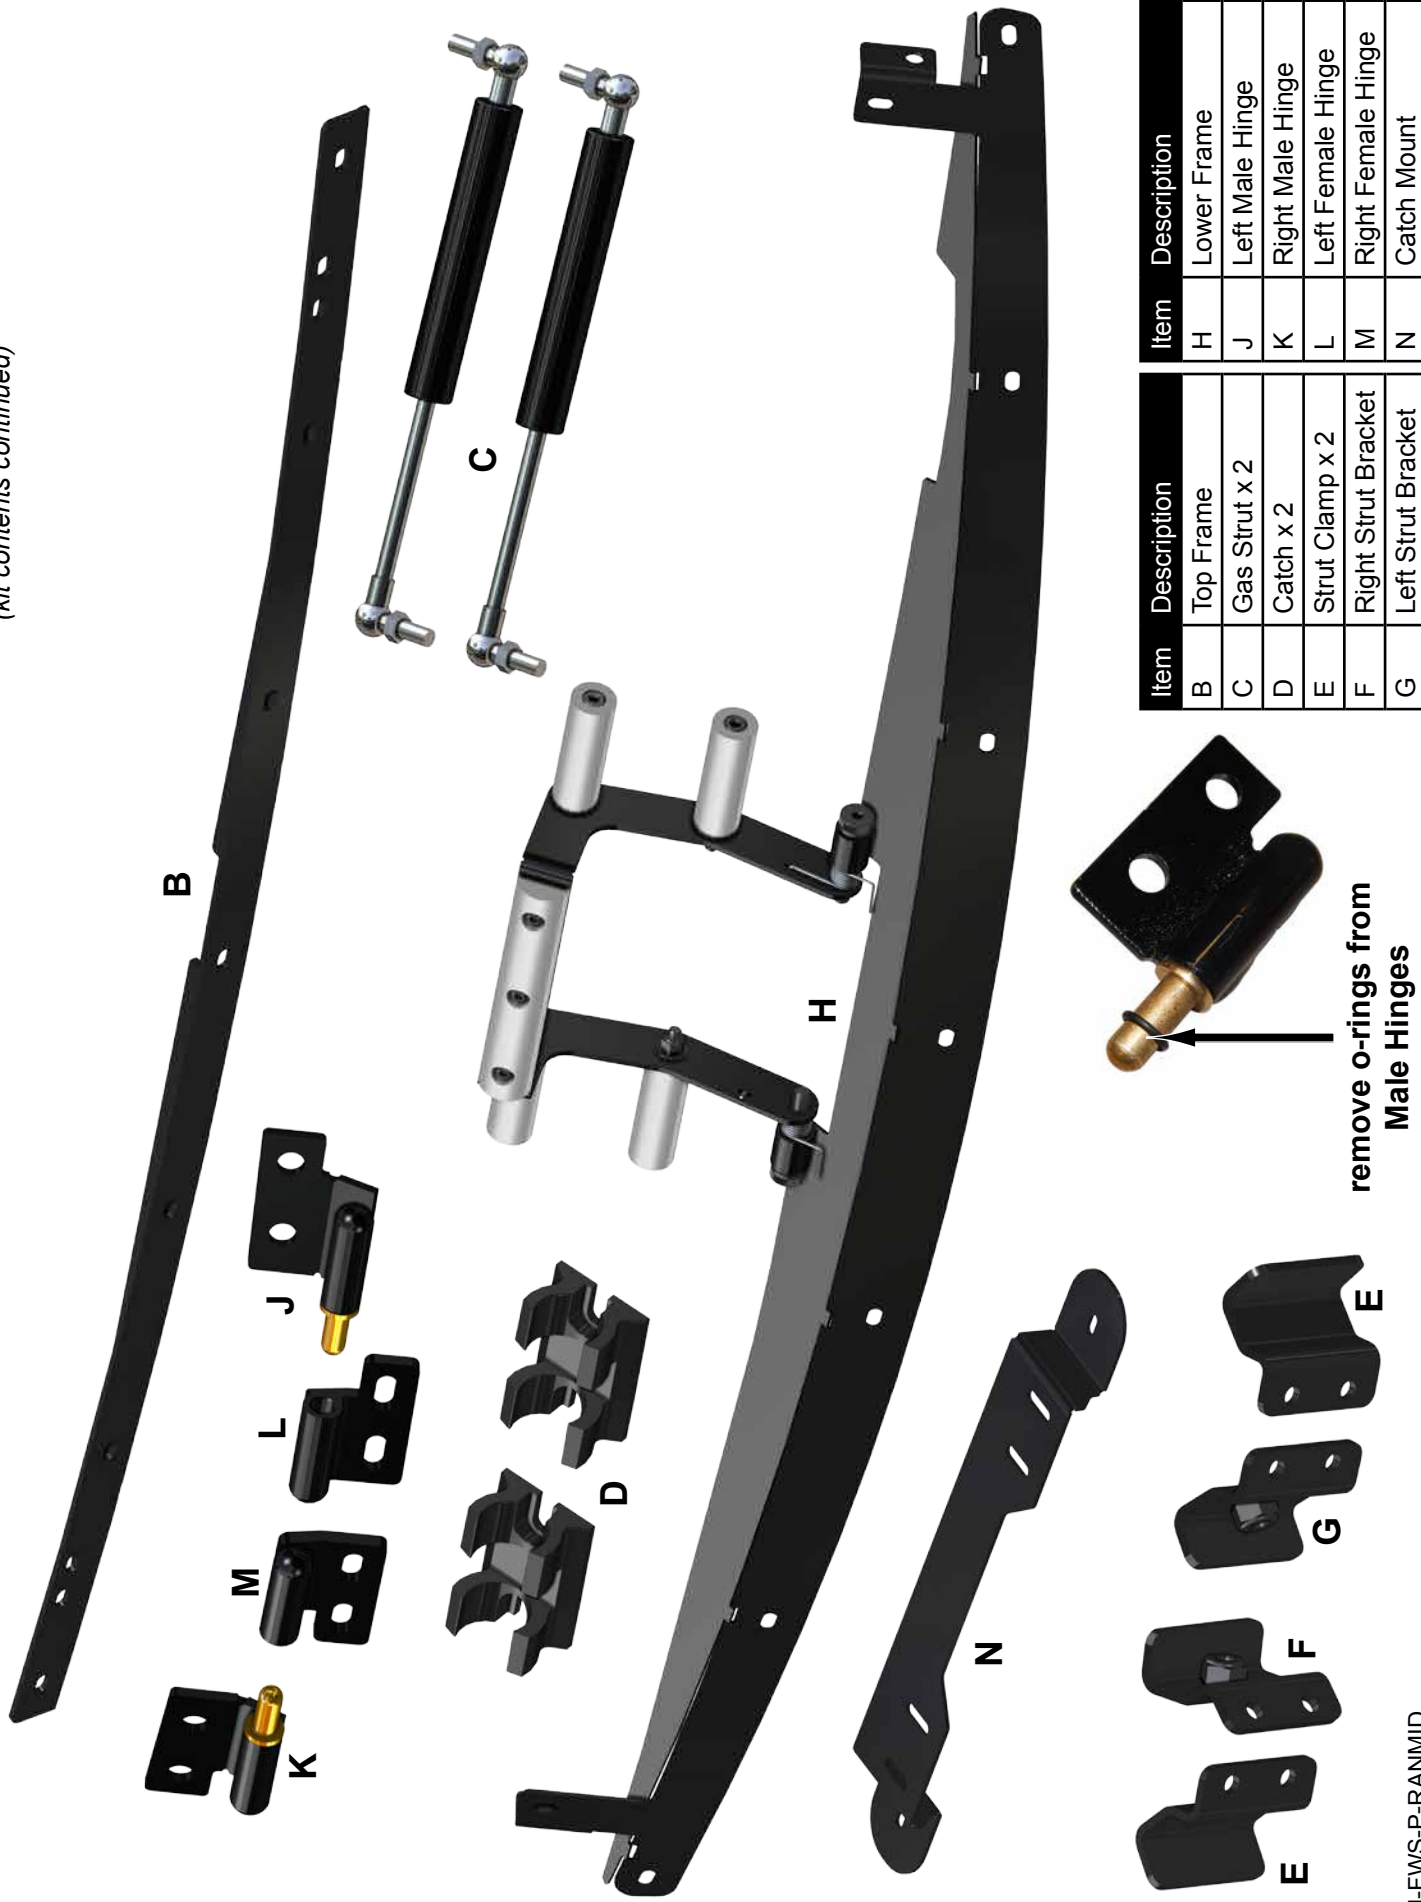

Item	Description	Item	Description
B	Top Frame	H	Lower Frame
C	Gas Strut x 2	J	Left Male Hinge
D	Catch x 2	K	Right Male Hinge
E	Strut Clamp x 2	L	Left Female Hinge
F	Right Strut Bracket	M	Right Female Hinge
G	Left Strut Bracket	N	Catch Mount

(kit contents continued)

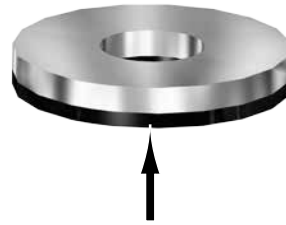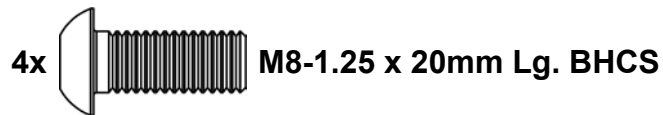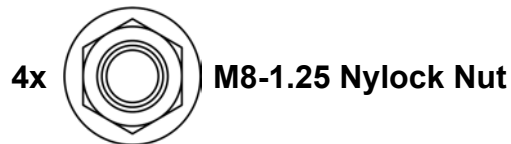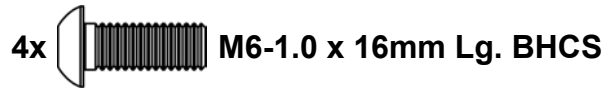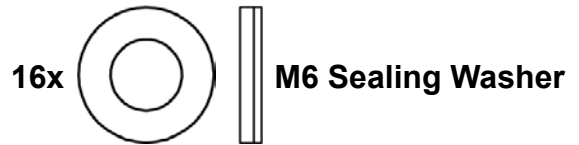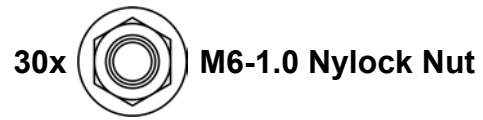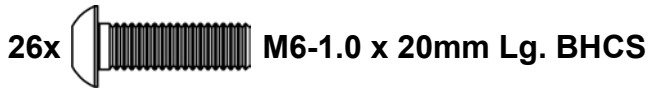

Rubber must face plastic when installing M6 Sealing Washer

Use hand tools only when assembling.



Do not use power tools.

Windshield Cleaning:


- Do not use a dry cloth, or your hands, to wipe off Windshield; Scratching will occur.
 - Do not use window cleaning fluids (Windex, 409, etc) or any solvents (gasoline, denatured alcohol, acetone, etc).
 - Never use abrasive cleaners, abrasive pads, or gritty cloths.
1. Thoroughly rinse Windshield to float off dirt and mud.
 2. Using a soft cloth, or microfiber cloth, clean Windshield with warm water and a gentle detergent. Baby shampoo or hand washing soap are recommended.
 3. To prevent water spots, use a chamois and blot Windshield dry.

Reference only; do not assemble completely at this time.



Install Seal to Windshield (A) as shown:
seal shown off for clarity only.

To ease installation, soak Seal in hot water before cutting or installing to increase flexibility.

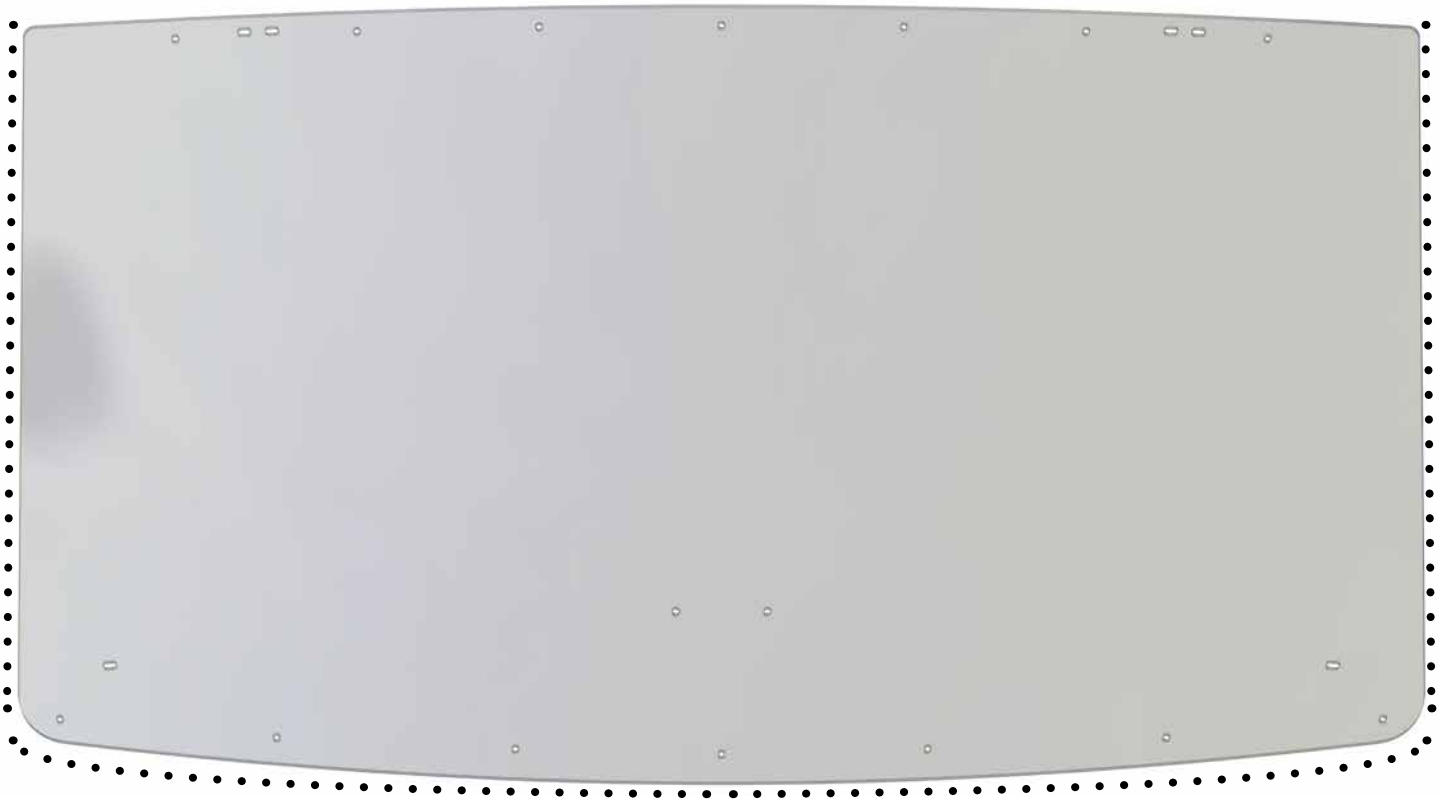


Bulb Seal

Bulb Seal



**Bulb portion of Seal to
face towards vehicle**





- Install Lower Frame (H) to Windshield (A) with hardware shown.

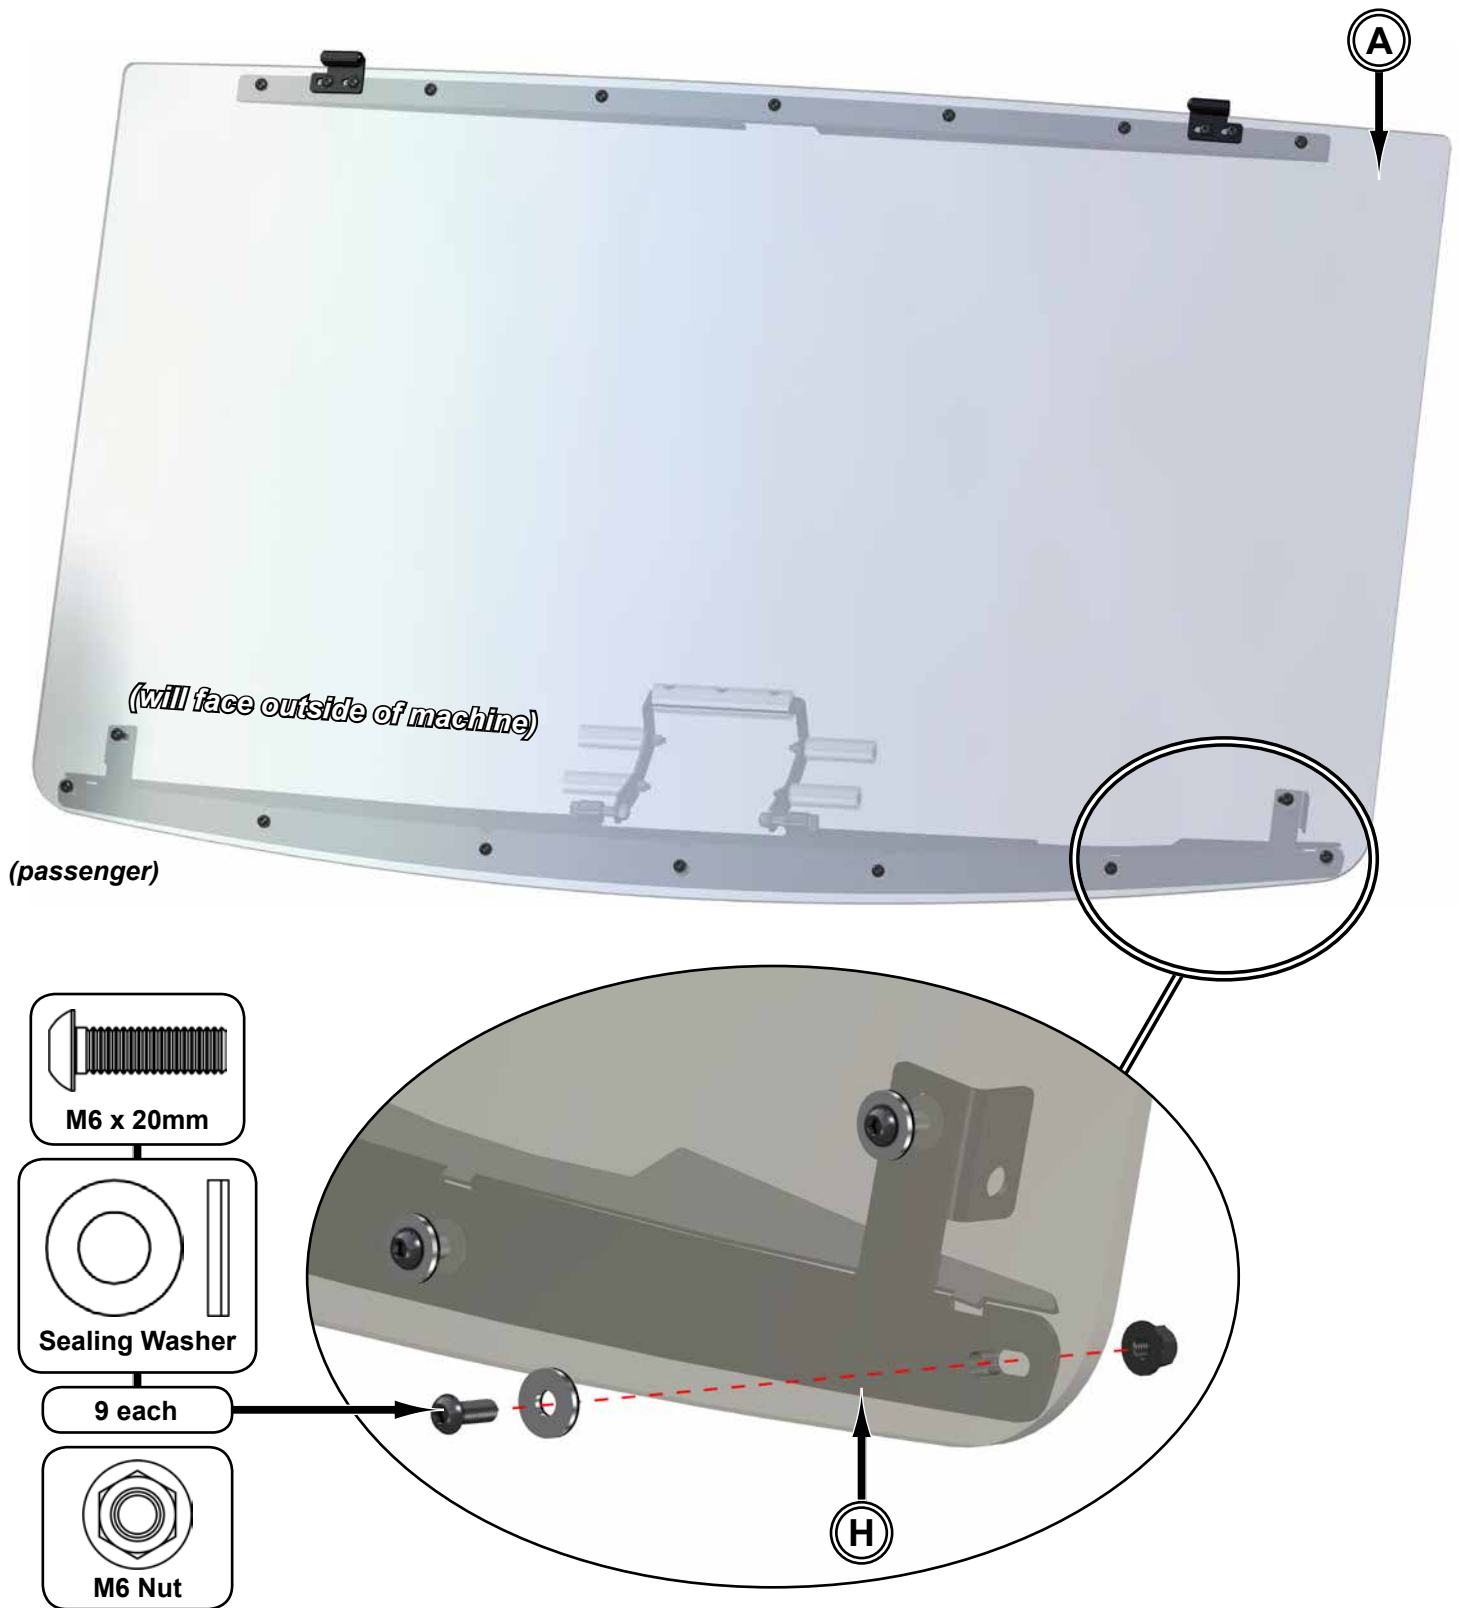

- Insert Left Male Hinge (J) into Left Female Hinge (L). *Provided Spacer must be installed.*
- Secure Left Male Hinge (J) to hole located in stock Windshield Mount Plate with hardware shown.
- Repeat for Right side.




Install provided Spacer

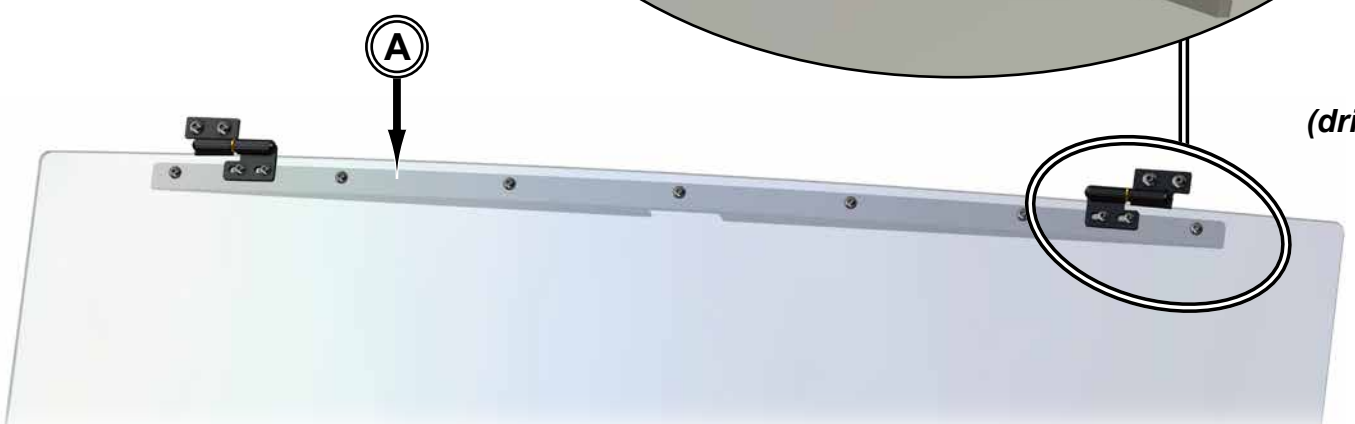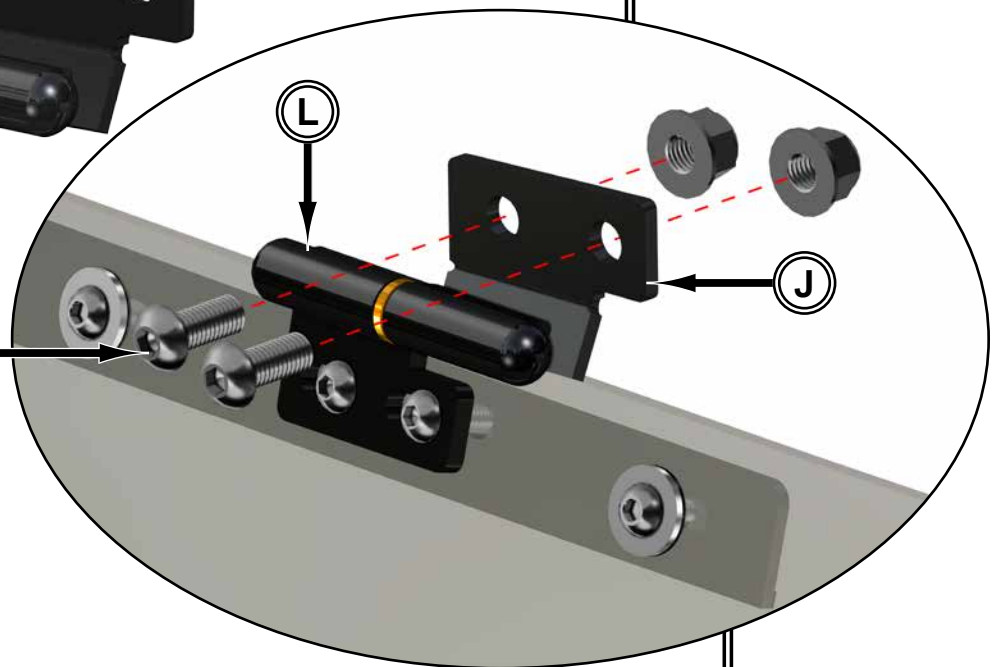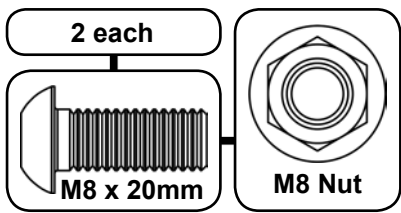
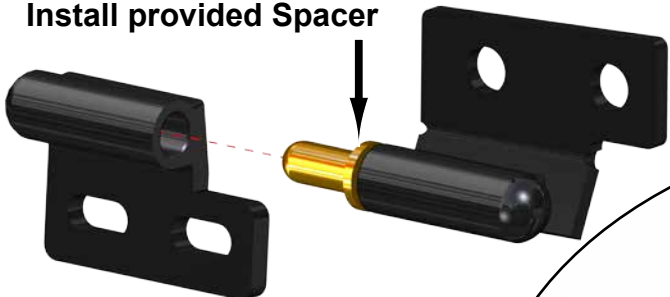


Hinge Alignment

To avoid binding when opening and closing Windshield, align Hinges before tightening hardware.

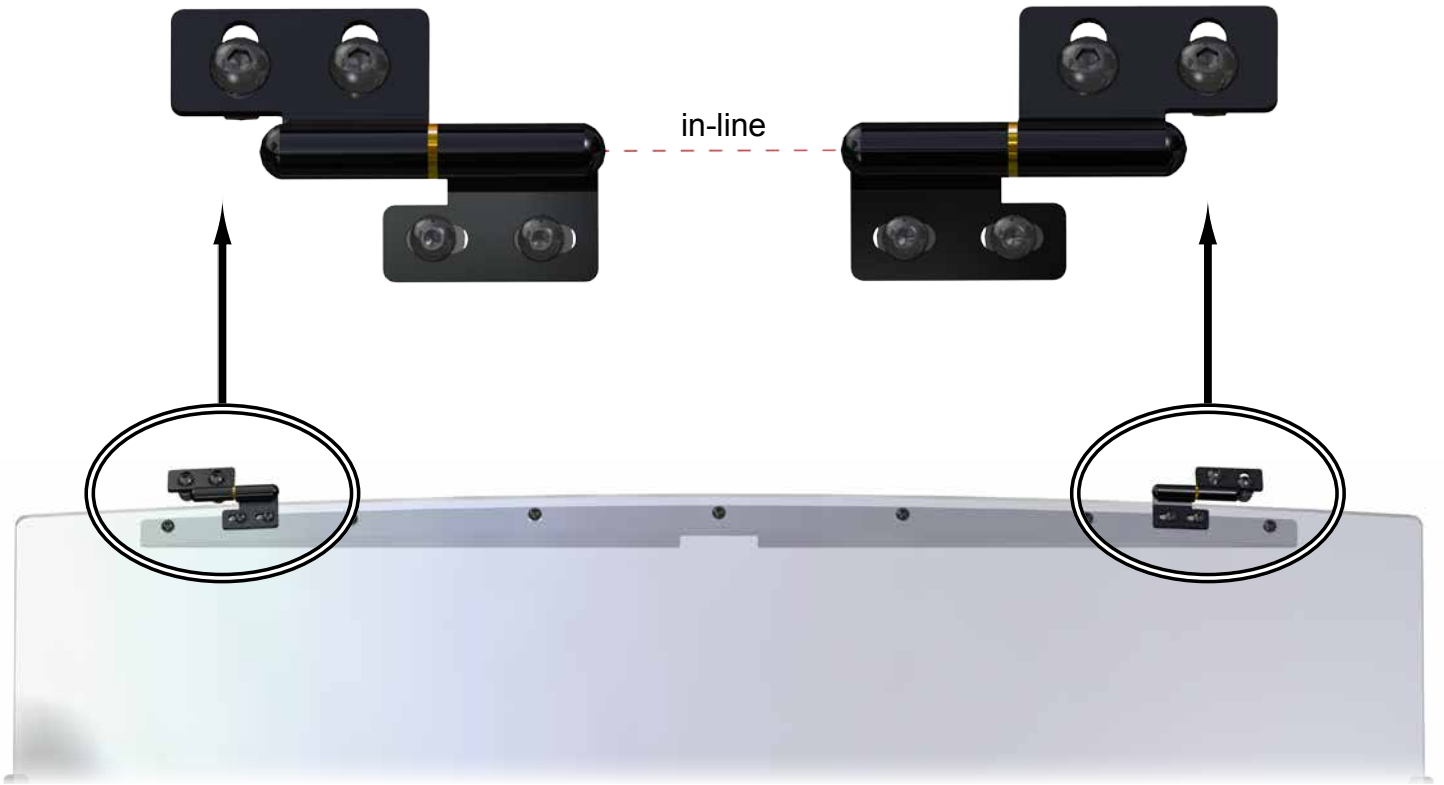

- Place Strut Clamp (E) and Left Strut Bracket (G) around Cab Frame as shown.
- Secure with hardware shown.
- Repeat for opposite side.

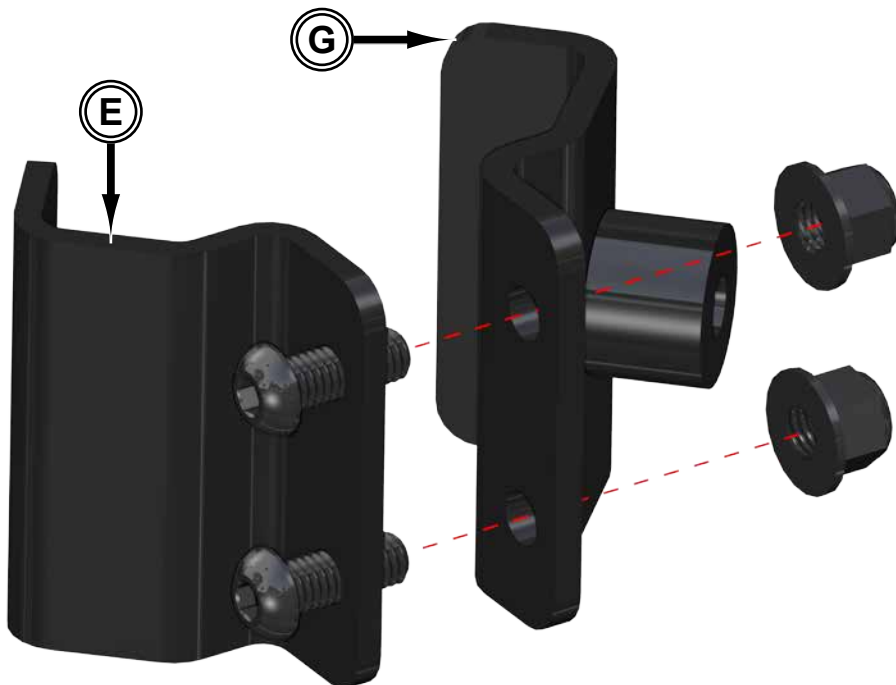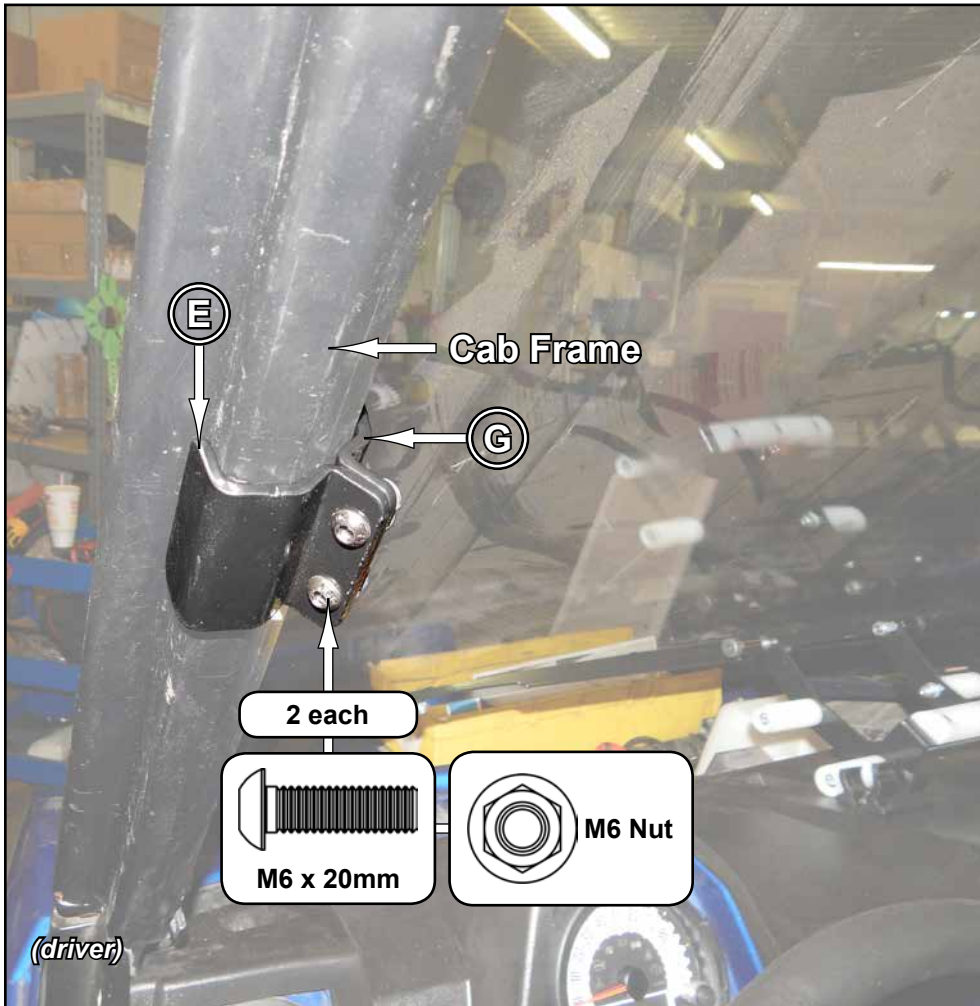


Gas Strut (C) Installation

- Install Gas Strut (C) to Left Strut Bracket (G).
- Repeat for Right Strut Bracket (F).



- Open Windshield (A) to just under 90° and secure Gas Strut (C) to Lower Frame with M8 Nylock Nut.
- Repeat for opposite side.

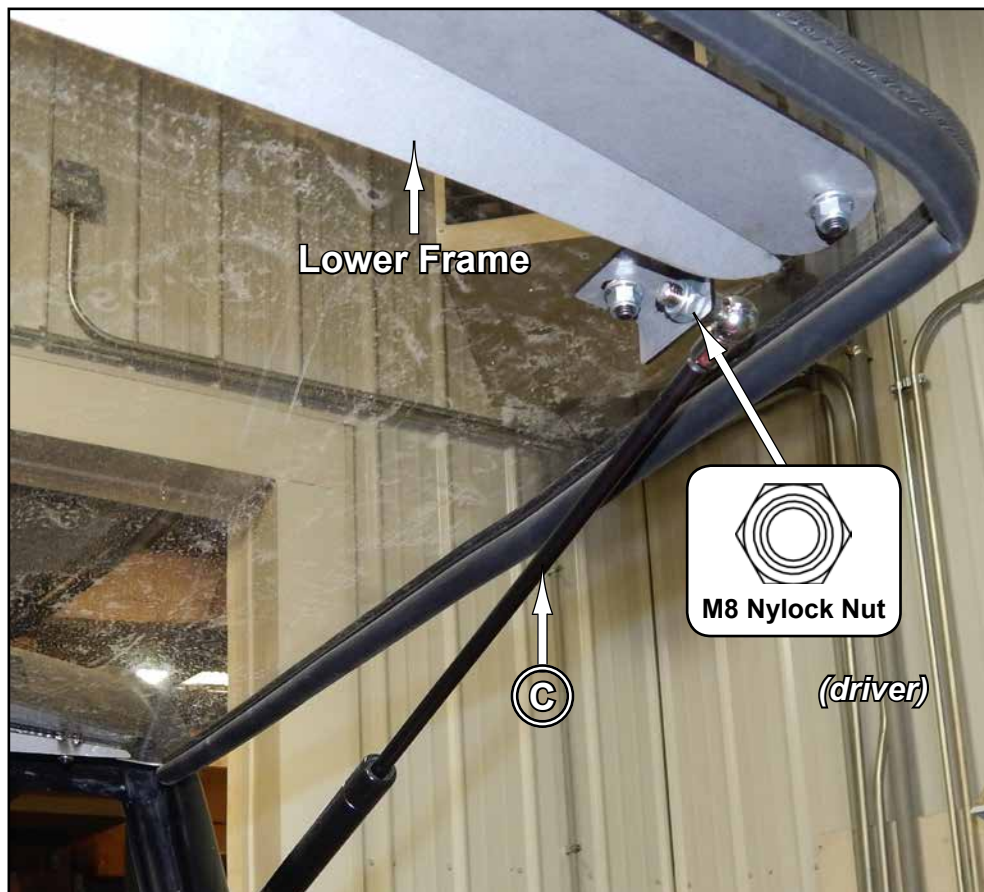

Extra hands are recommended for following steps:

- Close Windshield (A).
- Ensure that Windshield (A) is aligned to machine and Seal is in contact with Dash and Cage Frame as shown.
- **Tighten all hardware completely.**



Catch (D) installation

- Remove (2) Plastic Rivets from Dash.
- Install Catch Mount (N) to Dash with hardware shown.
- Install each Catch (D) to Catch Mount (N) with hardware shown; **do not tighten hardware.**
- Close Windshield (A) and engage Latch.
- Ensure that Windshield (A) is aligned to machine and tighten all Catch (D) hardware completely.

