

INSTALLATION INSTRUCTIONS
3" Lift Kit: for Polaris Ranger® 570/900

Item	Description	Qty
A	Front Brackets	4
B	Rear Brackets	4


Qty (8) each




25mm Lg. Spacer



M10-1.50 x 70mm Lg. HHCS

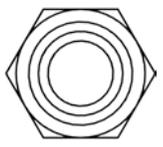

M10-1.50 Nylock Nut

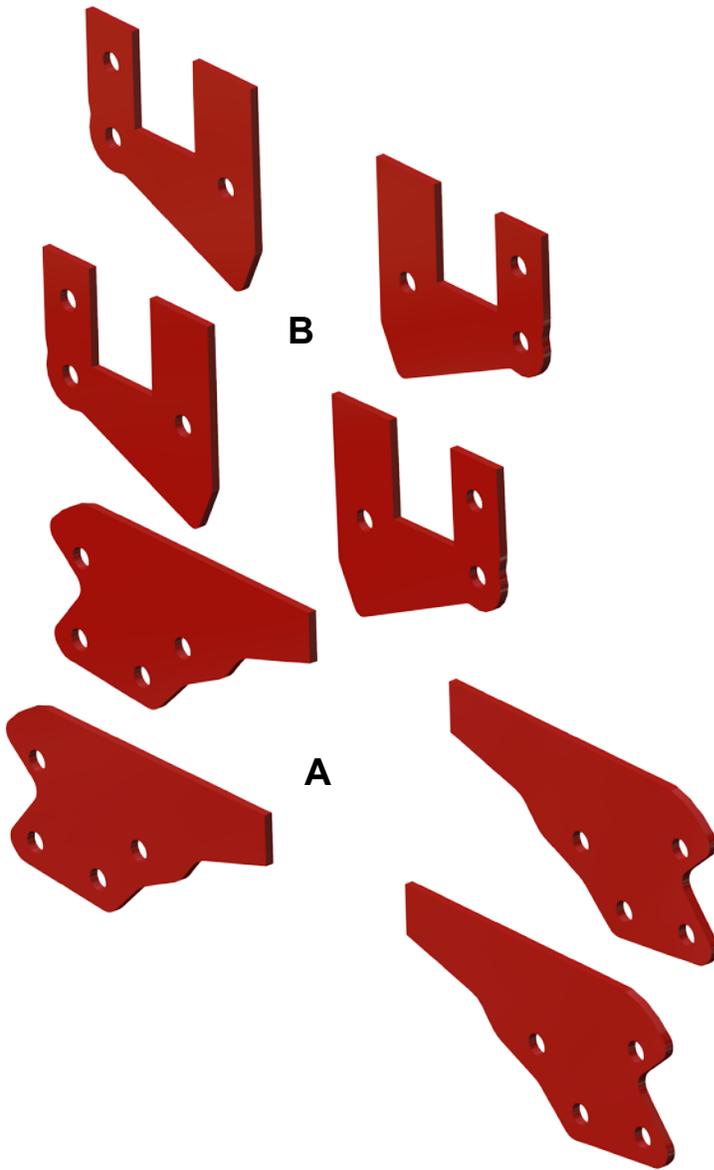

Read instructions and view illustrations before beginning.

Need help with your installation?

 sales@superatv.com
 www.superatv.com

 1-812-574-7777
  8:00am - 9:00pm EST M-Th
 8:00am - 7:00pm EST Friday
 9:00am - 2:00pm EST Saturday

Thank You
For Choosing
SUPERATV.COM

Liability Statement
 SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.


By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.



Keep all components removed from machine. Do not tighten hardware completely unless noted.


FRONT

1. Raise front of machine off ground, secure with jack stands and remove Wheels.
2. Remove Shocks from Frame Mount. See Fig. 1.
3. Install Front Brackets (A) to Frame Mount with 25mm Lg. Spacers, M10-1.5 x 70 Lg. FHCS, and M10-1.5 Nylock Nuts. See Figs. 2 - 2a.
4. Set Adjustment Collar on Shocks so that notch is in highest position. See Fig. 3.
- Install Shocks to Front Brackets (A) with stock hardware. See Fig. 2.
5. Tighten hardware completely and reinstall Wheels.

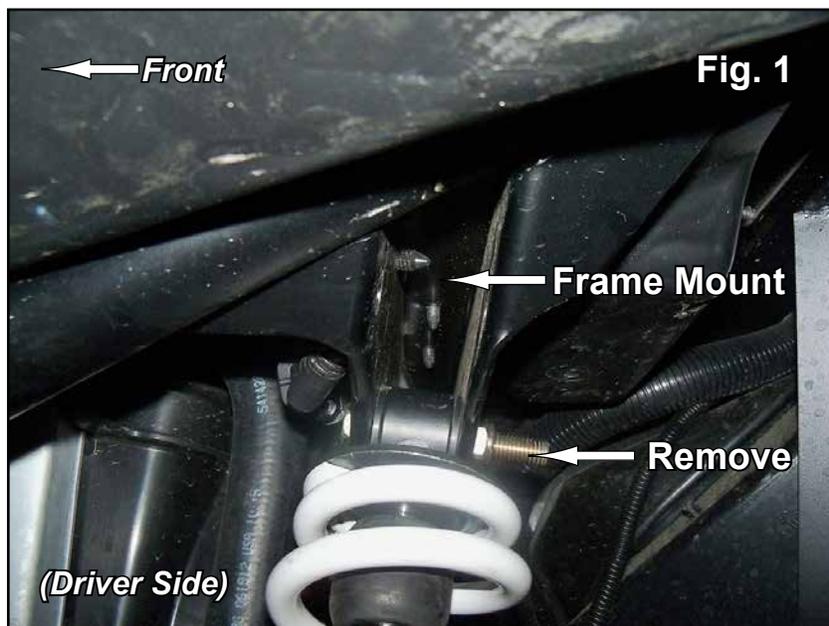

(installation illustrations continue on following pages)

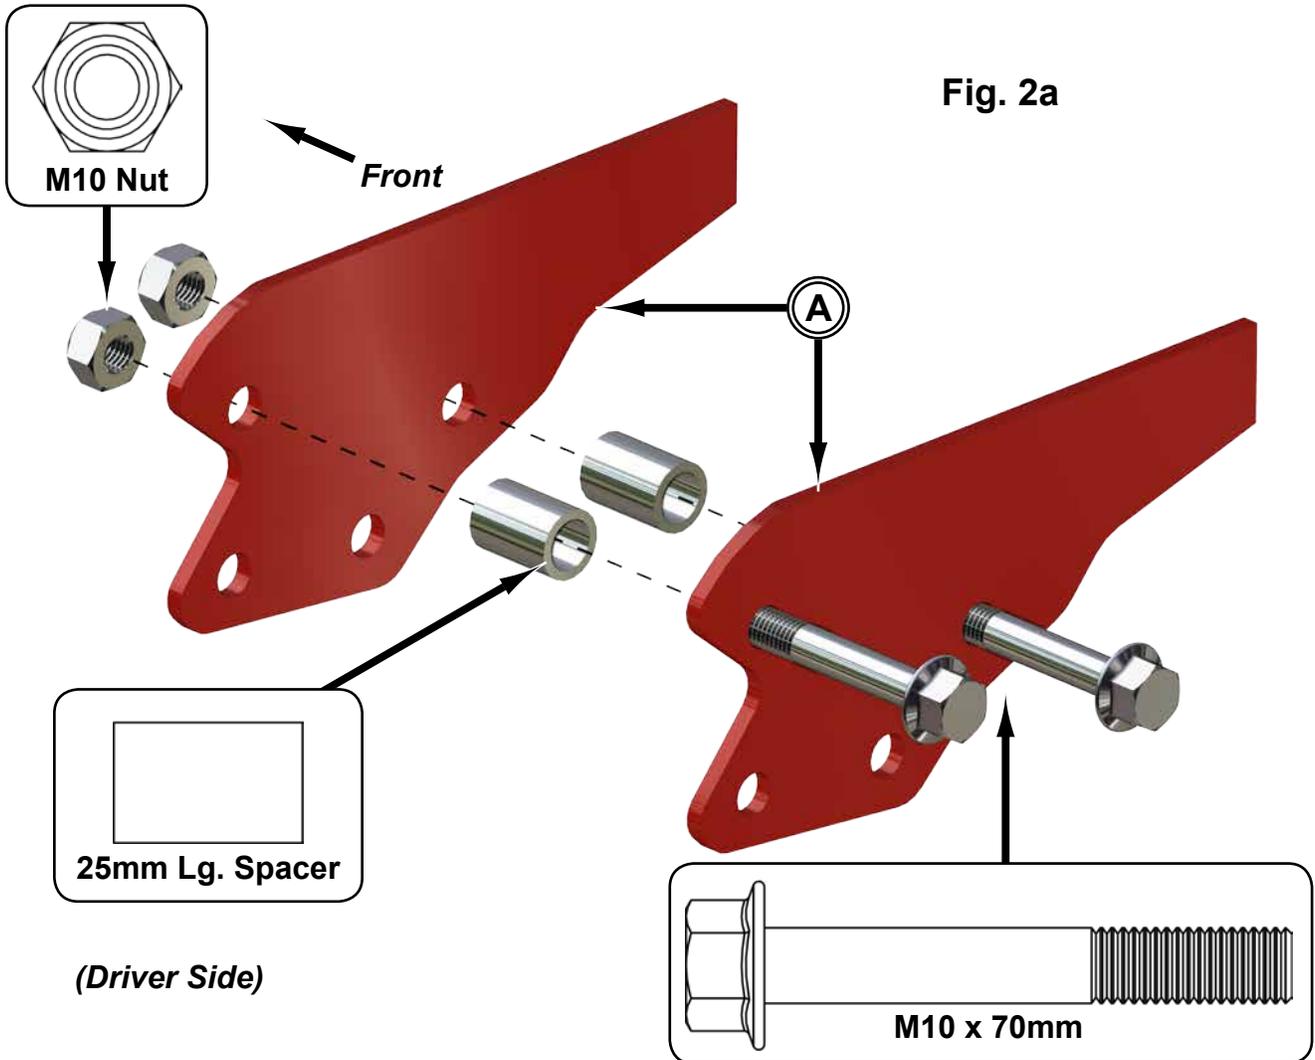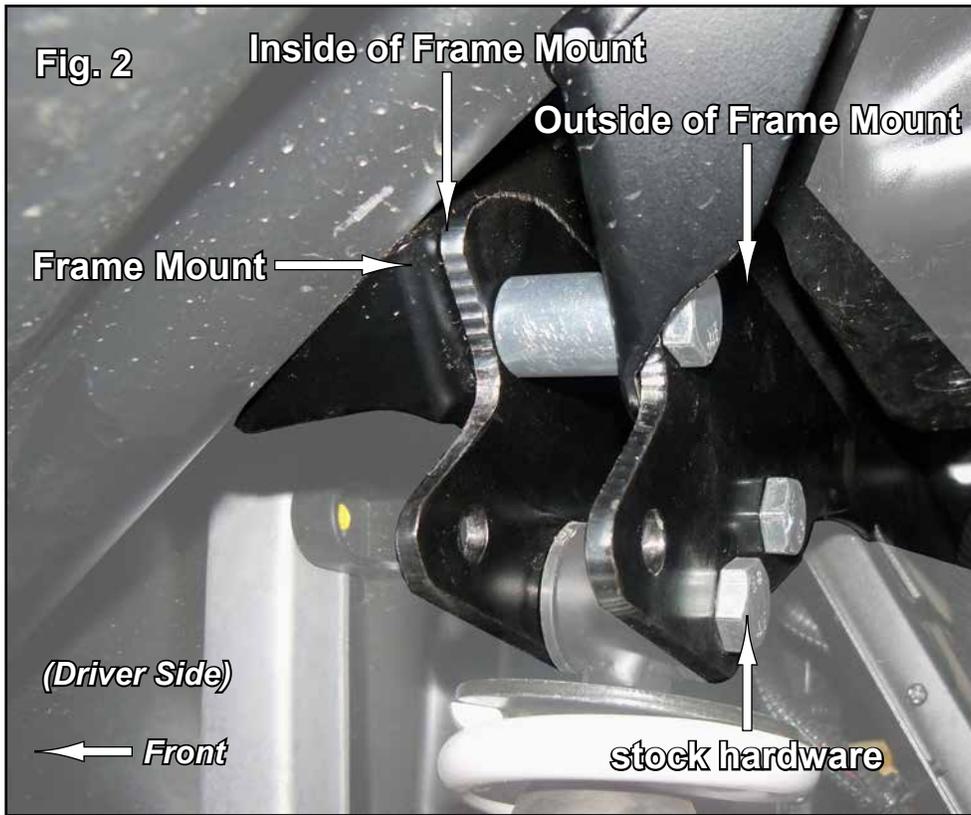

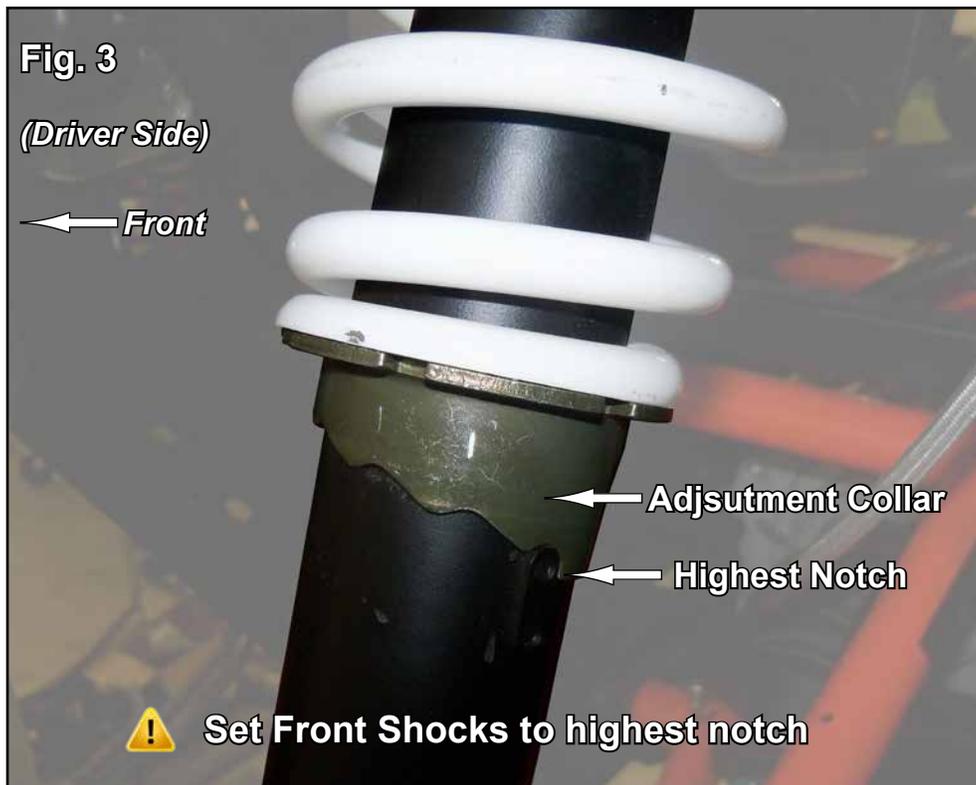

Keep all components removed from machine. Do not tighten hardware completely unless noted.

REAR

1. Raise rear of machine off ground, secure with jack stands, remove Wheels, and loosen Sway Bar from Sway Bar Links. See Fig. 4.
2. Remove Shocks from Frame Mount. See Fig. 5.
3. Install Rear Brackets (B) and 25mm Lg. Spacers with M10-1.5 x 70 Lg. FHCS and M10-1.5 Nylock Nuts. See Figs. 5 - 5a.
4. Install Shocks to Rear Brackets (B) with stock hardware. See Fig. 5.
5. Tighten Sway Bar to Sway Bar Links.
6. Tighten all hardware completely and reinstall Wheels.




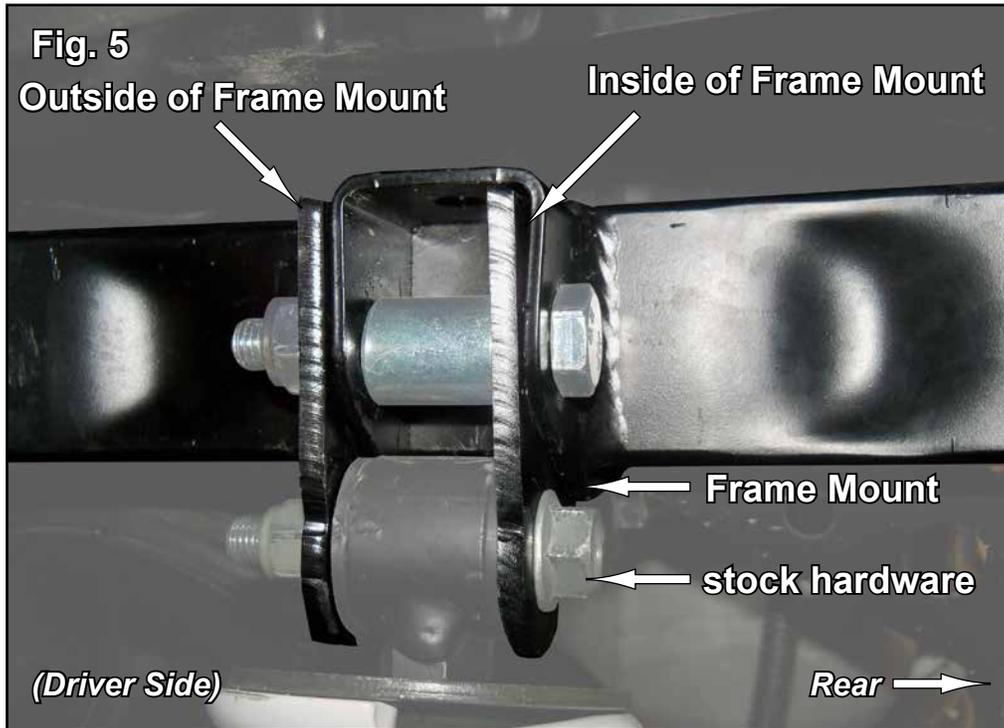


Fig. 5a



Driver Side Installed

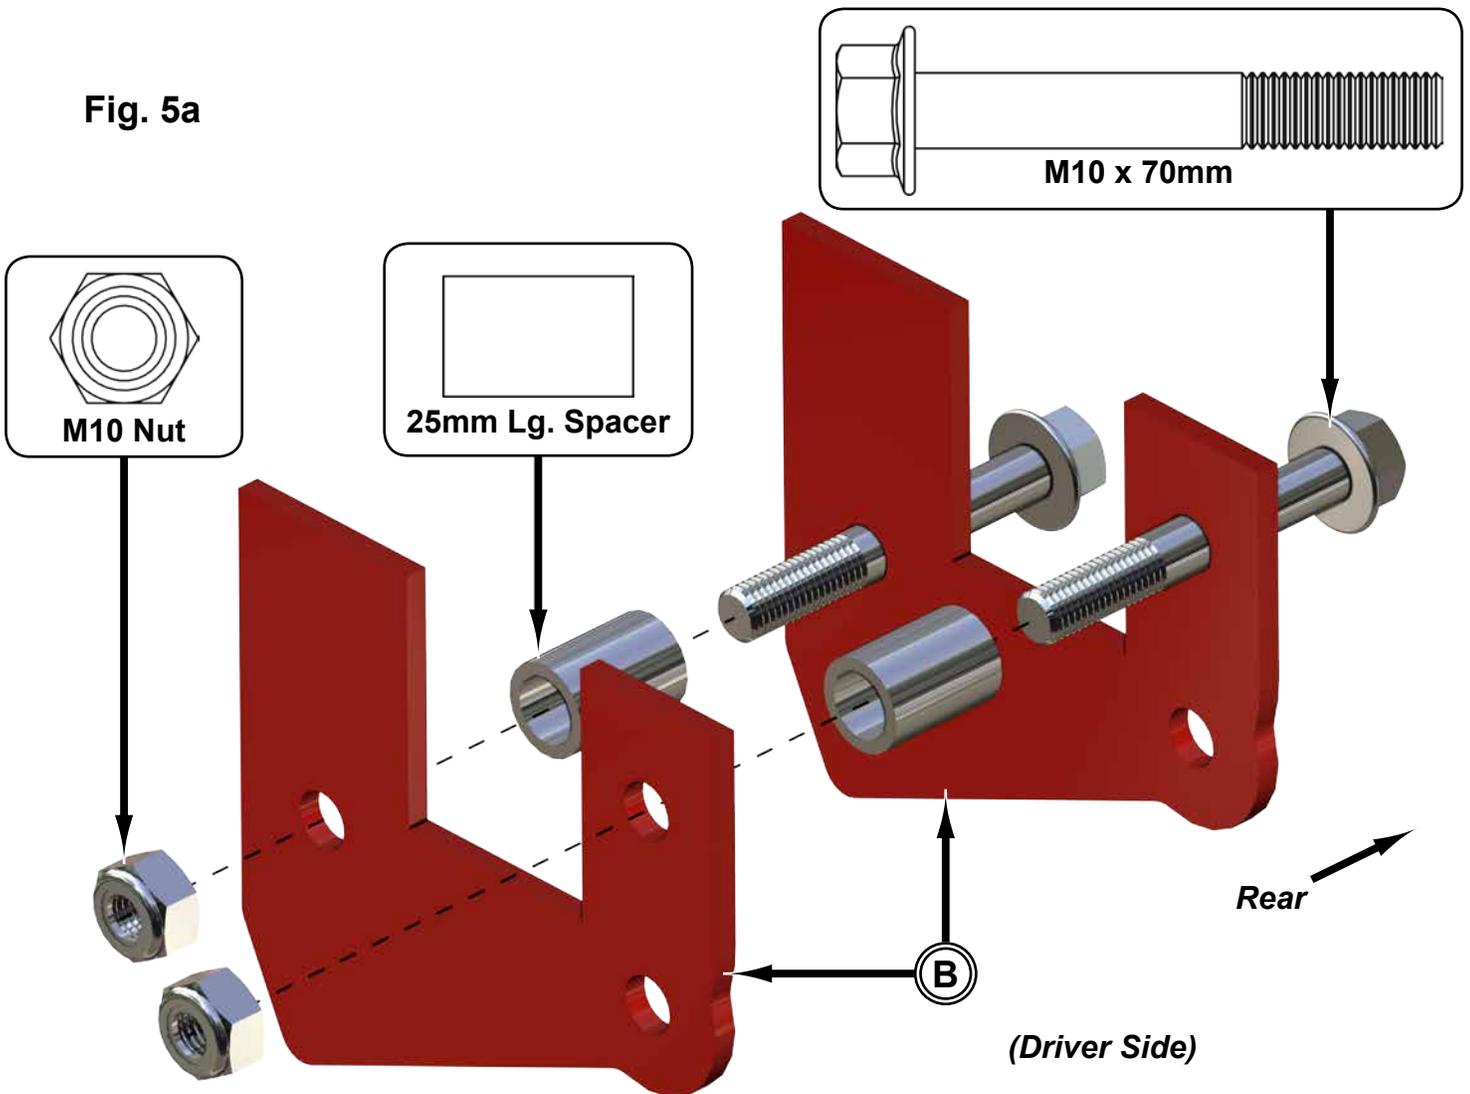