


Important:

Please read these instructions carefully prior to installation.

Please refer to your fitting instruction to ensure that the Roof Rack System is installed in the

correct location.

Check the contents of kit before commencing fitment and report any discrepancies. Place these instructions in the vehicle's glove box after installation is complete.

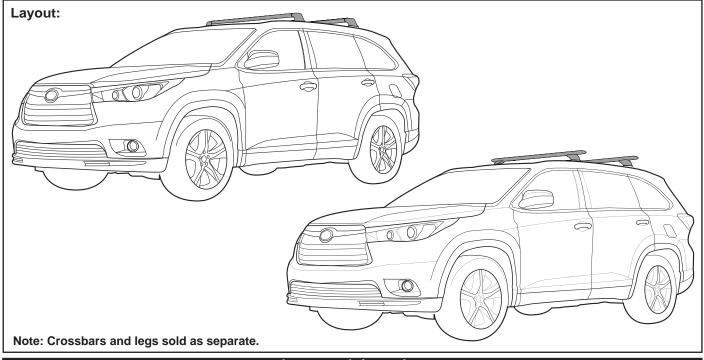

Important Information

1. 🔲	Check Part No./Kit is correct	3. □	Fit roof rack accessory
------	-------------------------------	------	-------------------------

2. Read through instruction before installing 4. Check and recheck all fasteners are secure

Maximum carrying capacity: 80kg (176lbs) including the weight of the rack system 5kg (11lbs). Note: Be sure to check Rhino-Rack website to see if you have the latest version of instructions before beginning installation.

Please refer to your vehicle manufacturers handbook for maximum carrying capacity. Always use the lower of the two figures. Load must be evenly distributed over the entire basket.

Warning: Do not attempt to fit the roof rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.

Use only non-stretch fastening ropes or straps.

Recommendations: It is essential that all bolt connections be checked after driving a short distance when you first install your roof racks. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof racks each time they are re-fitted. Always make sure to fasten your load securely. Please also ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible and must be entirely contained within the extents of the roof racks.

Caution: The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.

Off-road use:

The Roof Rack System may be used in off road applications, however a safety factor of 1.5 is enforced. That is, maximum permissible off road load is 53kg 117lbs). Although the crossbars are tested and approved to AS1235-2000, off-road conditions can be much more rigorous. Increasing the number of crossbars does not increase the vehicles maximum permissible roof loading.

Note for Dealers and Fitters:

It is your responsibility to ensure these fitting instructions are given to the end user or client.

Rhino-Rack 3 Pike Street, Rydalmere,


(Fax) (02) 9638 4822


NSW 2116, Australia. (Ph) (02) 9638 4744


Document No: R1338 Fit TIme: 30min Prepared By: Kayle Everett Issue No: 01 Authorised By: Chris Murty Issue Date: 13/04/2017


These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.




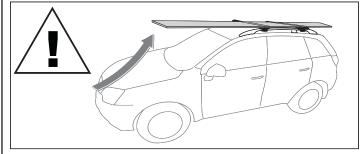


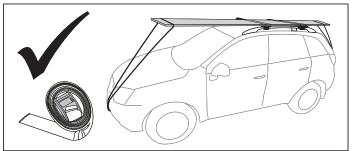

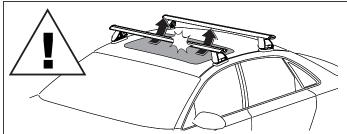

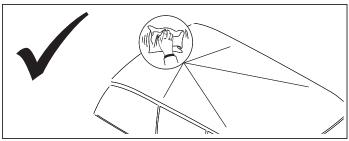


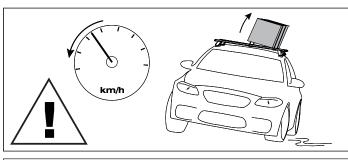


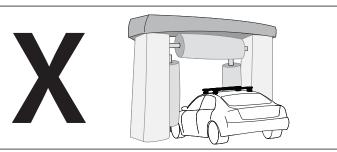




supported on the ground
to help support tent. Take
extreme caution when
climbing heights above
1.2m/4ft.

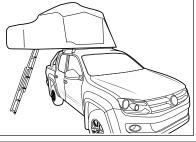

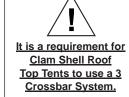


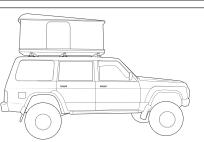

When these roof racks are to be used on a vehicle that is driven off sealed roads, the maximum roof rack load rating should be *divided* by 1.5. Do not forget to subtract 5kg from your maximum carrying capacity due to the weight of the crossbars and legs.





80kg/176lbs load rating (Urban road) 53kg/117lbs load rating (Off road - 80kg / 1.5)

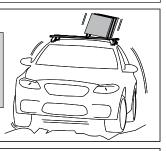

WARNING! Important Load Carrying Instructions

With utility vehicles, the cabin and the canopy move independently. Roofracks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and canopy. Instead, rigidly fix to either the cabin roofracks or the canopy roofracks.

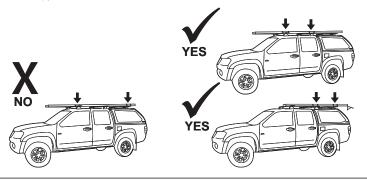


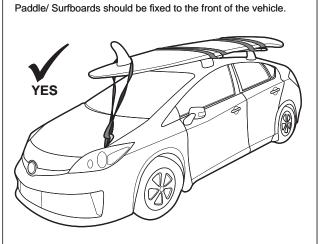



Parts List


Item	Component Name	Qty	Part No.
1	M6 x 30mm Hex Setscrew	4	B202
2	M6 Spring Washer	4	W004
3	M6 x 16mm Flat Washer	4	W031
4	M8 x 40mm Socket Screw	8	B162T
5	M8 Spring Washer	8	W019
6	M8 Flat Washer	8	W043
7	7mm x 4mm O-Ring	8	C299
8	Front Left Mount Pad	1	M391
9	Front Right Mount Pad	1	M392
10	Rear Left Mount Pad	1	M393
11	Rear Right Mount Pad	1	M394
12	Left Pad Mount Skirt	2	M395
13	Right Pad Mount Skirt	2	M396
14	Mounting Pad Washer	8	C588
15	6mm Hex Allen Key	1	H009
16	M6 Washer (used on cover plate)	4	W003
17	Cover Plate	4	M126
18	Fitting Instruction	1	R1338

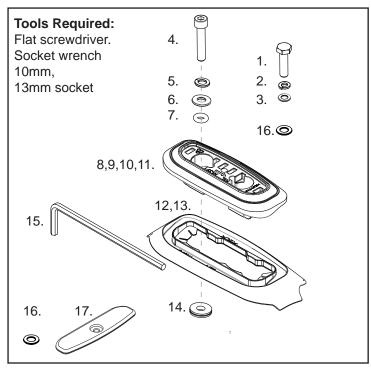


Instructions

Remove the roof trim covers with a flat blade screwdriver carefully. Remove all brackets, bolts and washers using a 13mm socket. Store the covers and attachment hardware for future use if needed.

NOTE: The existing bolts and washers are not used to fit the roof rack mounting pads.

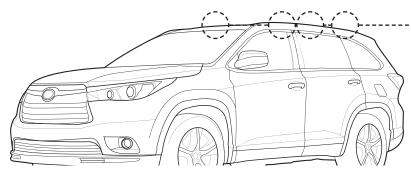


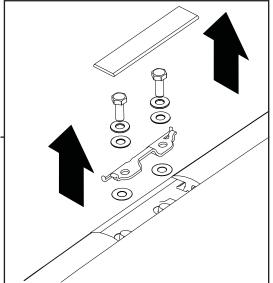


2


Place the foam covered mounting pad washers (item 18) over the plastic tubes in the roof channel. Make sure they are fitted neatly around the plastic tubes.

NOTE: Failure to fit the foam covered copper washers will result in water leaks.

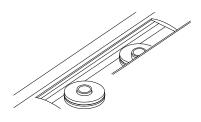



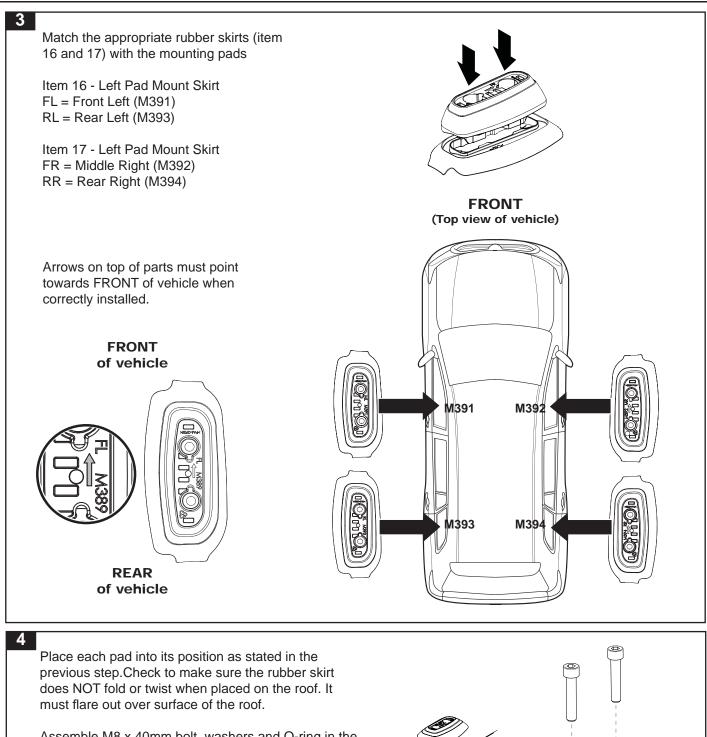

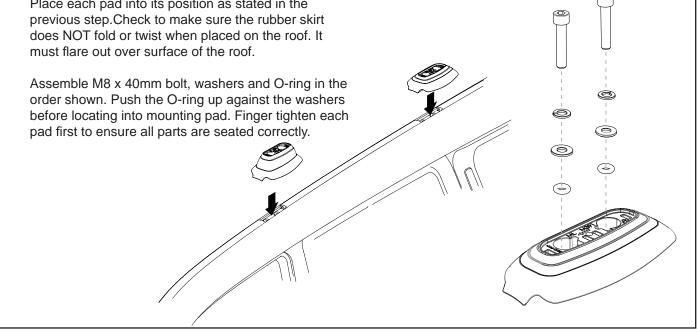



5

Tighten all M8 bolts using the 6mm allen key supplied.

Recommended tightening torque 9-11 Nm. DO NOT OVER TIGHTEN.

