

SETUP GUIDE

Phantom Fully Adjustable Shocks

PRELOAD NUT

- Cranking down will stiffen Springs and raise machine; use included Spanner Wrench.

SPRINGS

- Contact SuperATV for different Spring options.

REBOUND ADJUSTOR

- Counter Clock Wise softens Shock (holds Shock down longer).
- Clock Wise stiffens Shock (holds Shock down shorter).

COMPRESSION ADJUSTOR

- Counter Clock Wise softens Shock.
- Clock Wise stiffens Shock.

 Do not set Compression Adjustor to full clockwise position. Shock failure will occur.

NITROGEN FILL VALVE

- More gas results in stiffer compression.
- Less gas results in softer compression.



**Do not use needle valve gauge (tire gauge).
Schrader Valve tool must be used.**



[illegible]

- Inspect Shocks before riding.
- Rinse mud and debris away after riding. **DO NOT USE A HIGH PRESSURE WASHER.** Standard garden hose is suitable.

- Shock servicing and rebuilding requires special tools and knowledge. SuperATV recommends using a trained professional or service center. Depending on usage, SuperATV recommends servicing every year for racing applications, and every (2) years under normal riding applications.
- Use synthetic medium #10 shock oil.

- Shocks include a (1) year free of manufacturing defects warranty.

SuperATV® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Thank You
For Choosing

For Choosing
SUPERATV.COM