

SPL COMPRESSION ROD BUSHINGS



Press out stock bushing using appropriate bushing press and driver.

For reference, the following Sears/Craftsman sockets will work as the driver and receiving cup:

Sears P/N 47784 1-11/16" socket

Sears P/N 47793 2 3/8" socket

Check and clean the bore, file down any nicks in the bore as necessary.



Measure bushing bore of knuckle and measure diameter of new bushing with caliper. Confirm that new bushing is between 2/1000 – 4/1000 inch larger than the bore.

Using a hammer, lightly start the bushing into the bore, making sure bushing is square with the bore. Use press to continue pressing new bushing into compression rod.