Polaris RZR 900 XP/ 1000 XP Head Gasket Instructions

****Read these instructions carefully and completely before attempting installation

- 1. Use the supplied dowel pins between the cylinder head and cylinder ONLY. The Sparks Racing head gasket is much thicker than stock and requires the longer dowels.
- 2. When you're installing the head gasket, it is extremely important the figure-eight "combustion ring" is seated in the middle layer of the head gasket (if you spread the layers apart, you can see the relief where is sits). You may use a small amount of liquid gasket or spray adhesive to ensure the ring stays in place throughout the installation of the cylinder head.****Incorrect placement of this ring will result is extreme damage to the cylinder and head****

Sparks Racing – 11200 Pitts Ave, Bakersfield, CA 93306- Phone: 661-872-4343 Email:tech@sparksracing.com – Website: www.sparksracing.com