

BLOW OFF VALVE KIT

User Guide

PARTS LIST

96030008

- 1 BLOW OFF VALVE
- 1 BREATHER FILTER


PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

2191 MENDENHALL DRIVE, NORTH LAS VEGAS, NV 89081
800-992-4993

WWW.DYNOJET.COM



USER INSTRUCTIONS

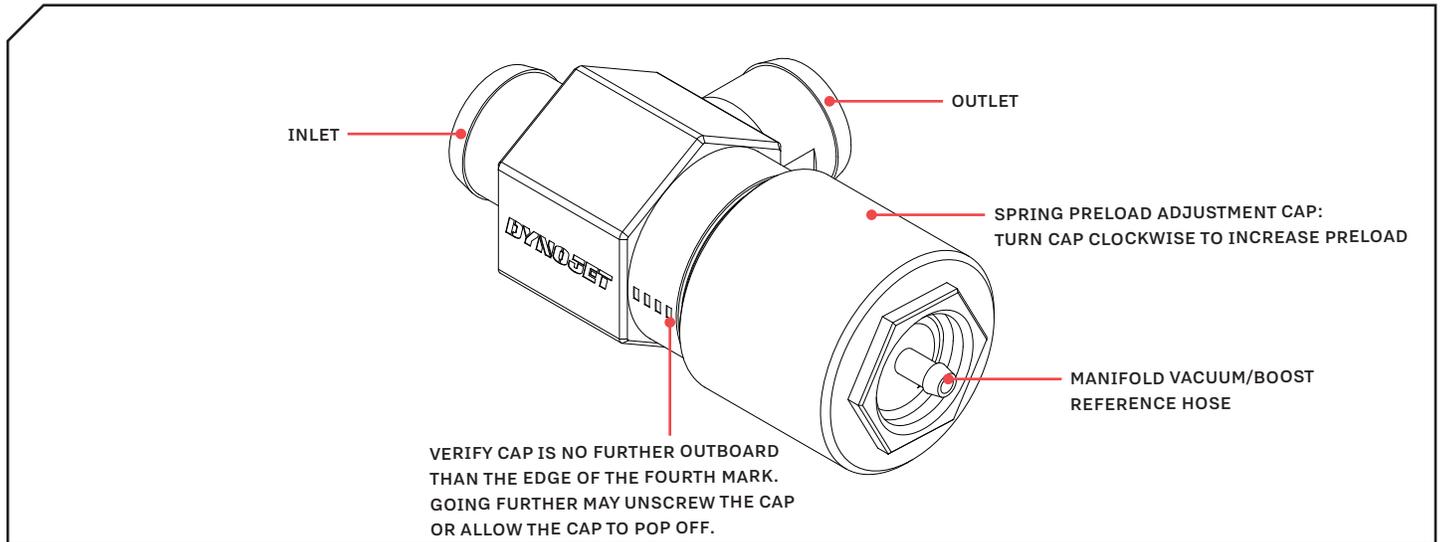

- 1 If the blow off valve (BOV) is popping off under heavy throttle, tighten preload until it only pops off when the throttle is released. If it is not popping off, reduce preload.

Turn cap clockwise to increase preload.

- 2 Start with the BOV adjuster cap covering all four hash marks as shown and adjust from there. There will be an audible air releasing/pssshhh noise if it is functioning properly.

Verify the cap is no further outboard than the edge of the fourth mark. Going further may unscrew the cap or allow the cap to pop off.

- 3 To test, apply full throttle under load and let off the throttle quickly.

BOV installed.

Note: Always install a filter or plumb into the intake in dirty, dusty, or wet environments.

PUSH THE LIMIT.

WWW.DYNOJET.COM

© 2021 DYNOJET RESEARCH ALL RIGHTS RESERVED