

LATCH EXTENDER

QUALIFIER




WARNING:

- Using the Latch Extender increases the leverage on your RV door latch. Make sure to unlock both the dead bolt and door latch prior to using the Latch Extender. Failure to do so could result in damage to the locks and/or latch and could lead to possible injury due to loss of balance or fall.
- The Latch Extender cannot be used on motorized vehicles.

STEP 1

1-1/2" clearance above the center of the dead bolt lock and 16-3/8" clearance below the dead bolt lock is required for the Latch Extender to fit.

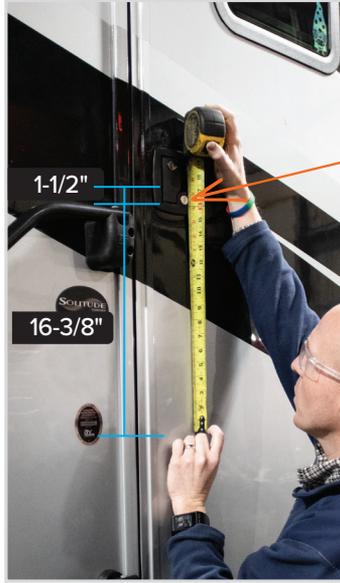

Dead Bolt Lock



Outer edge of the Latch Extender

STEP 2

A total width of 5-3/4" clearance is needed from the edge of the door to the outer edge of the Latch Extender.

STEP 3

2-5/8" off the face of the latch and 3-1/2" off the door are required to ensure that when the door is open, the Latch Extender doesn't collide with the sidewall of the RV.



2-5/8" off the face of the latch

3-1/2" off the door



Above. Beyond. Always.

574-293-1581 | MORryde.com



Latch Extender
Qualifier & Installation
Instructions