



**Please ensure lid O-ring is correctly positioned to avoid pinch damage/seal failure before tightening in the shown direction prior to installation.**



**Failure to do so could result in loss of performance or damage to product**

**Please note: If there is a spare spring(s) included in this kit it is intended for use inside the valve when the ECU has been remapped.**