



Step 1
Remove the (4) screws securing the headlight bulb cover to the headlight, remove cover.



Step 2
Remove the factory bulb. Install the LED bulb. Fan out the LED's heat sink as seen above. ****Note:** The bulb's metal retaining bracket may need to be bent slightly in order to install the bulb.



Step 3
Connect the LED control box and plug the control box into the headlight connector. Place the control box and harness inside the headlight. Then reinstall the bulb cover.