


INSTALLATION MANUAL

118-M-SW COMMAND HQ

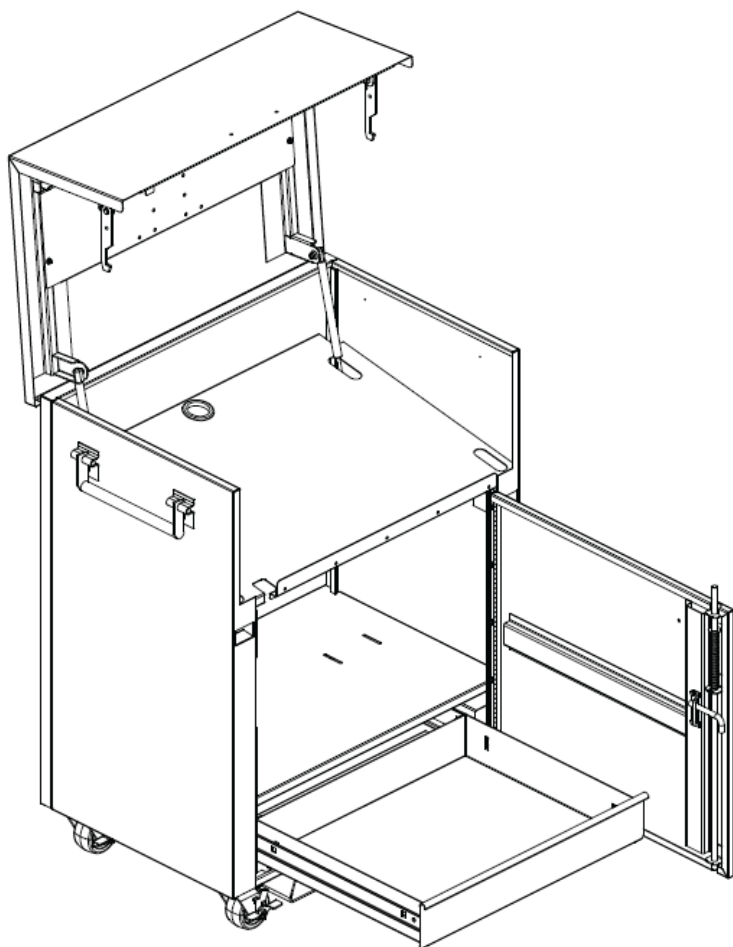

Contents

I. INSTALLING TV 4

II. WIRE HARNESS ROUTING 6

III. INSTALLING STRAP 6

NOTICE

ATTENTION: PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS AND WARNINGS BEFORE ASSEMBLING, INSTALLING OR USING THIS PRODUCT.

Tools Required

- 1/2" SOCKET
- 5/16" SOCKET
- SCREWDRIVER, PHILLIPS HEAD

Parts List

- | | |
|---------------------|--------|
| • UPS POWER BACK-UP | QTY. 1 |
|---------------------|--------|

BOLT KIT #32-1181


- | | |
|---------------------------------|--------|
| • PLASTIC HANDLES | QTY. 2 |
| • SCREW, #10-14 X 1/2" PLASTITE | QTY. 4 |
| • CABLE TIE 6" | QTY. 5 |
| • BOLT M4X12MM PHILLIPS HD | QTY. 4 |
| • LOCKWASHER 1/4" | QTY. 4 |
| • WASHER #10 | QTY. 4 |

TV SPECIFICATIONS


- 32" TV
- HxWxD – 17.5" x 29.13" x 3.25" max
- HDMI PORT (1Min.)

I. Installing TV


- a. Remove Mounting bracket by removing two #10-24 x $\frac{3}{4}$ " screws, Lock Washers and flat washers using a $\frac{5}{16}$ " socket, (SEE FIG. 1) set aside. Remember the way in which the bracket is mounted, this will aid you in re-attaching it after TV is installed.

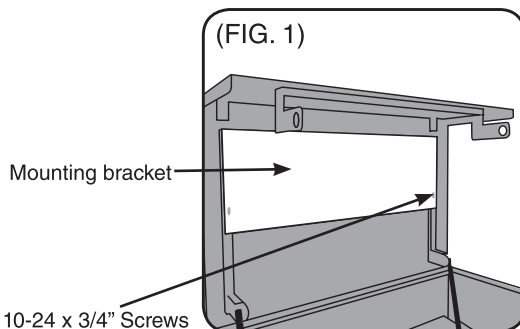

- b. Carefully set TV face down on a flat surface. (SEE FIG. 2)

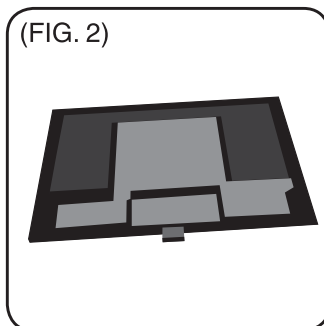


- c. Attach the Wiring Harness which includes HDMI and VGA cables, along with the power supply for the TV. (SEE FIG. 3) (VGA is optional if you have a TV with VGA input)

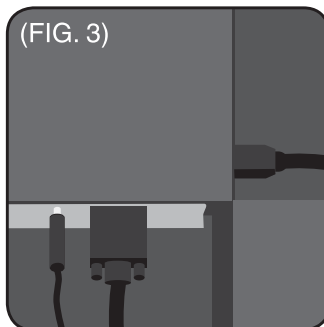

- d.** Place the Mounting Bracket, and align with the mounting holes on back of TV (SEE FIG. 4)

The "hook" on the mounting bracket should be positioned at the top of the TV

(FIG. 4)

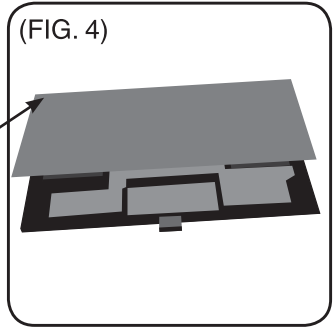


- e.** NOTE the direction that the Mounting Bracket is positioned on the back of the TV. Fasten the bracket to the TV using four M4 bolts, four 1/4" Lock Washers and four #10 Washers. (SEE FIG. 5)

10-24 x 3/4" Screws


The "hook" on the mounting bracket should face away from the TV as shown

(FIG. 5)

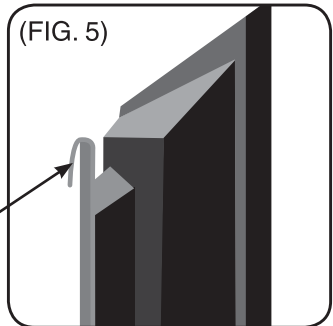


- f.** Using the help of a second person if needed, lift the TV and Mounting Bracket, and hang on the notch in the channel by the hooks on the Mounting Bracket. Re-attach the two screws, Lock Washers and Flat Washers previously removed. (SEE FIG. 6)

(FIG. 6)

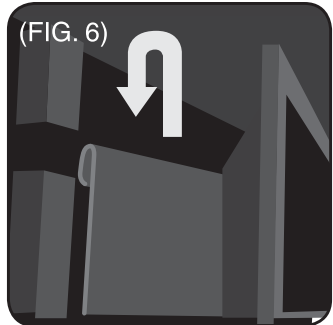




II. Wire Harness Routing

- a. The TV Power cord should be routed through the grommet, and over to the Power Pass in the middle section of the box. Cable ties have been included in the Bolt kit to help keep the cables and cords organized and out of the way. Couple the wiring harness to the TV cord as shown. This will help keep the wiring harness from getting in the way. (SEE FIG. 7)

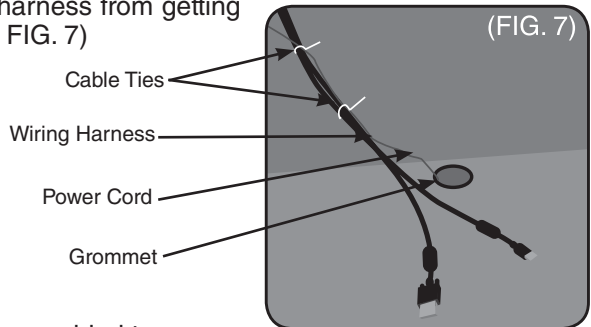

III. Installing Strap

- a. A Strap has been provided to secure the Power Supply. Simply route the strap through the slots in the middle section of the unit, and pull until snug. (SEE FIGURES 8, 9 and 10)

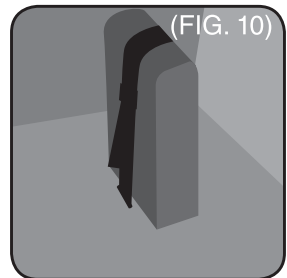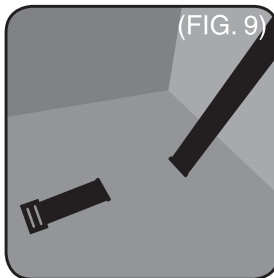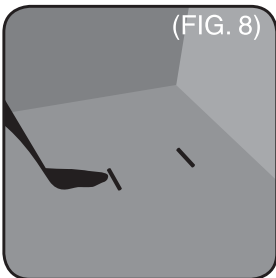


Notice: Any modification or unintended use of this product shall immediately void all manufacturer's warranties. Manufacturer disclaims all liability for injuries to persons or property resulting from any modifications to, or unintended use of this product.

IV. Drawer Removal and Caster Installation

IN ORDER TO INSTALL THE CASTERS, THE BOTTOM DRAWER WILL NEED TO BE REMOVED FIRST.


a. DRAWER REMOVAL

To remove a drawer, pull the drawer out until it stops. Notice the locking levers located inside the track that is attached to the drawer. Lift the left lever (A) while pressing down on the right lever (B) (See Figure 4), Pull the drawer clear on the slides.

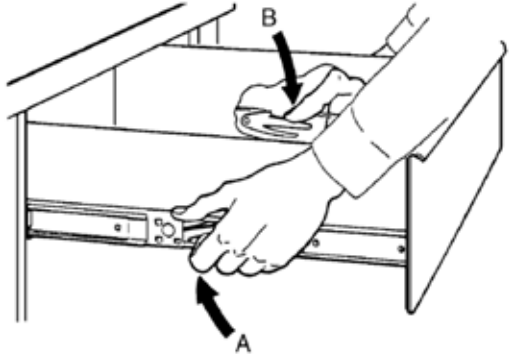

b. CASTER INSTALL

- Lift unit with forklift high enough to work at a comfortable height.
- Decide which end of the unit you will steer from. The side you select will have the swivel casters.
- Using bolt kit #32-0213 (carriage bolt, nuts and washers) tighten fasteners using the 9/16" socket with orientation as shown.

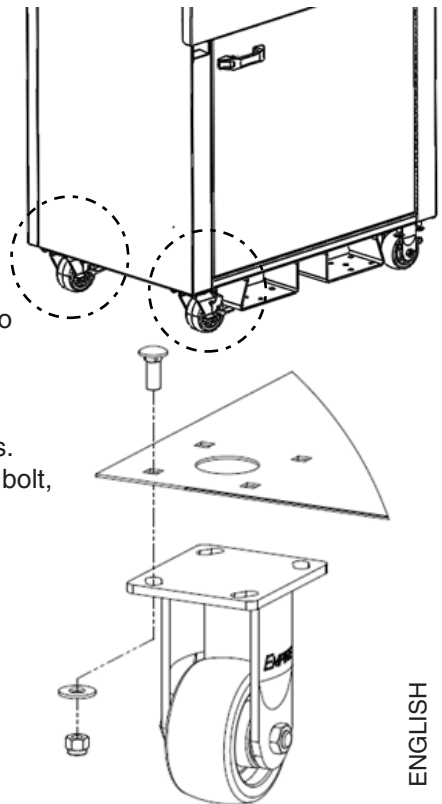

ATTN:Warranty Claims
420 E. Terra Cotta Avenue Crystal Lake, IL 60014
If you have any questions, please call toll free at 1-800-456-7856.