

Steeda Adjustable Pedal Stop

94-04 Mustang

Installation Instructions

Note: This product is not designed to work with the factory self adjusting clutch quadrant. It must be used with a nonadjustable clutch quadrant and an adjustable cable or firewall-mounted cable-adjuster.

The pedal stop sets the height of the clutch pedal at rest. The adjustable cable and/or firewall adjuster sets the cable tension and clutch release point. The clutch cable tension must be set **after** the pedal height is set.

1. Loosen the clutch cable and/or disconnect it so that the clutch pedal hang down close to the floor. This will give you room to work under the dash.
2. Set the parking brake and move the drivers seat back as far as possible to give you room to work.
3. Assemble the stop-bolt in the pedal stop bracket as pictured. Install the lock nut on the opposite side of the bracket from the bolt head, as pictured.
4. Install the stop bracket onto the pedal support bracket, under the dash. The pedal-stop bracket attaches to the pedal support bracket by the clutch pedal. It goes on the outside of the bracket, closest to the side of the car.

Tilt the stop-bracket to hook the edge of it underneath the rolled lip of the pedal support. Line up the notch in the stop-bracket with the bottom edge of the pedal support.

5. Line up the bottom hole in the stop-bracket with the bottom hole in the pedal support and install the short bolt. Insert the bolt from the outside with the washer and nut on the side closer to the center of the car.
6. Set the pedal height by turning the stop bolt. Tighten the nut to lock in the adjustment.

WARNING: Setting the pedal height too low will prevent the clutch from fully releasing, and premature wear may occur on the transmission synchronizers.

7. Adjust the clutch cable tension with your adjustable cable or firewall adjuster. Adjust the cable as normal, per the instructions from the cable adjuster manufacturer.

