



Silver Bullet

Throttle Body Spacer

PN 46-33017



Important!

Please verify the parts list and read all instruction steps before you begin installation.

Make	Model	Year	Engine
Ford	F-150 (ECOBOOST)	2011-2012	V6-3.5L (tt)

- Step 1.** A) Remove the OE intake tube from the vehicle using an 8mm nut driver. Disconnect the vent line from the intake tube.
- Step 2.** A) Loosen the clamp on the charge tube that is connected to the throttle body using an 8mm nut driver. Pull the tube off of the throttle body.
B) Remove the throttle body by removing the (4) 8mm bolts.
- Step 3.** A) Insert the new **Silver Bullet** throttle body spacer and provided gasket in between the throttle body and manifold as shown (The "Air-In" side should face the throttle body).
- Step 4.** A) Fasten the throttle body assembly using the (4) M6 bolt, lock washer, and a flat washer. Tighten the bolts to 10 Nm (89 lb/in).
B) Slide the charge tube back onto the throttle body and tighten the clamp using the 8mm nut driver.
- Step 5.** A) Reinstall the intake tube. Make sure to tighten all of the clamps and reconnect the vent hose.

Your install is now complete! Make sure to retighten all bolts and clamps after 100 miles of driving.

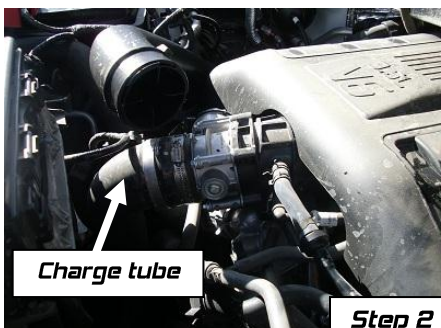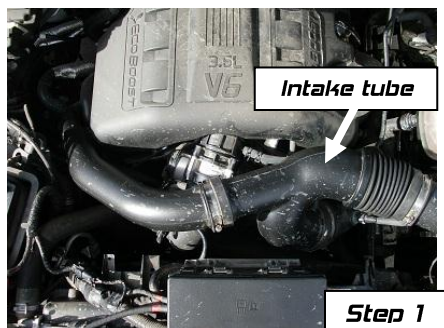

Parts List

- 1 **Silver Bullet** Spacer
- 1 Gasket
- 4 6mm x 75mm bolts
- 4 6mm flat washers
- 4 6mm lock washers

advanced FLOW engineering

252 Granite Street, Corona, CA 92879

Support: 951-493-7100

www.aFePower.com