



advanced FLOW engineering  
P.O. Box 1719  
Corona, CA 92878  
Support: 951-493-7100  
www.aFeFilters.com

## aFe Silver Bullet

Throttle Body Spacer

**Part Number**

**46-38005**


### Important!

Please verify the parts list and read all instruction steps before you begin installation.

**Make:** Toyota Trucks and SUV

Model	Year	Engine	Model	Year	Engine
Sequoia	07-10	5.7L	Tundra	07-10	5.7L

1. Remove engine sight cover.
2. Locate and remove the air inlet tube from air filter assembly and throttle body.
3. Remove four bolts from the throttle body. Lay throttle body to the side. Remove the OE screen gasket.
4. Install new o-ring into the manifold groove. Slip the Silver Bullet throttle body spacer into the intake manifold. Place new gasket between throttle body and throttle body spacer. Secure with the longer bolts and washers supplied. Torque the assembly to 8 ft/lbs.
5. Reinstall air inlet tube to throttle body and air filter assembly. Reinstall engine sight cover.

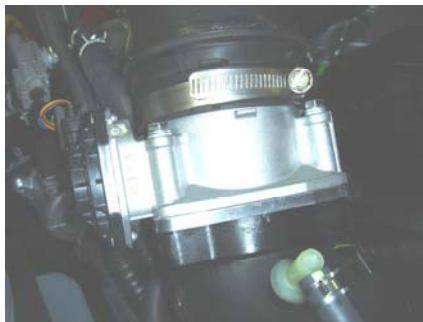

### Parts List

- 1 Silver Bullet Spacer
- 1 Gasket
- 1 Custom o-ring
- 4 6mm x 55mm bolts
- 4 6mm flat washers