



INSTALLATION INSTRUCTIONS

PART No.

FB22149

**Jeep® JT Gladiator
Mako Rear Bumper**



VIDEO AVAILABLE



REQUIRED TOOLS

18mm Socket
8mm Allen
4mm Allen

KIT CONTAINS

JT Gladiator Mako Rear Bumper
D-Rings
M12 Hex Nut
M12 Washer
M12 Lock Washer
M12 Counter Sunk Bolt
M6 Button Head Bolts
M6 Washers
M6 Lock Washers

QTY

1	
2	
6	
6	
6	
2	
4	
4	
4	

1) REMOVE YOUR EXISTING BUMPER

Remove your existing rear bumper according to the manufacturer's instructions. We show how to remove your factory bumper in another video on our website www.FishboneOffroad.com.



If your model has sensors, remove them in order, left to right, one through four.



2) PREP YOUR NEW BUMPER FOR INSTALL


With the Mako aside, re-install your trailer wiring plug and license plate lights into it.



If your model has sensors, pop out our included sensor plugs from the bumper, and re-install your sensors in order, and as they were oriented in the factory bumper.



Remove the factory clip nuts from the JT's frame.

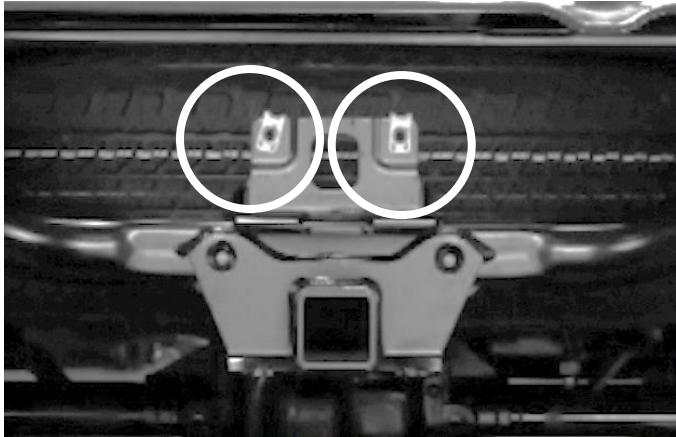

3) INSTALL YOUR BUMPER

Slide the Mako into the frame mounting holes.



With the included flat washers, lock washers and hex nuts, secure the bumper to the left and right frame mounts with an 18mm Socket.



With the included tapered bolts, washers, lock washers, and nuts, secure the center of the bumper to the center frame mount.

4) RECONNECT WIRES

With your bumper in place, reconnect your trailer wiring, license plate lights wiring, and the sensor plugs harness.





INSTALLATION INSTRUCTIONS

PART No.

FB22149

**Jeep® JT Gladiator
Mako Rear Bumper**

5) INSTALL YOUR LICENSE PLATE

With the included bolts, washers, and a 4mm Allen, secure your license plate to the center of the bumper.



6) INSTALL YOUR D-RINGS



7) ENJOY YOUR NEW FISHBONE OFFROAD BUMPER!