

INSTALLATION INSTRUCTIONS

Full Doors: for Polaris Ranger XP[®] 900

Item	Description	Item	Description
A	Passenger Side Door	B	Driver Side Door

DOOR-P-RAN900-001 Door installation shown



Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Thank You

For Choosing

SUPERATV.COM

Liability Statement

SuperATV's[®] products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV[®] and is not recommended. SuperATV's[®] products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV[®] to verify that they will work together.

Although SuperATV[®] has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV[®] urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV[®] products, user agrees that should damages occur, SuperATV[®] will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV[®], nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV[®]. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV[®] will warranty only parts provided by SuperATV[®]. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV[®]. SuperATV[®] parts and products are not warranted if item was not installed properly, misused, or modified.

DOOR-P-RAN900-002 Doors

Item	Description	Item	Description
A	Passenger Side Door	B	Driver Side Door





(kit contents continued)



Item	Description	Item	Description
C	Hinge Mount; passenger	H	Striker Assembly
D	Rear Support; passenger	J	Male Hinge; driver
E	Hinge Mount; driver	K	Strut Bracket; passenger
F	Rear Support; driver	L	Strut
G	Male Hinge; passenger	M	Strut Bracket; driver



(kit contents continued)



Cleaning:


- Do not use a dry cloth, or your hands, to wipe off Doors; Scratching will occur.
 - Do not use window cleaning fluids (Windex, 409, etc) or any solvents (gasoline, denatured alcohol, acetone, etc).
 - Never use abrasive cleaners, abrasive pads, or gritty cloths.
1. Thoroughly rinse Doors to float off dirt and mud.
 2. Using a soft cloth, or microfiber cloth, clean Doors with warm water and a gentle detergent. Baby shampoo or hand washing soap are recommended.
 3. To prevent water spots, use a chamois and blot Doors dry.

Remove Side Nets and hardware shown from both sides of machine
keep all components removed from machine

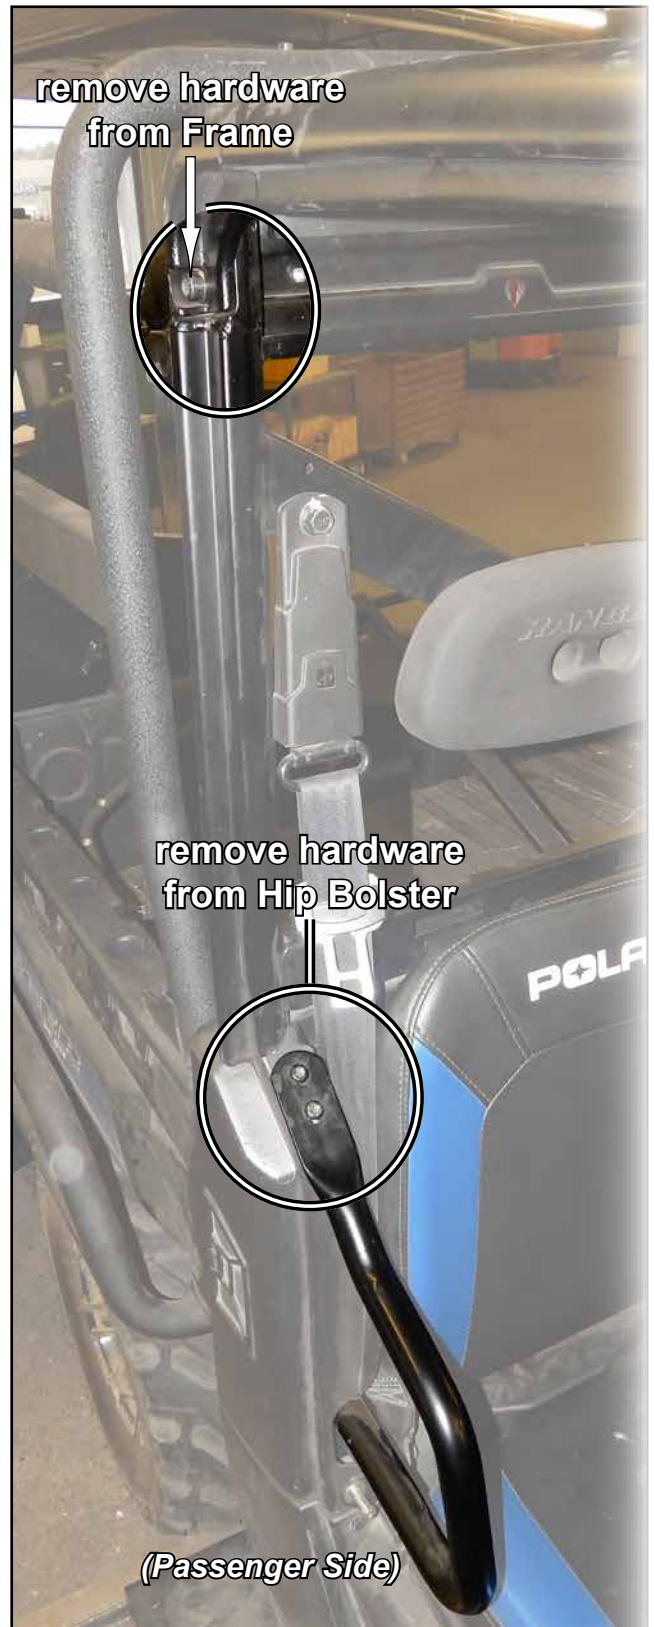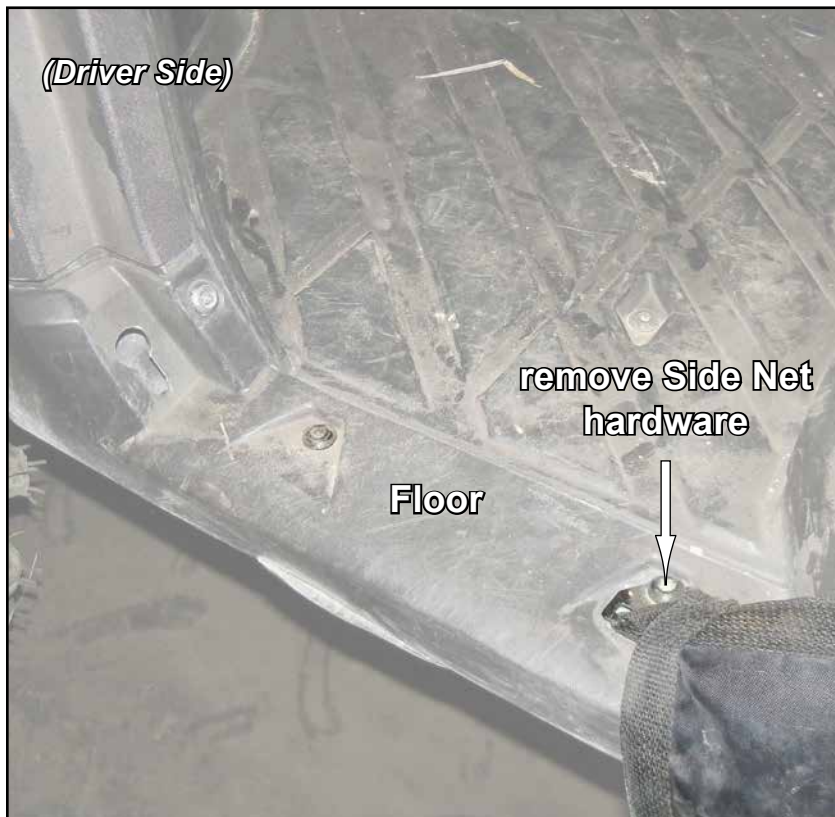


Do not tighten hardware completely unless noted.



- Install Striker Assembly (H) to Frame with hardware shown.
- Loosen Striker Pin as shown below.
- Repeat for opposite side.

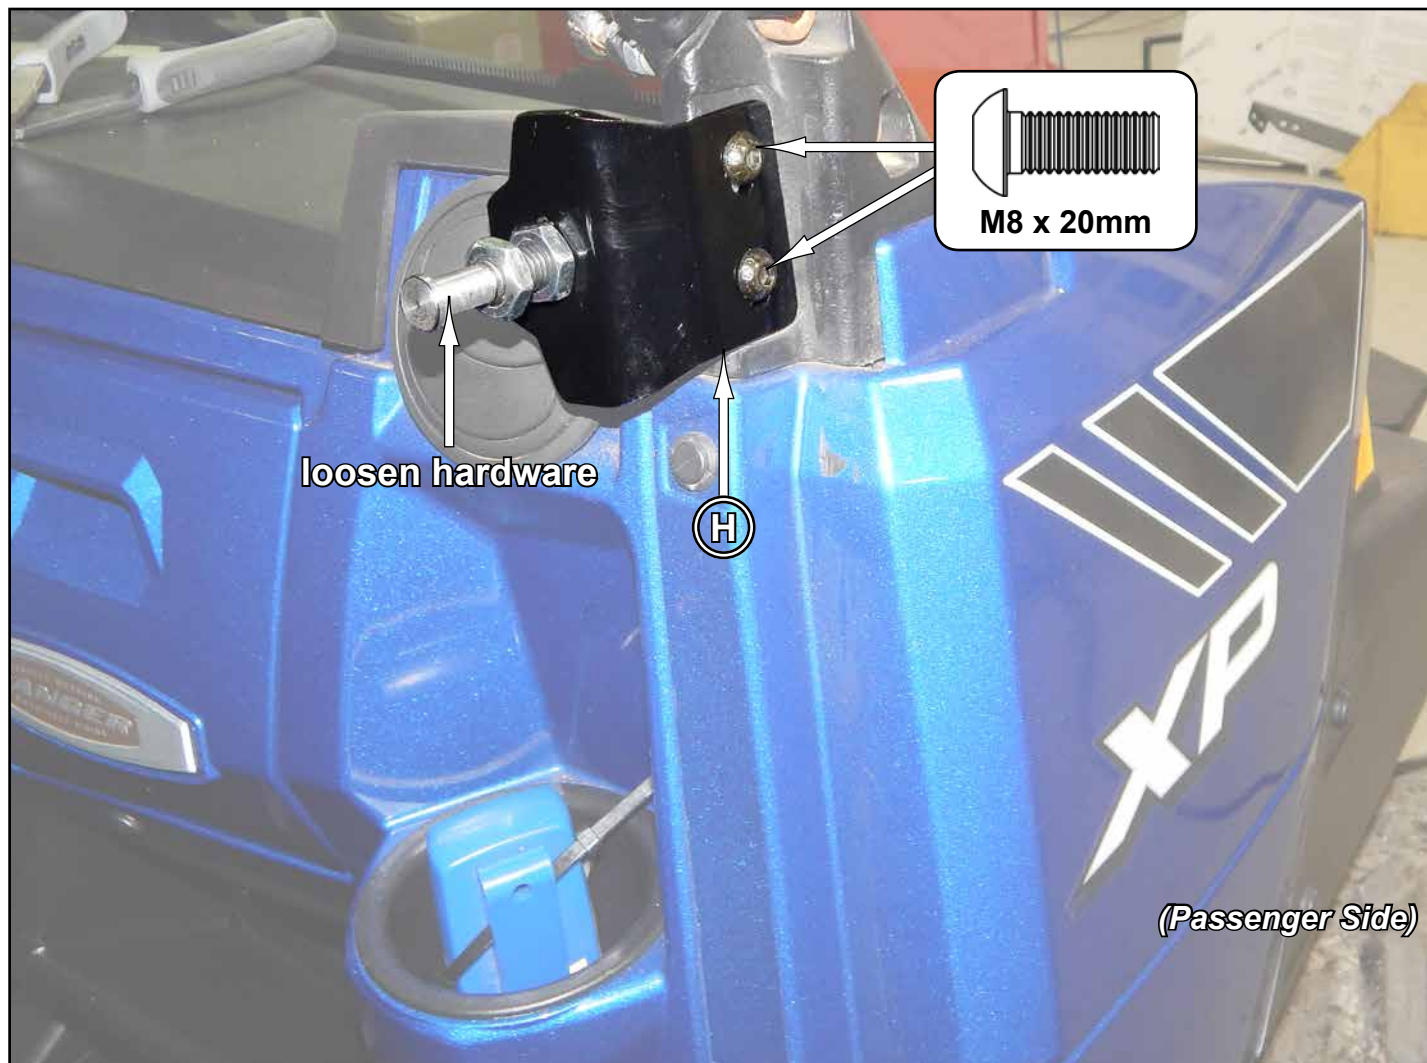

- Install Hinge Mounts (G) to Hinge Mount (C) and Rear Support (D) with hardware shown.
- Repeat for driver side components.

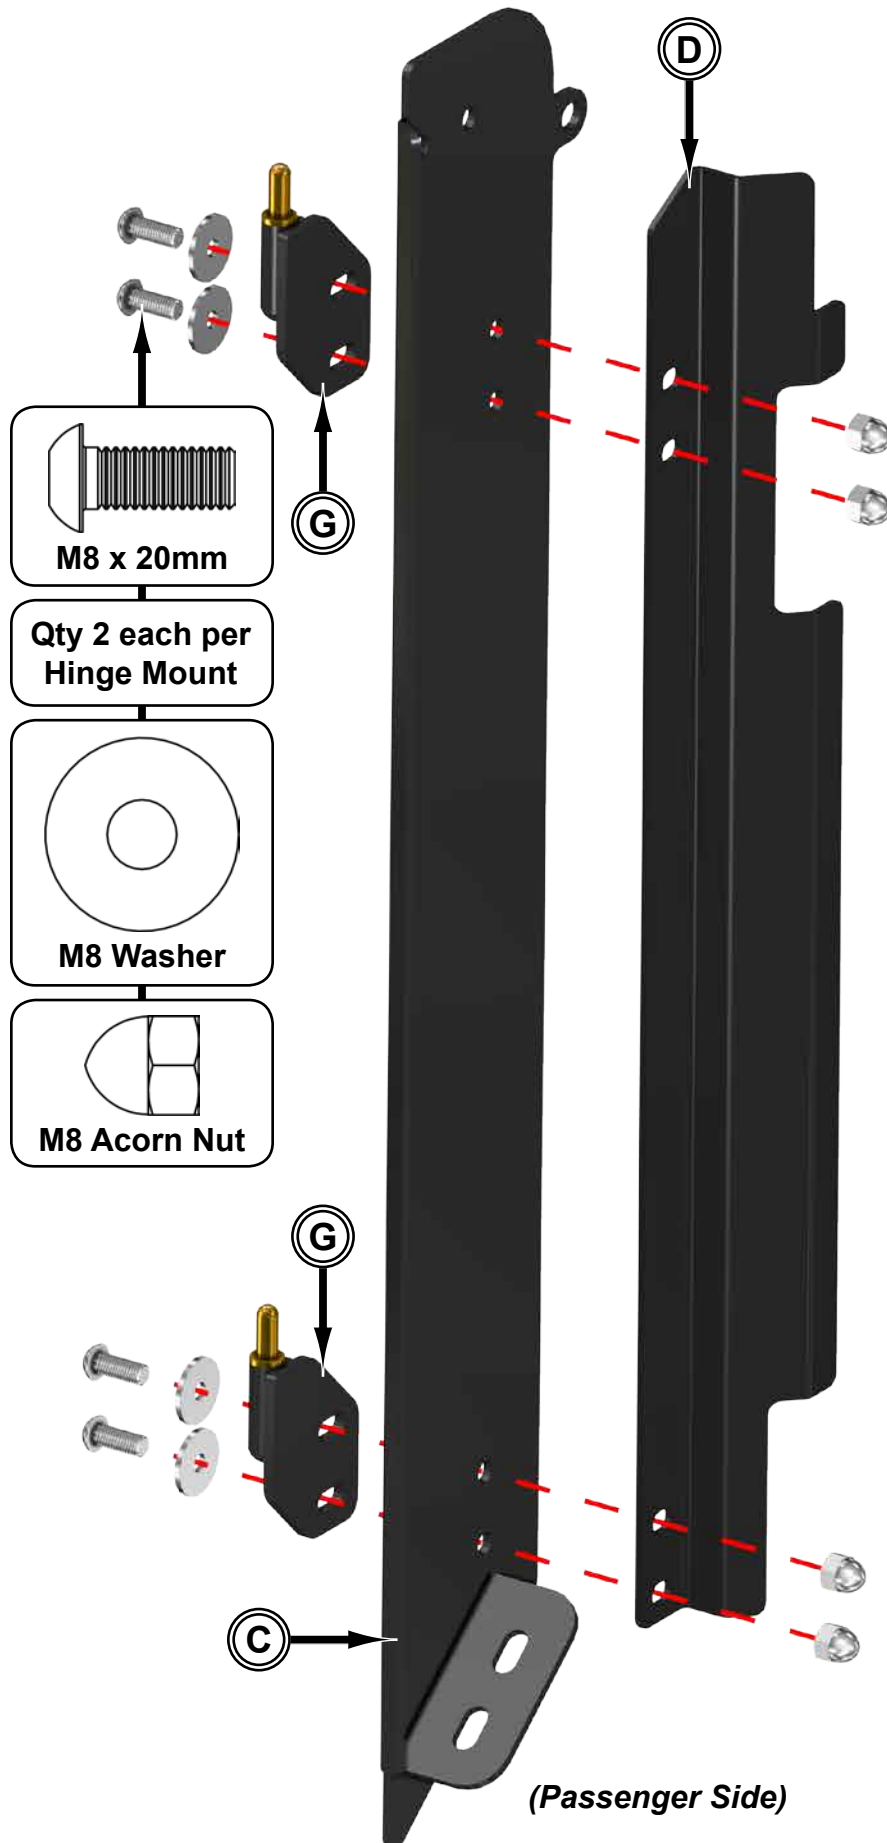


- Install Hinge Mount (C) to machine with stock hardware as shown.
- Install Strut Bracket (K) to Hinge Mount (C) with hardware shown.
- Install Strut (L) to Strut Bracket (K). Secure with hardware shown.
- Repeat for opposite side.

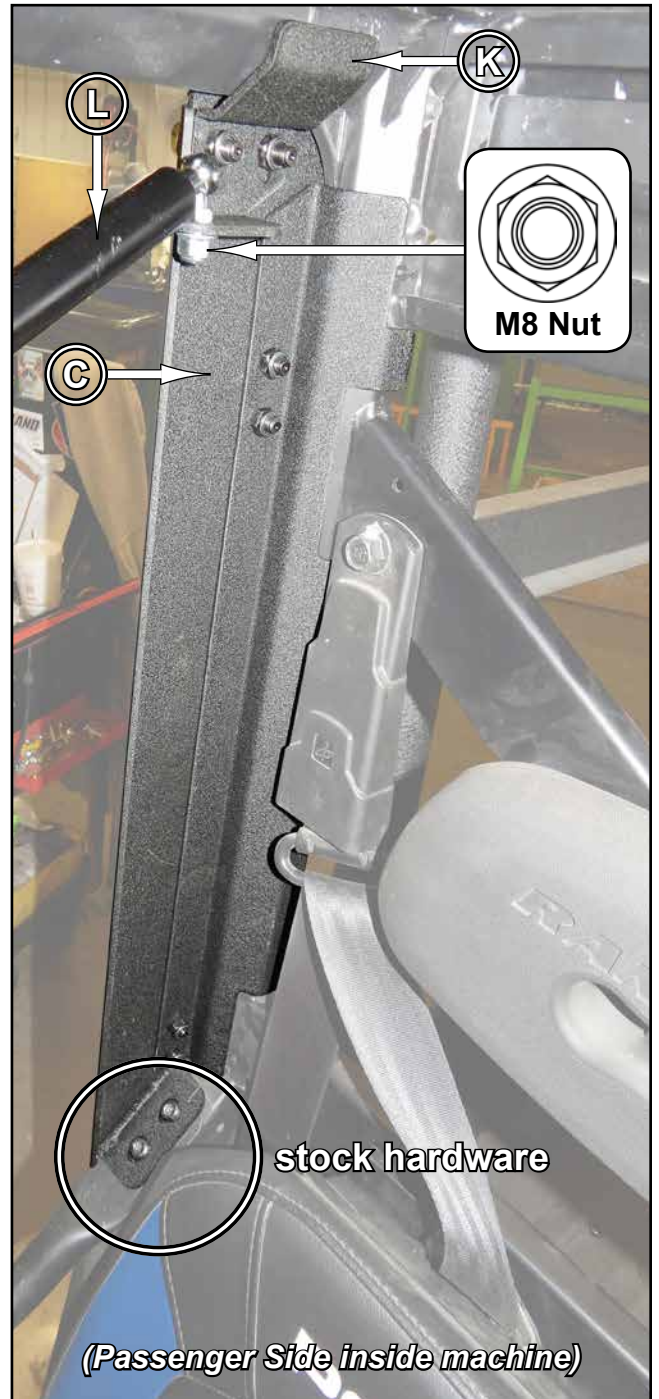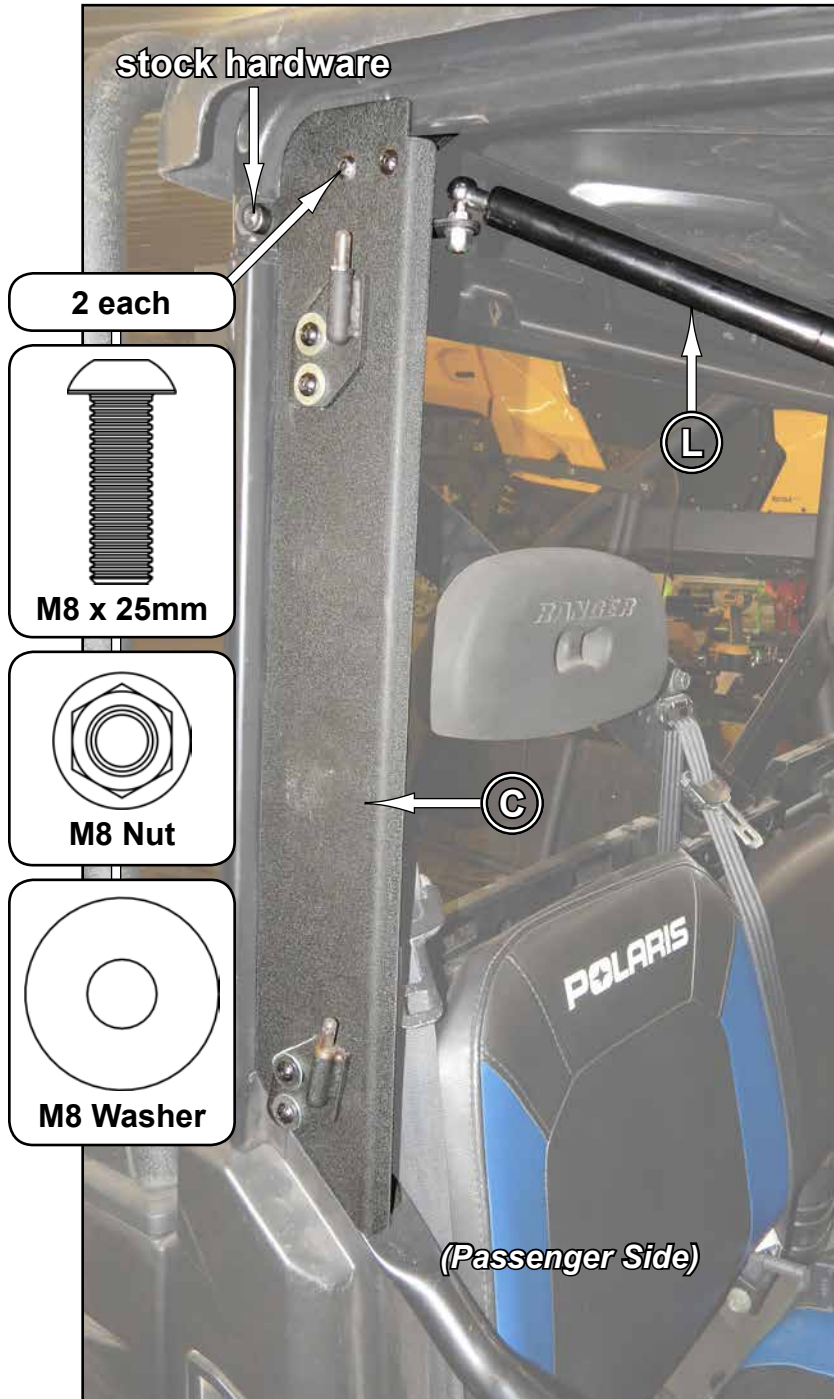

- Install provided Gasket to Hinge Mount (C).
- Repeat for opposite side.



- Install Passenger Side Door (A) to Male Hinges (G) as shown.


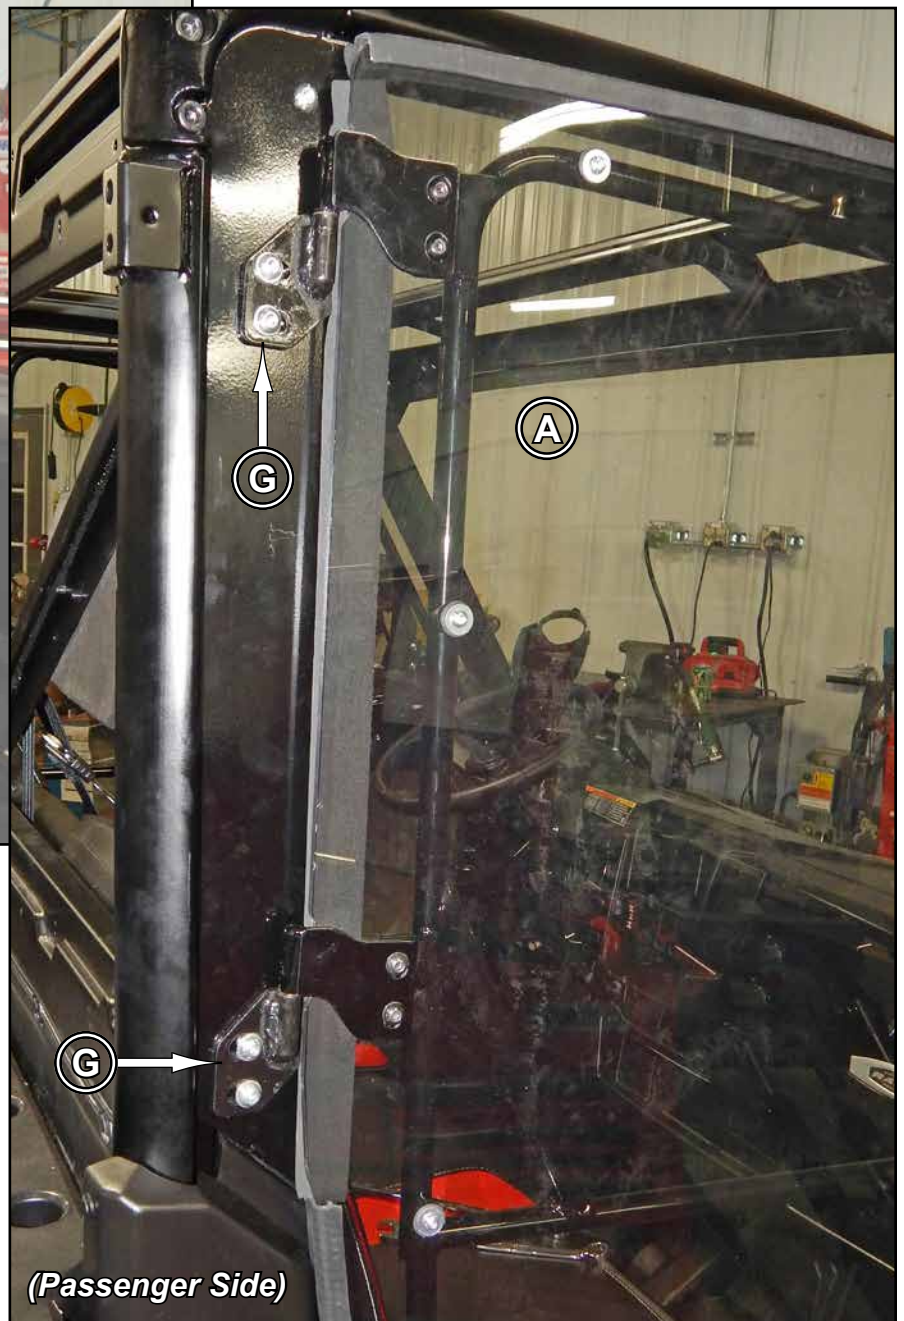


- Secure Strut (L) to Driver Door (B) with hardware shown.



- Engage Latch and align Driver Door (B) to machine.
- Tighten all hardware completely.
- Repeat steps for opposite side.

- Install Mirrors to Doors with hardware shown.
- Tighten hardware completely.

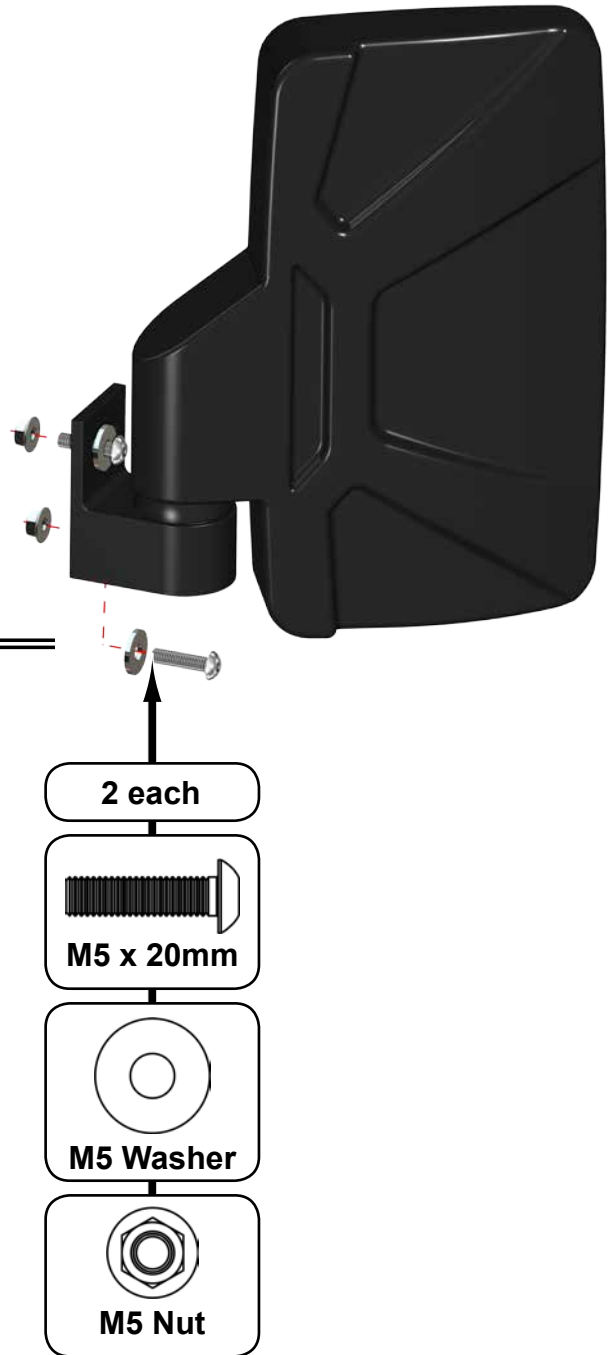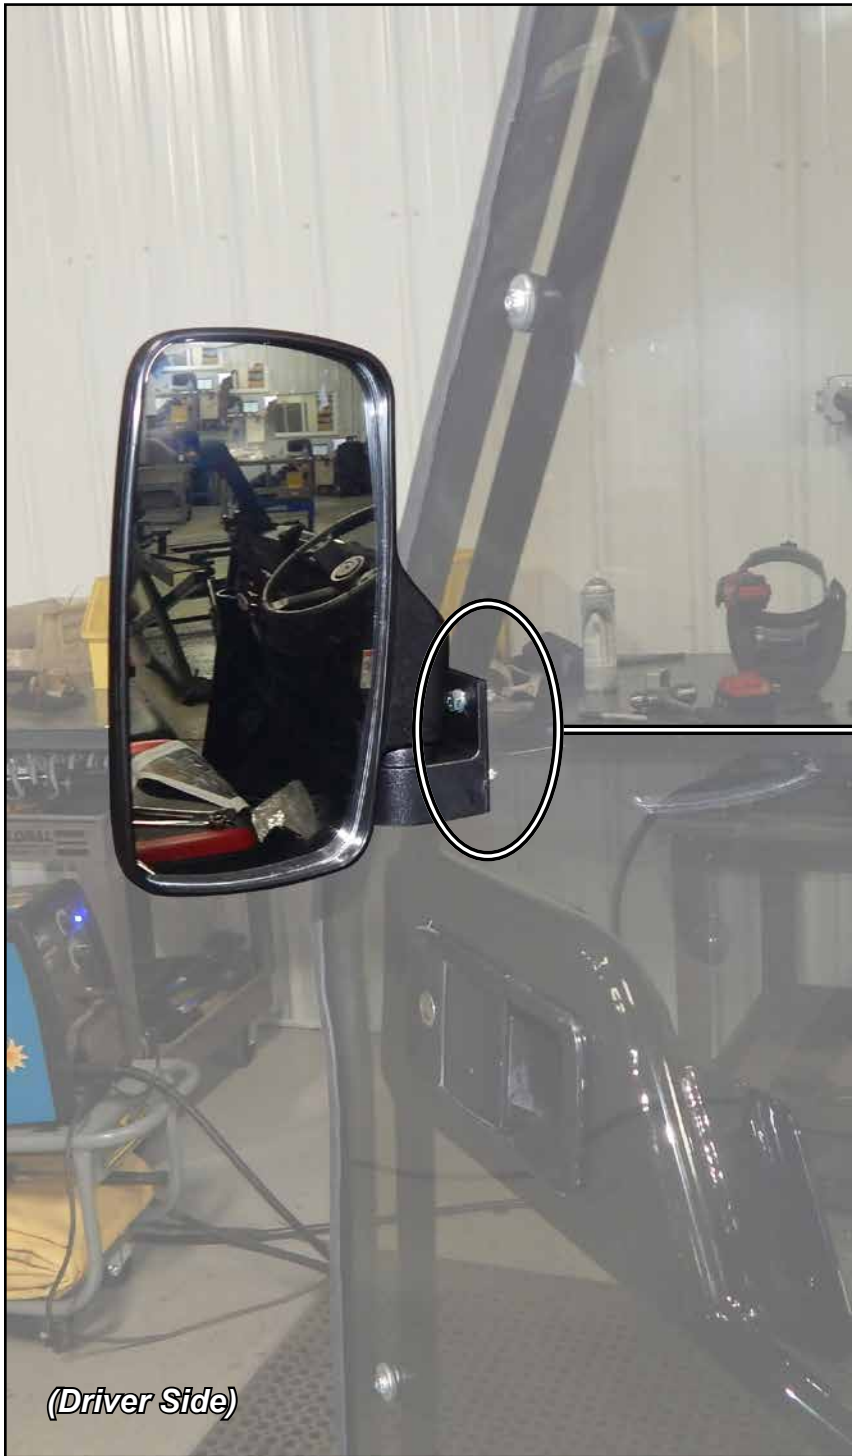

INSTALLATION INSTRUCTIONS

Rear Full Doors: for Polaris Ranger Crew[®] XP 900

Item	Description	Item	Description
A	Passenger Side Door	B	Driver Side Door

DOOR-P-RAN9004-001 Door installation shown



DOOR-P-RAN9004-001 Doors

(kit contents continue on following pages)

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Thank You

For Choosing

Liability Statement

SuperATV's[®] products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV[®] and is not recommended. SuperATV's[®] products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV[®] to verify that they will work together.

Although SuperATV[®] has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV[®] urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV[®] products, user agrees that should damages occur, SuperATV[®] will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV[®], nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV[®]. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV[®] will warranty only parts provided by SuperATV[®]. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV[®]. SuperATV[®] parts and products are not warranted if item was not installed properly, misused, or modified.

DOOR-P-RAN9004-002 Doors

Item	Description
A	Passenger Side Door

Item	Description
B	Driver Side Door




(kit contents continued)



Item	Description	Item	Description
C	Hinge Mount; passenger	H	Striker Assembly
D	Rear Support; passenger	J	Male Hinge; driver
E	Hinge Mount; driver	K	Strut Bracket; passenger
F	Rear Support; driver	L	Strut
G	Male Hinge; passenger	M	Strut Bracket; driver

(kit contents continued)




12x

M8-1.25 x 25mm Lg.



8x

M8-1.25 Nylock Nut

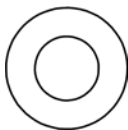

12x

M8 Washer



8x

M8 Acorn Nut

Cleaning:

- Do not use a dry cloth, or your hands, to wipe off Doors; Scratching will occur.
 - Do not use window cleaning fluids (Windex, 409, etc) or any solvents (gasoline, denatured alcohol, acetone, etc).
 - Never use abrasive cleaners, abrasive pads, or gritty cloths.
1. Thouroughly rinse Doors to float off dirt and mud.
 2. Using a soft cloth, or microfiber cloth, clean Doors with warm water and a gentle detergent. Baby shampoo or hand washing soap are recommended.
 3. To prevent water spots, use a chamois and blot Doors dry.

Rear Removal: Remove components shown from both sides of machine.
- keep all components removed from machine -




Rear Removal continued:




Do not tighten hardware completely unless noted.


- Install Striker Assembly (H) to Frame with hardware shown.
- Loosen Striker Pin as shown below.
- Repeat for opposite side.

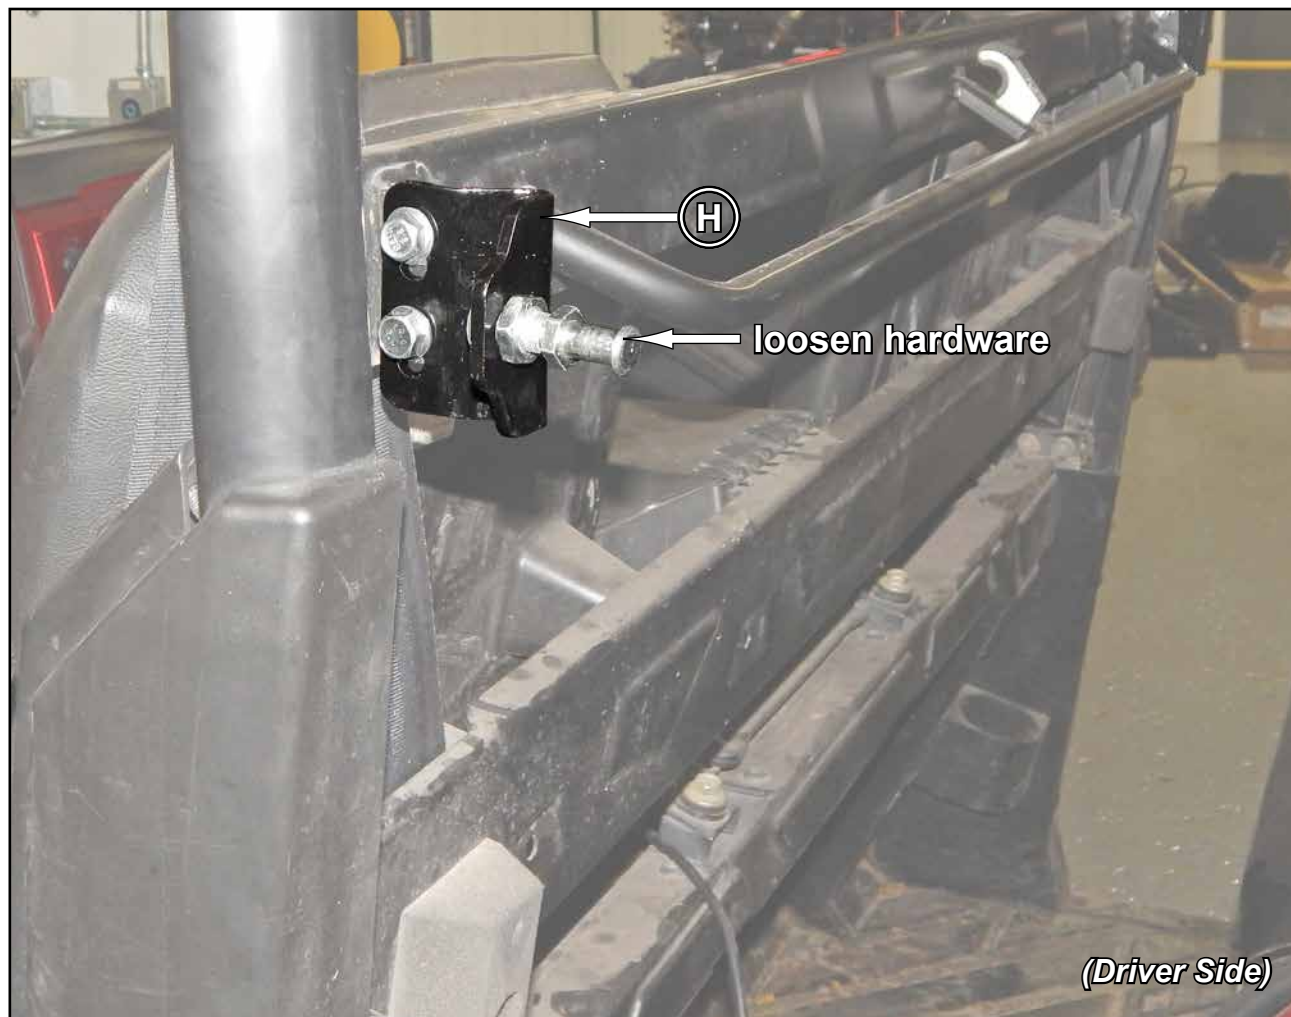

- Install Hinge Mounts (G) to Hinge Mount (C) and Rear Support (D) with hardware shown.
- Repeat for driver side components.

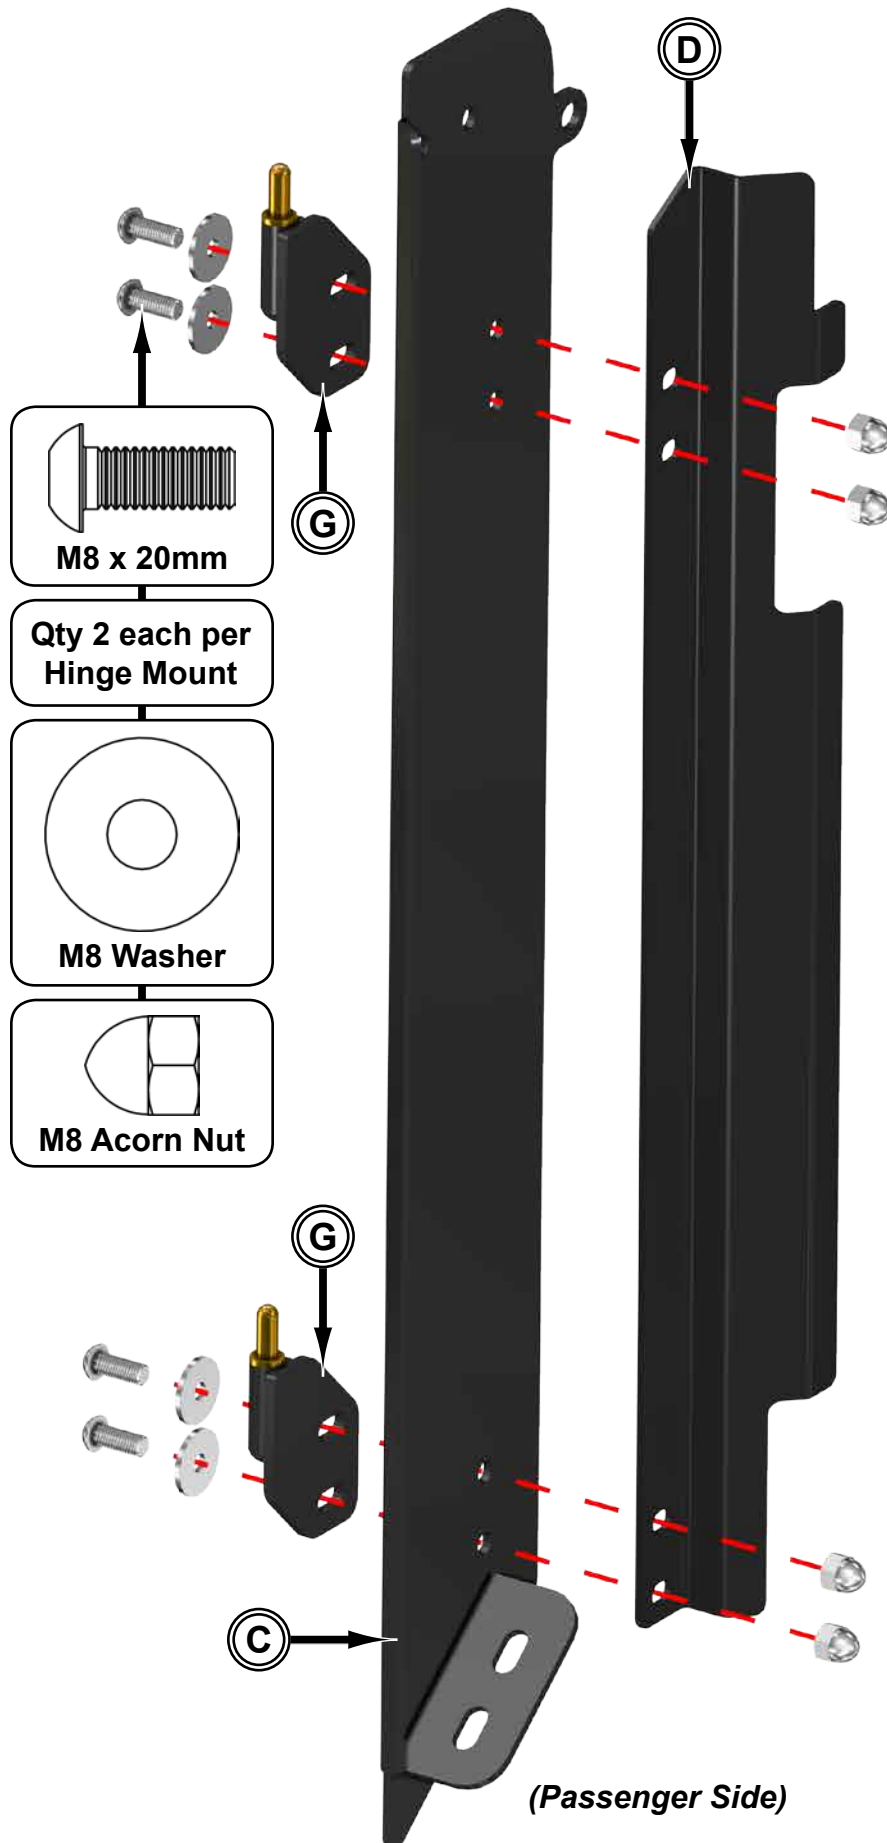


- Install Hinge Mount (C) to machine with stock hardware.
- Install Strut Bracket (K) to Hinge Mount (C) with hardware shown.
- Repeat for opposite side.

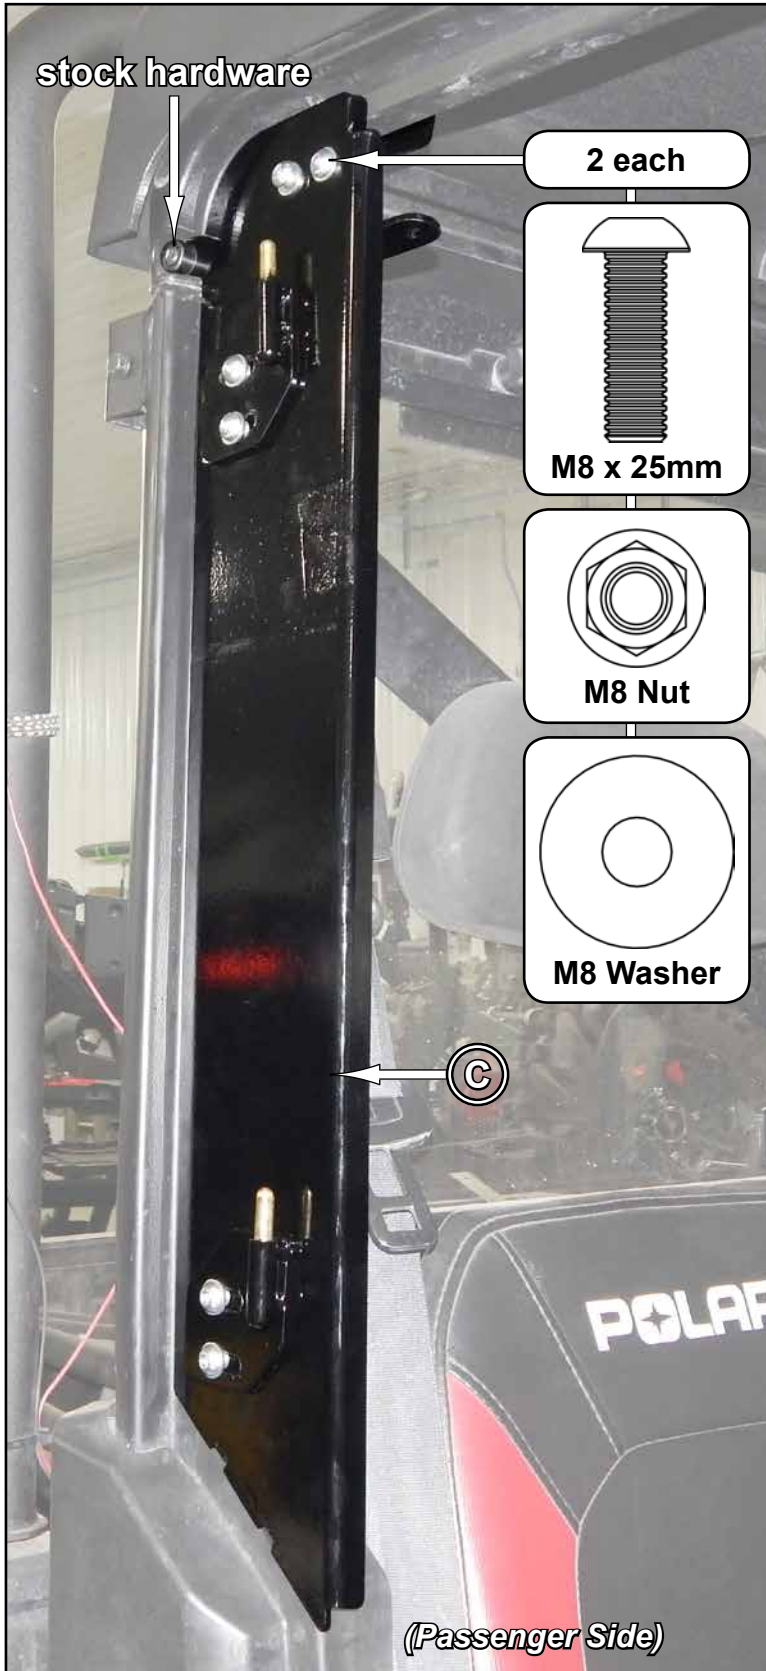

- Install Driver Side Door (B) to Male Hinges (J) as shown.



- Secure Strut (L) to Driver Door (B) with hardware shown.

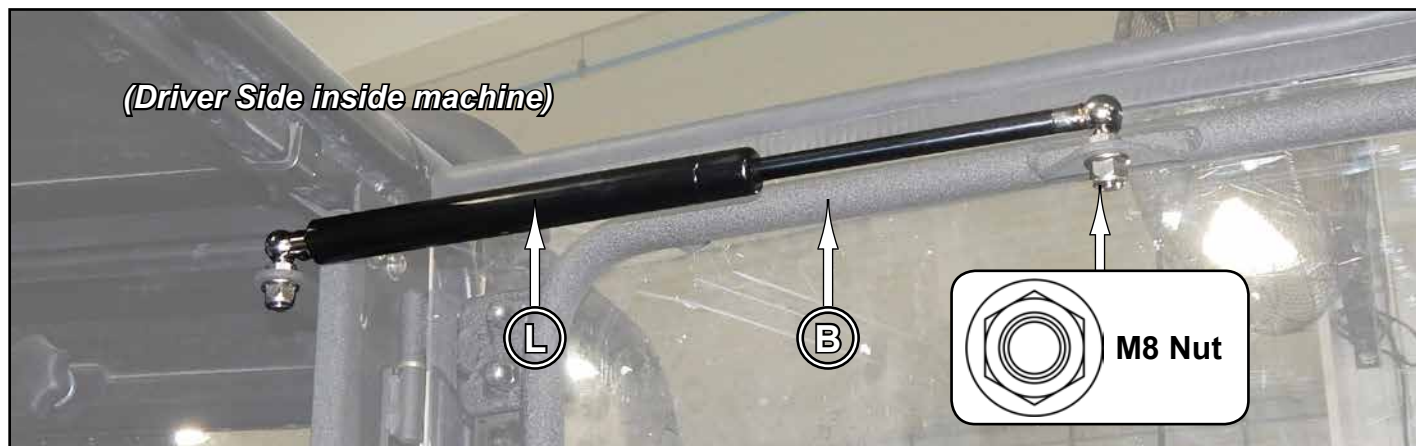

- Engage Latch and align Driver Door (B) to machine.
- Tighten all hardware completely.
- Repeat steps for opposite side.

- Installer may add Gasket to location shown to further seal cab.
- Repeat for opposite side.

