



## **HIGH IMPACT STEEL FRONT BUMPER INSTALLATION MANUAL**



For technical support , please write us to:  
info@afxmotorsports.com or call us at:  
Ph. 956-242-6521

**HAVE FUN AND A SAFE RIDE!**



www.afxmotorsports.com

4610 Modern Lane, Laredo, TX 78041 Ph. 956-242-6521

**CAN AM X3  
2 SEATER**

**SKU DEF034**

# THANK YOU!


## FOR PURCHASING AT AFX MOTORSPORTS


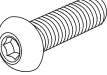


### HIGH IMPACT STEEL FRONT BUMPER FOR CAN AM X3 2 SEATER

#### HOW TO INSTALL

Pieces included:

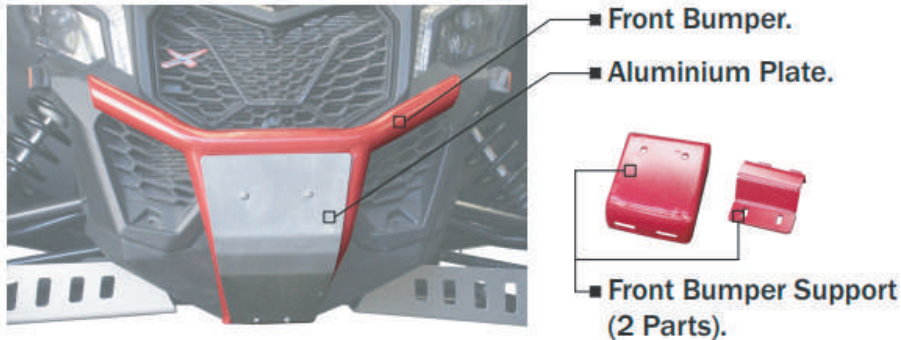

-  (2x) 1" x 2 1/4" Tubes with Internal Thread.
-  (4x) 1/4" x 1" Bolts with washers and nuts.  
(2x) 1/4" x 2" Bolts with washers and nuts.  
(2x) 1/4" x 1 1/2" Bolts with washers and nuts.

Tools needed (Not Included):

- T30 Torx Screwdriver.
- 5/32" Allen Key.
- 7/16" or 14 mm Combination Wrench.

#### Liability Statement

AFX Motorsports products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by AFX Motorsports and is not recommended. AFX Motorsports products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact AFX Motorsports to verify that they will work together. Although AFX Motorsports has thousands of satisfied customers, user should be aware that installing bumpers, rock sliders, spare tire carriers, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. AFX Motorsports urges operators and occupants to wear a helmet and appropriate riding gear at all times. By purchasing and installing AFX Motorsports products, user agrees that should damages occur, AFX Motorsports will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. AFX Motorsports, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from AFX Motorsports. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim. AFX Motorsports will warranty only parts provided by AFX Motorsports. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by AFX Motorsports. AFX Motorsports parts and products are not warrantied if item was not installed properly, misused, or modified.

10

Install the Aluminium Plate using two 1/4" x 1" screws with nuts for the upper part and two 1/4" x 1" screws with nuts for the lower part, and tighten them.



Now you have completed the installation.


- 8** Set the upper plate of the Front Bumper on the Support on the frontal tube of the vehicle using two 1/4"x 2" screws with washer and nut (Included). Do not tight yet.



- 9** Check the alignment of the Front Bumper and once aligned well tighten the screws on the lower and upper part of the Front Bumper.



- 1** Remove the 2 screws of the front part of the vehicle marked on the image below. Use a T30 Torx Screwdriver and keep the screws.

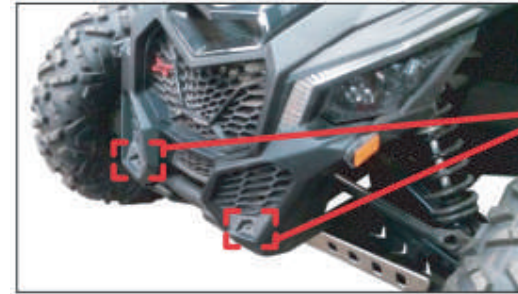


Remove this 2 screws.

- 2** Place the 2 tubes with internal thread on the screws located on the lower part of the front of the vehicle. Check the perforations of the tubes with internal thread to be aligned horizontally. In case that they are not aligned properly, there are extra washers included on the package to help the alignment of the perforations to be in order. Simply add the washers so that the perforations will be aligned horizontally.



Internal Thread

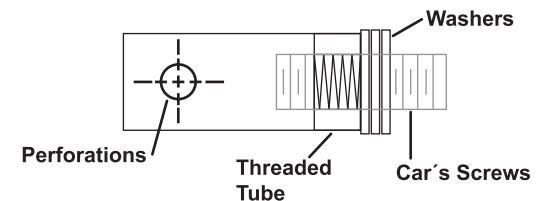

Check the perforations to be aligned.



- 3** Place the Upper Support of the Front Bumper on the front tube of the vehicle, as it is shown on the image.




- 4** Place the lower plate of the Support, using the support slots, in order that the Support might embrace the frontal tube of the vehicle.



- 5** Install again the original screws that were removed on step 1.

- 6** Place the Front Bumper on the tubes that were placed on the screws of the lower part on the front of the vehicle.

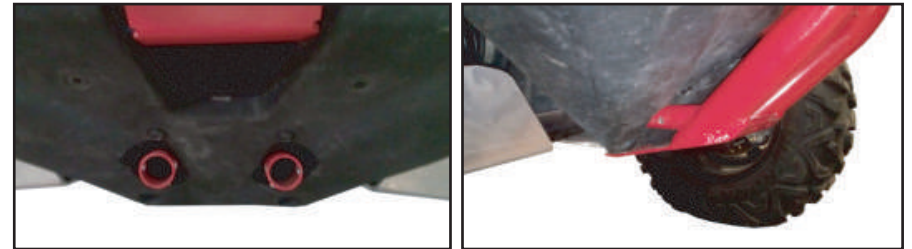

- 7** Set the Lower tubes of Front Bumper with the tubes setted on the lower part of the car, and fasten them using one 1/4"x1 1/2" screw with washer and nut for each side. Do not tight them yet.

