

INSTALLATION GUIDE:



**SINISTER
DIESEL**

CAT Fuel Filter Adapter

2004.5-2007 Dodge 5.9L Cummins





DISCLAIMER

1) By installing this product onto your vehicle, you assume all risk and liability associated with its use.


2) It is your responsibility to make sure your vehicle complies with all federal, state, and local emissions laws. Federal and many state and local laws prohibit the removal, modification or rendering in-operative of any part of the design affecting emissions or safety on motor vehicles used on a public street or highway. Violation may result in a fine of up to \$32,500 per vehicle (or possibly higher depending on changes in the law). All civil penalties and fines for removing your vehicle's emissions equipment are the sole responsibility of the end user.

3) Due to its high performance nature, this product may void vehicle manufacturer's warranty.

4) Sinister Mfg Company, Inc. is not responsible for misuse of its products. By installing this product, you release Sinister Mfg Company, Inc. of any and all liability associated with its use.

5) Depending on where you live, restrictions may apply. Check all applicable laws before installing or using!

6) The purchaser and end user releases, indemnifies, discharges and holds harmless Sinister Mfg Company, Inc. from any and all claims, damages, causes of action, injuries, or expenses resulting from or relating to the use or installation of this product that is in violation of the terms and conditions on this page, the product disclaimer, and/or the product installation instructions. Sinister Mfg Company, Inc. will not be liable for any direct, indirect, consequential, punitive, statutory, or incidental damages or fines caused by the use or installation of this product.

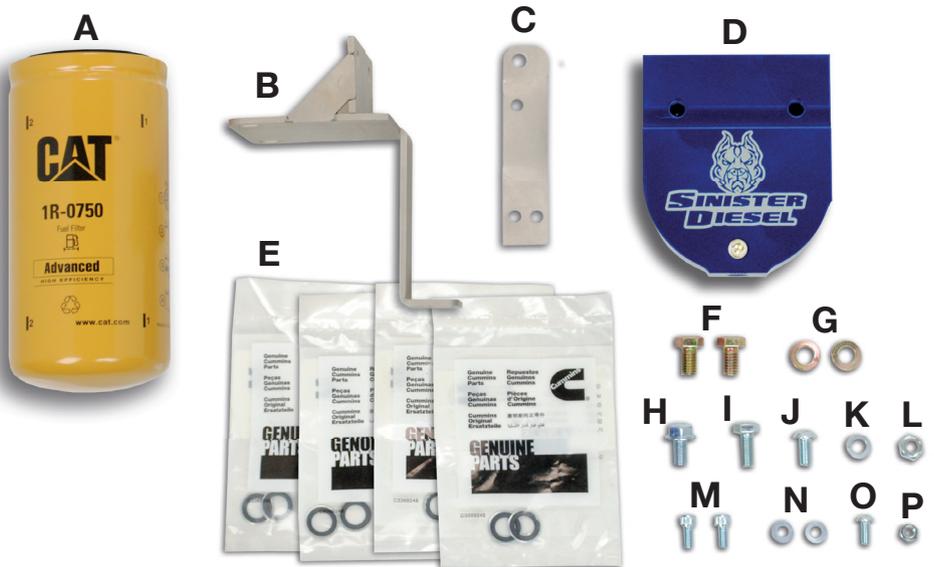

PART:	DESCRIPTION:	QTY:
A	CAT Fuel Filter	1
B	Mounting Bracket	1
C	Support Bracket	1
D	Sinister Filter Block	1
E	Banjo Seals (packs of 2)	4
F	3/8" Bolts	2
G	3/8" Lock Washers	2
H	M8 Flanged Bolt	1
I	M8 Bolt	1
J	M8 Button Head Allen Bolt	1
K	M8 Lock Washer	1
L	M8 Lock Nut	1
M	1/4" Allen Bolts	2
N	1/4" Lock Washers	2
O	M6 Button Head Allen Bolt	1
P	M6 Lock Nut	1

IMPORTANT: READ ALL INSTRUCTIONS PRIOR TO INSTALL. Prior to installation, please compare the parts that you have received with the bill of materials provided on this page to assure that you have all the parts necessary for the installation.



CAUTION !!! Never work on a hot vehicle. Serious injury in the form of burns can result if the vehicle has been in use. Allow vehicle to cool prior to installation. Always wear eye protection when working on or under any vehicle.

IMPORTANT: This kit will only work with 5.9L Cummins that have the fuel pump in the fuel tank. If your vehicle has the fuel pump mounted to the factory fuel filter you will have to use an aftermarket fuel pump in conjunction with this kit. Installation of the Sinister Manufacturing Company CAT Fuel Filter Adapter will require you to disassemble fuel lines. Be sure to properly contain any exposed fuel.

- 1 Using 8mm socket and Phillips screwdriver, remove the driver side front fender well to gain access to the fuel filter assembly mounted on the driver side of the motor. (Image 1)



IMAGE 1

- 2 Open the fuel filter cap without removing it to allow air in while draining the filter bowl. (Image 2)

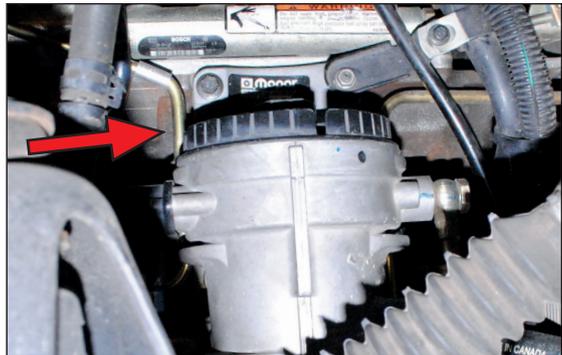


IMAGE 2

- 3 Place bucket or oil pan under the fuel bowl drain tube indicated in Image 3. (Image 3)

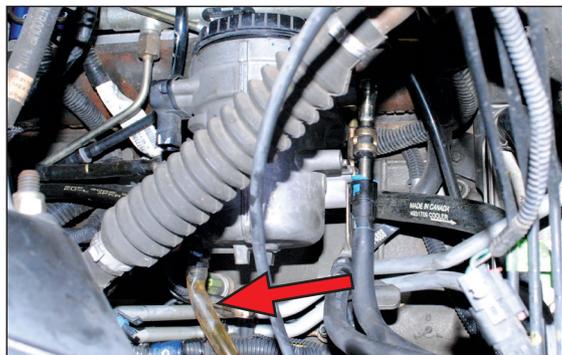


IMAGE 3

4 Open the yellow valve to drain the fuel from the fuel bowl. (Image 4)

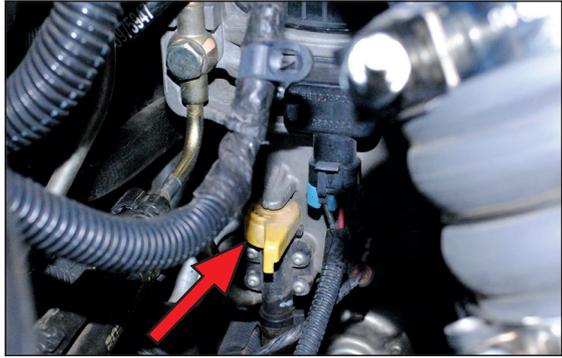


IMAGE 4

5 Unplug the two electrical plugs on the front of the fuel filter bowl. (Image 5)

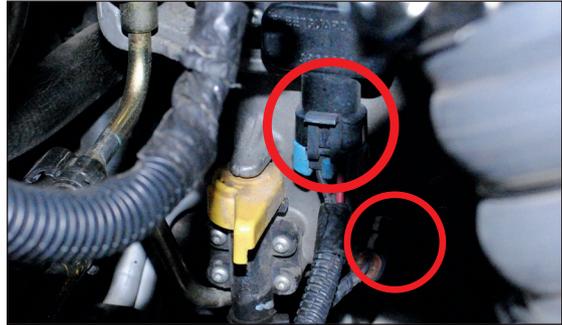


IMAGE 5

6 Using a 17mm socket or wrench, remove the 4 banjo bolts that secure all of the fuel lines connected to the factory fuel filter. Two are located on the right side. One is located on the left side, and the last one is located on the bottom of the fuel bowl. (Image 6)

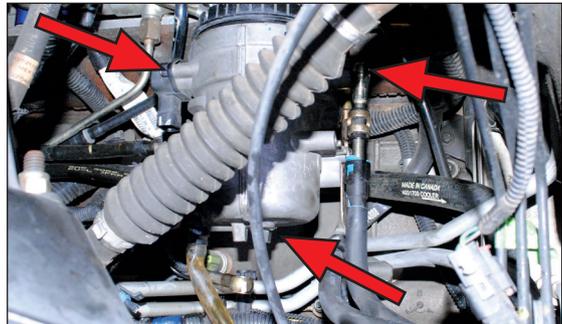


IMAGE 6

7 Using a 5mm Allen wrench and 10mm socket, remove the two bolts that secure the support brackets to the rear of the filter bowl. (Image 7)

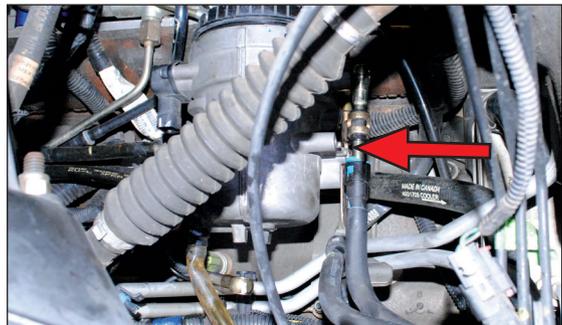


IMAGE 7

8 Using a 10 mm socket, remove the two bolts and fuel bowl from the engine. (Image 8)

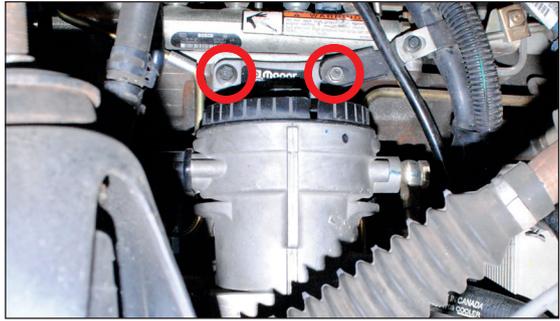


IMAGE 8

9 Install the mounting bracket to the Sinister Diesel CAT Filter Block. Using the supplied lock washers and cap head allen bolts, install the support tab (hand tight) onto the right side of the filter block. (Image 9)

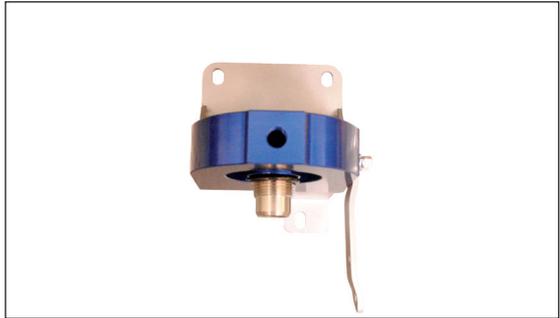


IMAGE 9

10 Using a 10mm socket, remove the bolt that secures a support bracket to the motor. The factory fuel filter bowl originally covered this bolt. Install the Sinister Diesel CAT Filter Adapter to the motor hand tight using the factory bolt on the right side and the supplied short M8 flange bolt to the top left. The other longer bolt and lock washer will secure the bottom of the mounting bracket to the motor. (Image 10)

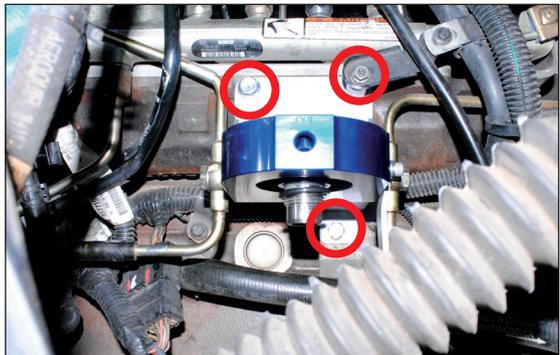


IMAGE 10

11 The bracket to support the hardline will mount to the right side of the support tab on the filter block. Secure it with the larger button head allen bolt and lock nut. (Image 11)

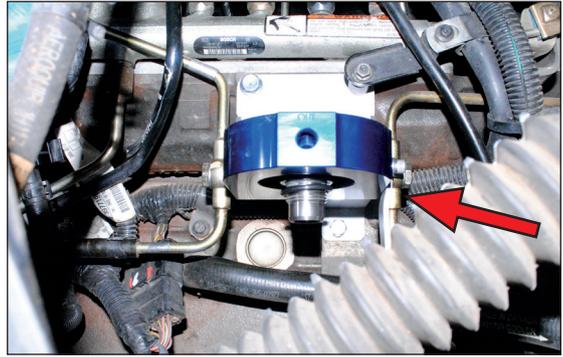


IMAGE 11

12 Using the supplied banjo seals, reinstall the two banjo bolts that connect the two hardlines to the filter block. (Make sure not to stack the seals w/ old ones, as this will cause a fuel leak.) The supply line banjo fitting will connect to the right side of the filter block marked IN. The mounting bracket will attach to the left side of the support tab using the smaller button head allen bolt and lock nut. (Image 12)

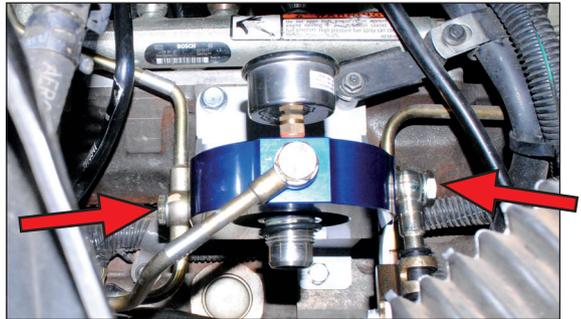


IMAGE 12

Note: The pressure gauge in image 12 is optional, and if purchased, it should not be left installed due to failure in harsh environments.

13 After the three banjo fittings have been properly connected to the sides of the filter block, tighten all of the mounting bolts and support tab hardware.

14 The last banjo fitting will have to be turned 90 upward and connected to the out port onto the filter block. Tighten all of the banjo bolts to 35ftlbs. (Image 13)

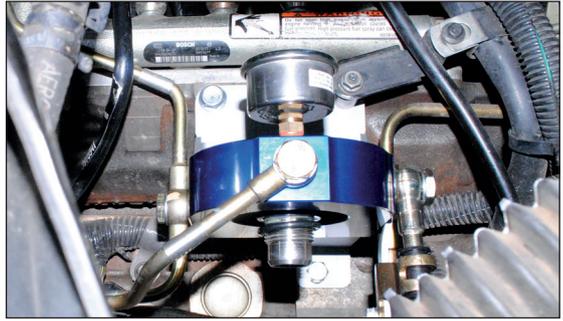


IMAGE 13

15 Apply a thin layer of clean motor oil to the seal on the Sinister Diesel CAT Fuel Filter Adapter and install it onto the filter block hand tight. Start the motor and check for any leaks from all of the fittings. (Image 14)



IMAGE 14

16 Reinstall the driver front fender well, and installation is complete.

More Great Parts for your 5.9 Cummins!

Shop SINISTERDIESEL.COM



EXHAUST TIPS

Made from 304 stainless steel for durability and long life, our Sinister exhaust tips fit any 4 and 5-inch tailpipes and widen to either 5 or 6-inch outlet with a rolled edge. Available in polished stainless, black ceramic, and our signature AR-15 design. **FROM \$65**



OIL FILTER KITS

Performance parts won't help if your oil is dirty. Keep your truck running its best with a Sinister Oil Filter Kit. '03-'10 Powerstroke, '06-'07 Cummins. **FROM \$300**



COLD AIR INTAKE

See what your Dodge truck can really do when you feed it the cold air it wants with aluminum intakes. **FROM \$299**



STEERING BOX SUPPORT

End Dodge "death wobble" with this easy to install kit. Includes all necessary hardware. '94-'17 Cummins. **\$189**

LEVELING KITS

Add bigger tires to your truck with a blue or black Sinister Leveling Kit. Available for 2WD and 4WD. **FROM \$99**



SINISTER APPAREL

With our new Shield Trucker Hat you can look as good as your truck. We have a new line of t-shirts, hats and hoodies now available!

SD-CAT-CUMN-2018



#1 IN PERFORMANCE PARTS & KITS

2025 OPPORTUNITY DR. ROSEVILLE, CA 95678 SINISTERDIESEL.COM 877.692.4110