



# INSTALLATION INSTRUCTIONS

FITS: 2018+ JL Wrangler Storage Tailgate Box #365

Please read and fill out the enclosed warranty registration card or register online at <https://www.tuffyparts.com/topic/warranty> to activate your warranty.

## PARTS CHECKLIST



STORAGE BOX #365

## SHIPPING PACKAGE CHECKLIST



#11.1 (2) 1/2" x 1 3/16"  
SPACER



#11.2 (2) 1/2" x 1 3/4"  
SPACER



#11.3 (2) 1/2" x 1 1/16"  
SPACER



#1.4 (2) M6 x 50mm(2")  
CAP SCREW



#1.5 (2) M6 x 60mm(2 3/8")  
CAP SCREW



#1.6 (4) 1/4" LOCK  
WASHER



#1.7 (4) 1/4" FLAT  
WASHER

## TOOLS CHECKLIST


- Panel Removal Tool
- 13mm Drill Bit and Drill
- 5/32(4mm) Allen Wrench
- Torque Wrench
- T-40 Torx Driver

### PLEASE READ ALL INSTRUCTIONS THOROUGHLY BEFORE STARTING INSTALLATION.

1. Remove all the contents from the shipping box and confirm that you have all the items listed above.


***For TrailRail equipped vehicles skip to Step #8***

2. Open the tailgate and remove the trim panel from the inner surface. See Figure 1

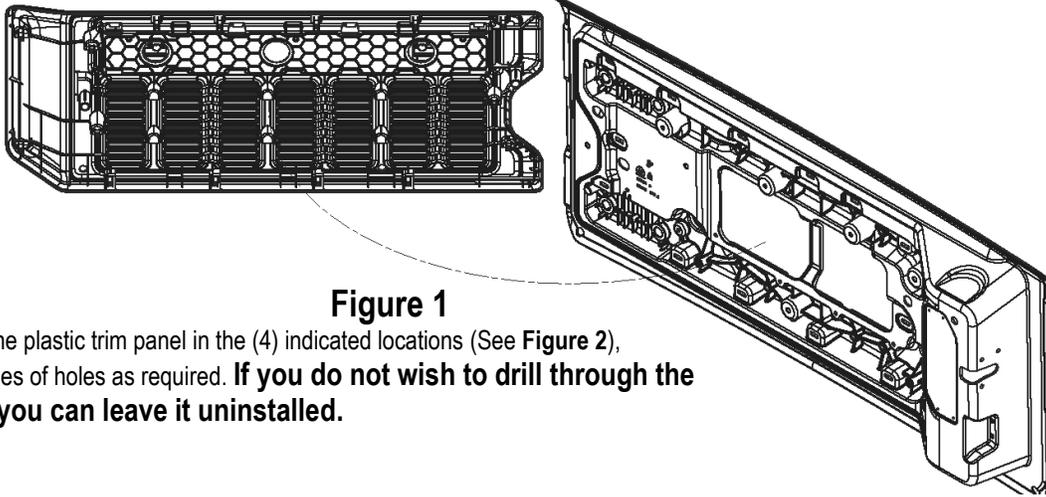


**Figure 1**

3. Drill through the plastic trim panel in the (4) indicated locations (See Figure 2), and clean edges of holes as required. **If you do not wish to drill through the trim panel you can leave it uninstalled.**

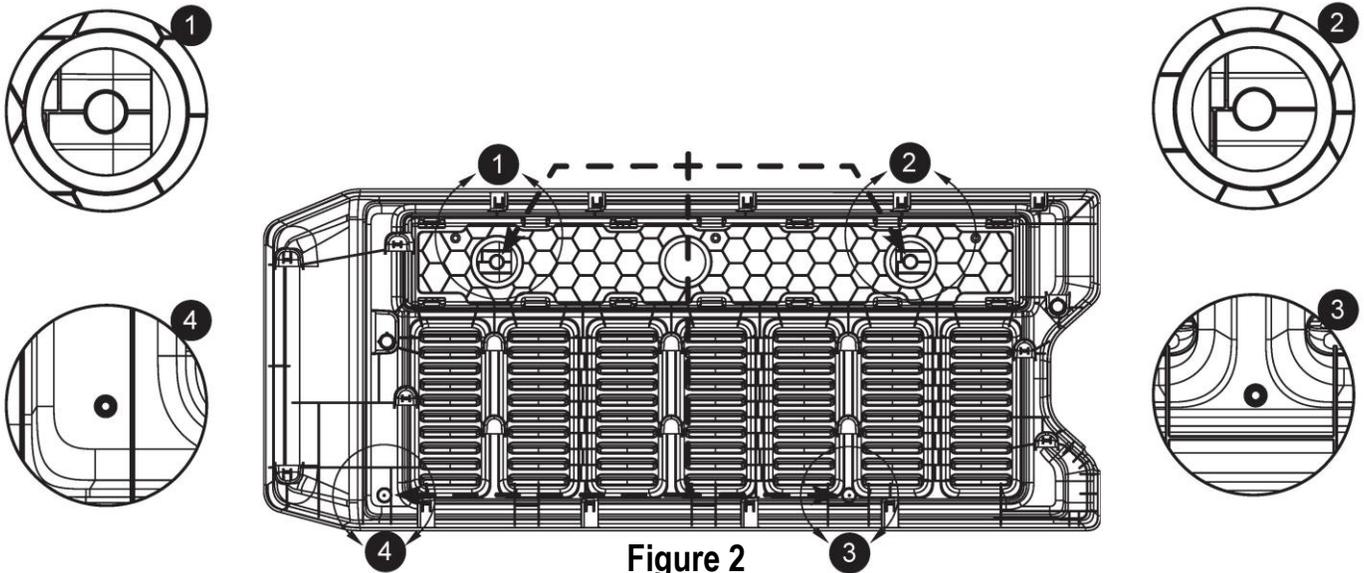


**Figure 2**

4. Replace the trim panel onto the vehicle tailgate.
5. Place the (2) #11.1 Spacers in the upper holes and the (2) #11.2 Spacers in the lower holes. See Figure 3.

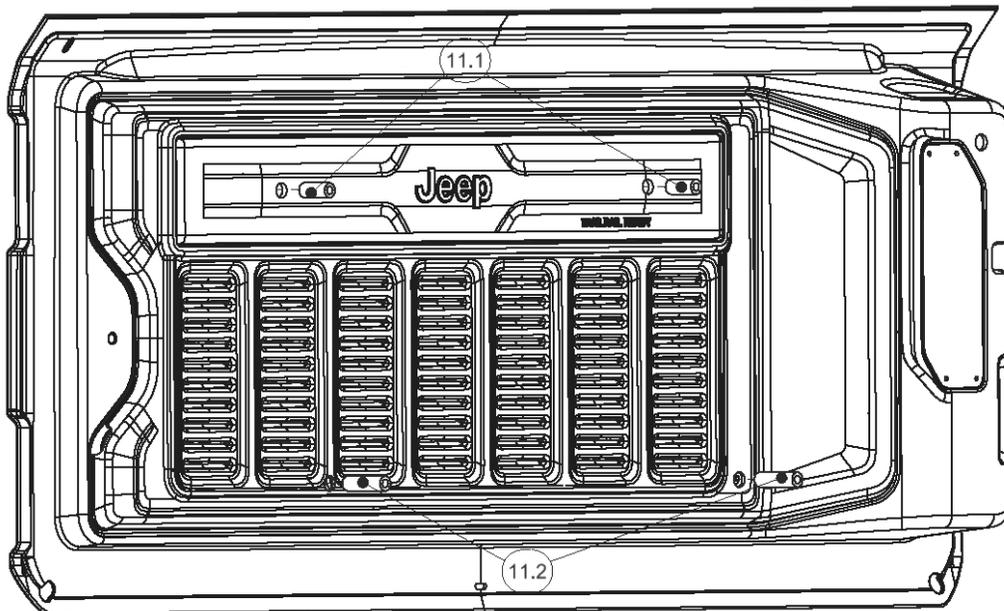

**Figure 3**

6. While holding the #365 Storage Box in place, insert the mounting hardware through the mounting holes of the #365 Storage Box in the sequence shown in **Figure 4**. #1.3 Screws (2") are used in the upper mounting holes, and #1.5 Screws (2 3/8") in the lower holes. **NOTE: This step is most easily accomplished with help, or another means of supporting the lockbox at the correct elevation.**

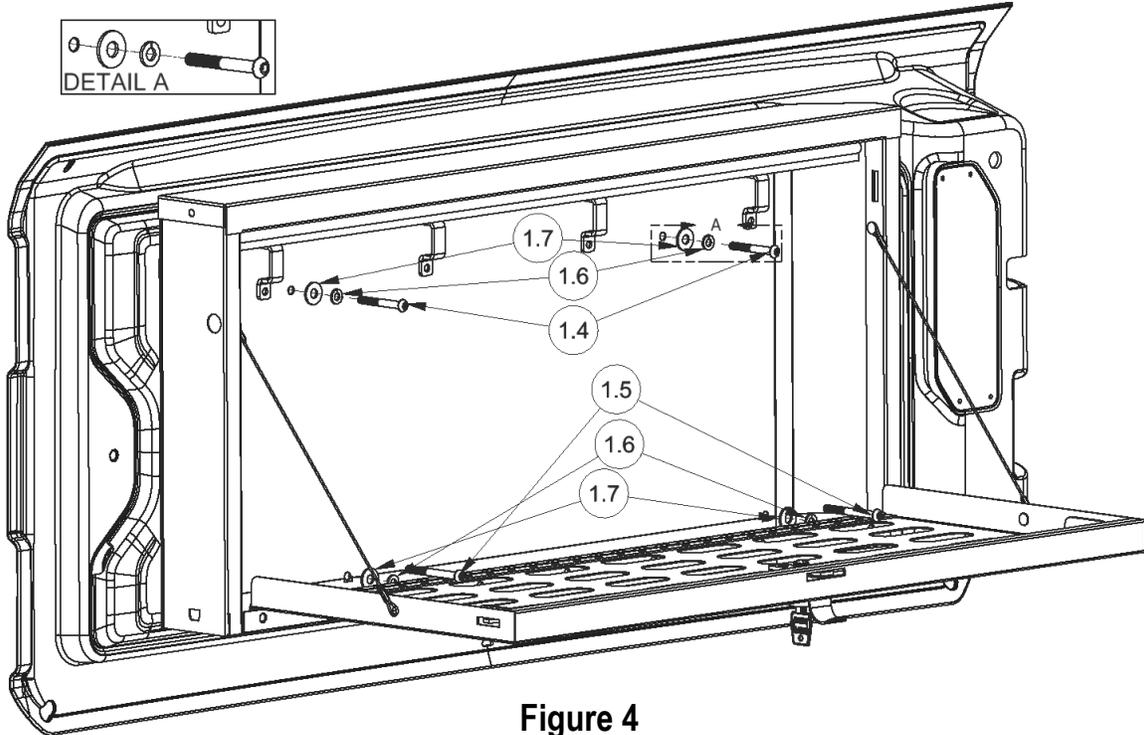


**Figure 4**

7. Tighten mounting hardware to 8 ft-lbs(10 N-m).


## ***For TrailRail Equipped Vehicles Begin Here***

8. Open the tailgate and remove the (3) OEM screws that hold the TrailRail in place. See **Figure 5**.

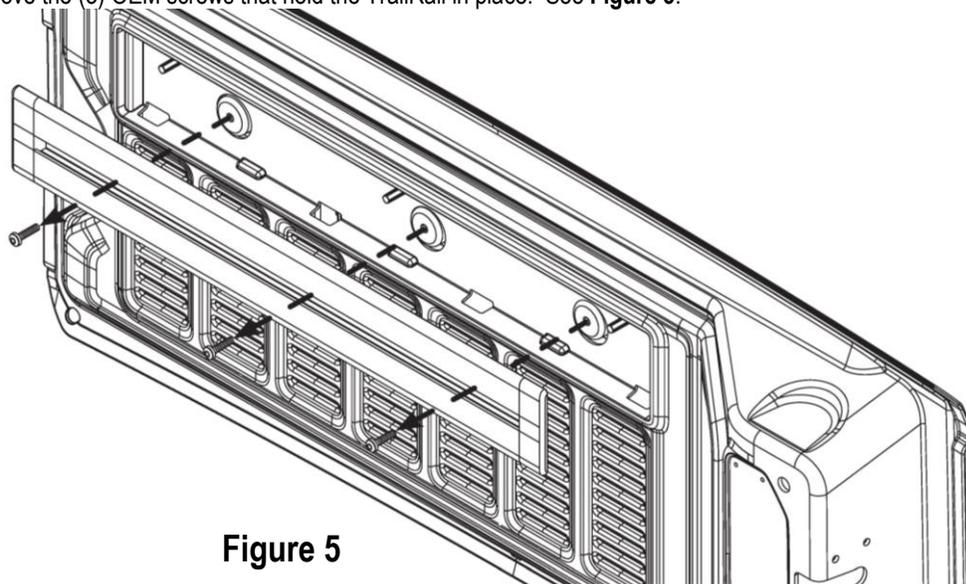



**Figure 5**

9. Remove the trim panel from the inner surface. See **Figure 6**

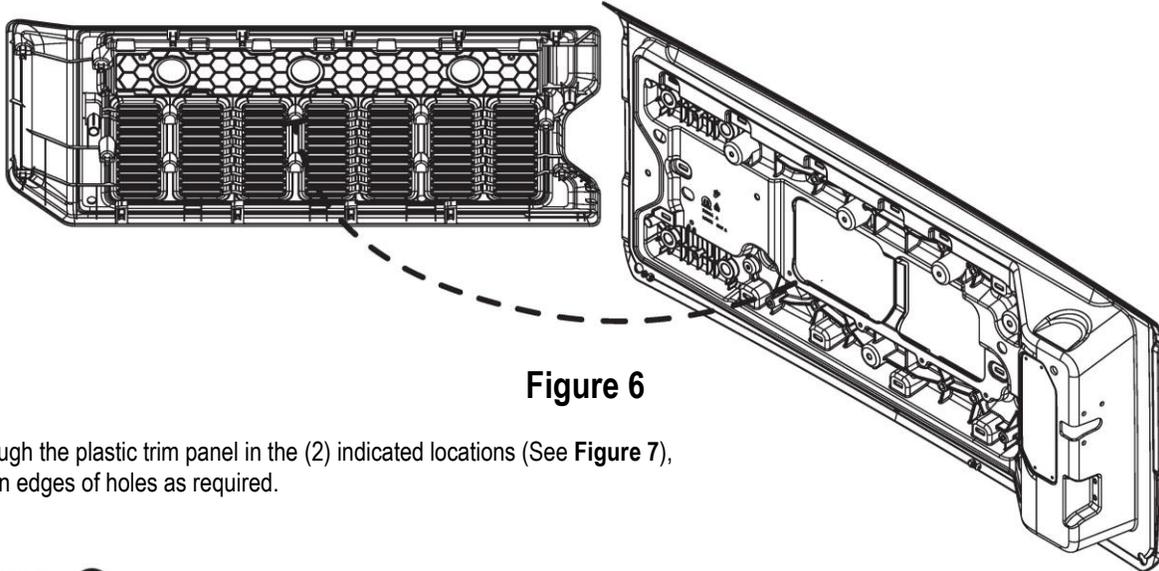


**Figure 6**

10. Drill through the plastic trim panel in the (2) indicated locations (See **Figure 7**), and clean edges of holes as required.

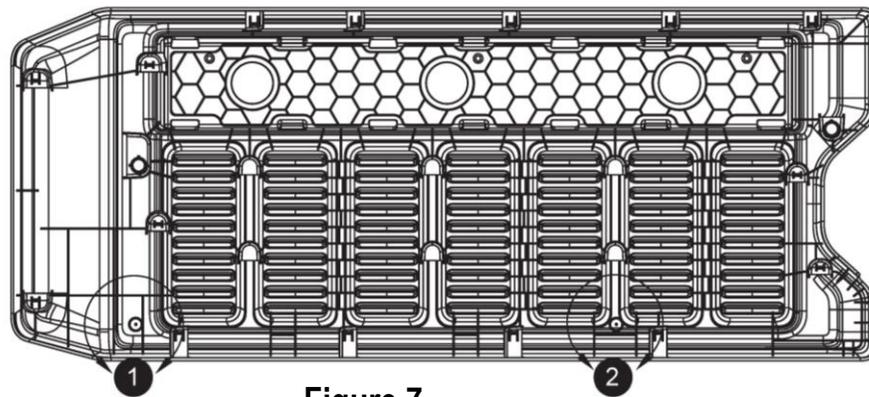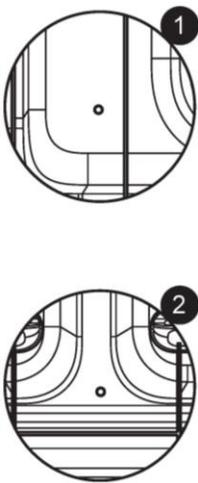


**Figure 7**

11. Replace the trim panel onto the vehicle tailgate and install the TrailRail using only the center OEM mounting screw. See **Figure 8**

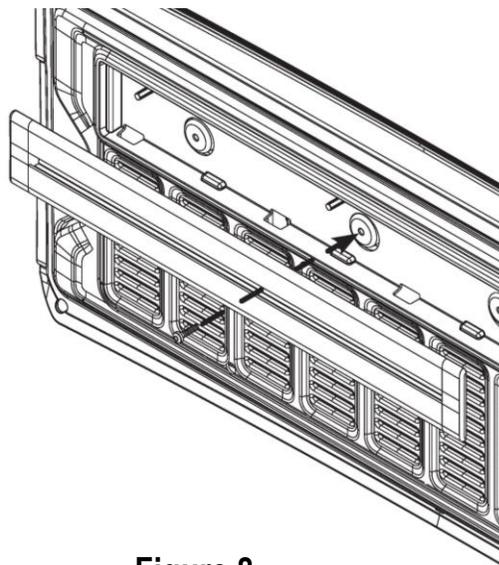


**Figure 8**

12. Place the (2) #11.3 Spacers in the TrailRail slot over the threaded mounting holes and the (2) #11.2 Spacers in the lower holes. See **Figure 9**.

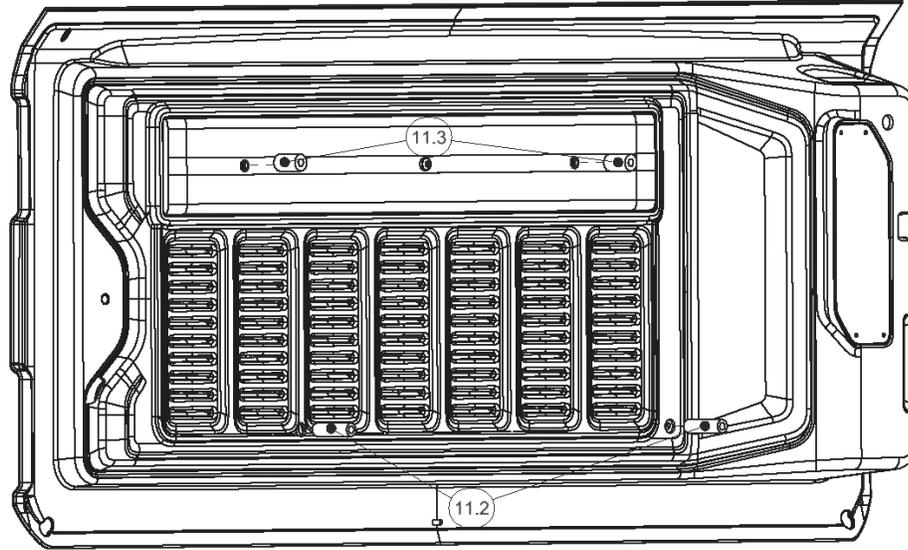

**Figure 9**

13. While holding the #365 Storage Box in place, insert the mounting hardware through the mounting holes of the #365 Storage Box in the sequence shown in **Figure 10**. #1.3 Screws (2") are used in the upper mounting holes, and #1.5 Screws (2 3/8") in the lower holes. **NOTE: This step is most easily accomplished with help, or another means of supporting the lockbox at the correct elevation.**

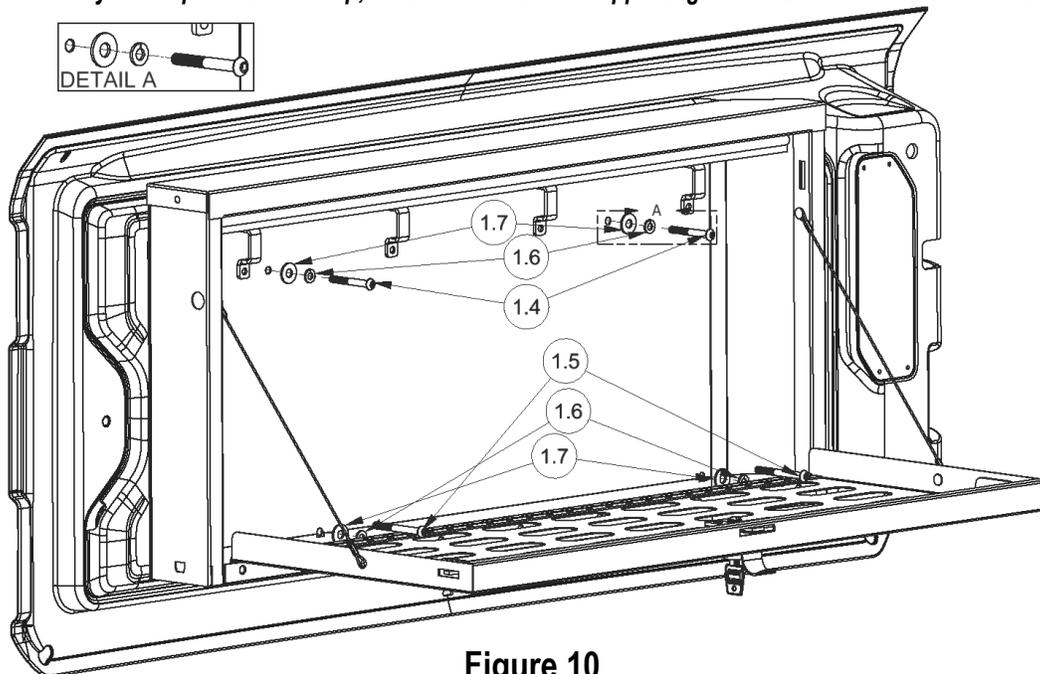

**Figure 10**

14. Tighten mounting hardware to 8 ft-lbs(10 N-m).

**CAUTION: Lid may be used as a table but should not be loaded beyond 40lbs (18 kg), replacement cables are available from Tuffy Security Products.**

Call (800)348-8339 for Technical Support