




PFADT

SERIES BY AFE POWER



Pfadt Racing Camber Adjustment Kit – C6 Z06

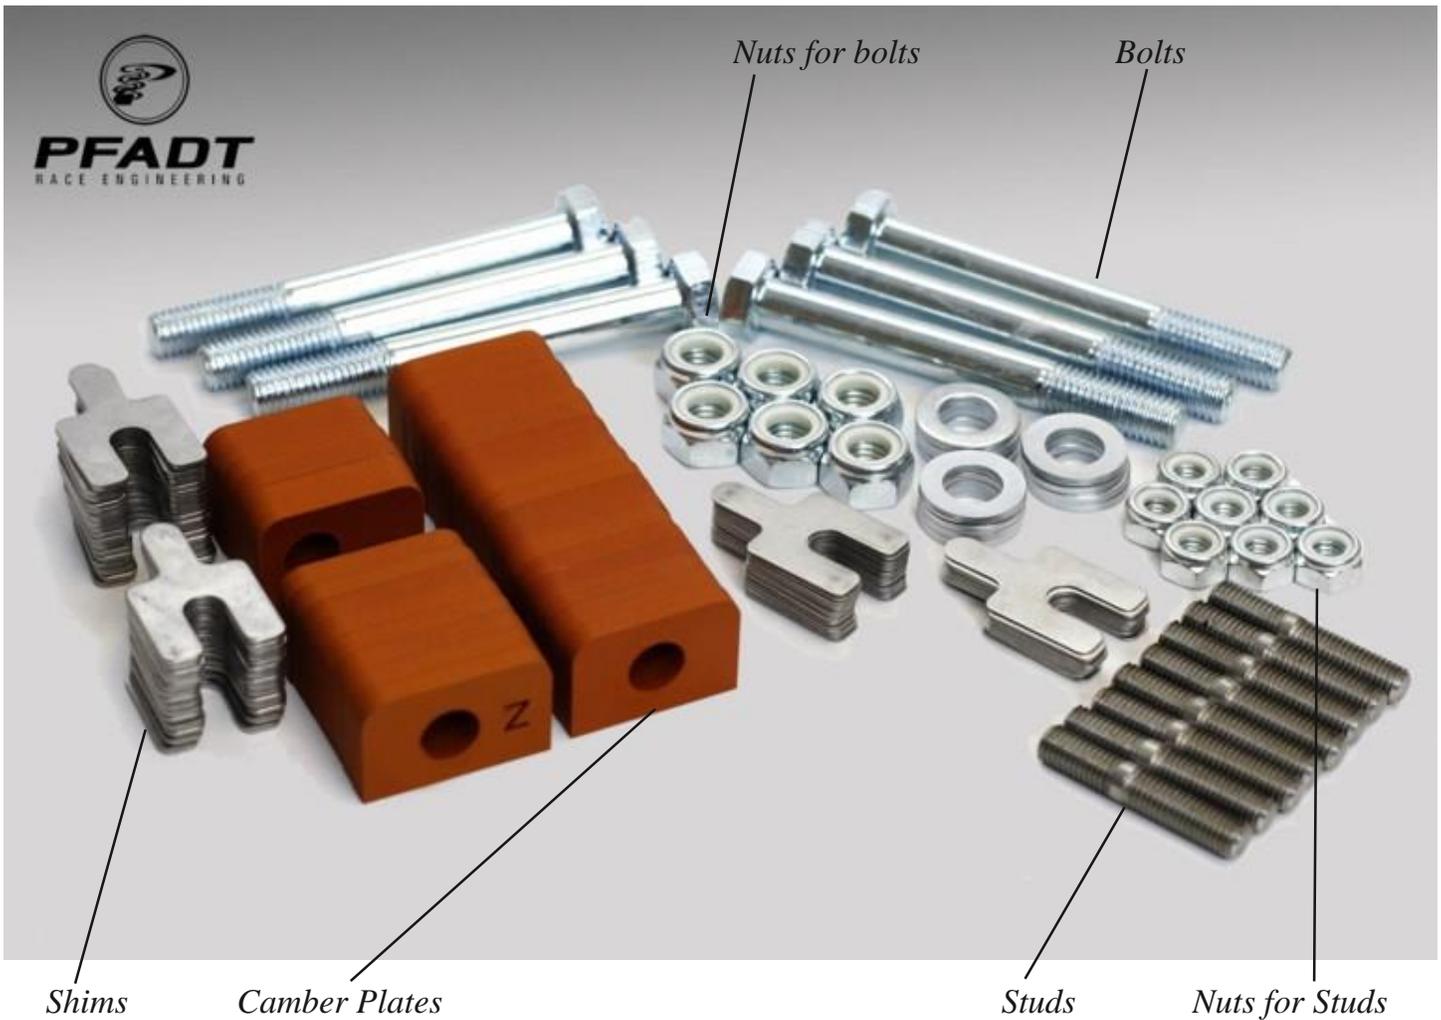

The purpose of this kit is to simplify the alignment process and correct the factory shortcomings. The orange camber plates have different hole placement and are identified by the notches on the bottom.

Front:

- The front kit contains camber plates (spacers) and bolts to replace the factory eccentric bolts and washers.
- Use the camber plates with a “Z” cut into them
- Remove eccentric bolts from lower control arm, do not worry about the soft aluminum sleeve. - You will not reuse the bolts or sleeves.

Install bolts and plates with “Z”

- One plate goes on each end of the bolt.
- All plates should be installed so that the rounded corners face up.
- For non-aggressive alignments, less than 1.5 degrees negative camber, install plates with the “Z” towards the outside of the car.
- For aggressive alignments, more than 1.5 degrees negative camber, install the plates with the “Z” towards the inside of the car.

You may have to pry the lower control arm out to get the bolt to align in the control arm.

-Tighten the bolts to 80 ft/lbs of torque.

-Remove the bolts from the upper control arm. Move the control arm out of the way.

-Install the studs in place of the bolts and use the Loctite to hold them in.

-Put Control arm back on over the studs.

-Install locking nuts and snug them down.

-Repeat on the other side.

-Install wheels and check alignment for camber settings. Use shims to correct alignment to desired camber.

A 1mm shim placed on each stud is approximately 0.2 degrees of camber.

-After camber is set, measure caster.

-To set caster, do not change the total number of shims

-Move shims from rear of control arm to the front or vice versa.

-Re-check camber and torque upper lock nuts to 25 ft/lbs.

RECHECK ALL WORK!!



REAR:

-All of the settings are achieved with the lower front pivot bolt.

-Remove factory bolts from front pivot of lower control arm.

-Replace the bolt and eccentrics with the bolt provided and two of camber plate #3 (3 notches). The hole should move the bolts toward the outside of the of the car. Loosely install bolts for measurements.

-Reinstall wheels and measure camber.

-Change plates to correct camber to desired settings.

-One camber plate # higher should be about + 0.2 degrees of negative camber (more negative camber).

-One camber plate # lower should be about - 0.2 degrees negative camber (less negative camber).

-You may not end up with equal plates on both sides.

-Torque bolts to 80 ft/lbs.

-Re set toe-in using factory adjusters

RECHECK ALL WORK!!



Advanced Control Engineering
191 Granite Street Suite C
Corona, CA 92879
951-493-7128
www.aFecontrol.com

