



Fender Shrouds for 22+ WRX

2023-04-05

PSP-ENG-551

Thank you for purchasing this PERRIN product for your car! Installation of this product should only be performed by persons experienced with installation of aftermarket performance parts and proper operation of high performance vehicles. If vehicle needs to be raised off the ground for installation, the installer must use proper jacks, jack-stands and/or a professional vehicle hoist for safety of the installer and to protect property. If the vehicle is lifted improperly, serious injury or death may occur! Please read through all instructions before performing any portion of installation. If you have any questions, please contact our tech department prior to starting installation. We can be reached in any of the following methods:

Email Tech@PERRINperformance.com

Instant Chat off the main page of www.PERRINperformance.com

Or simply call our tech team at 503-693-1702




WARNING: This product can expose you to chemicals including Lead which is known to the State of California to cause cancer birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov

Included Parts with PERRIN Fender Shrouds:

4	X-PSP-ENG-551-1	Threaded Push Rivet Short for Fender Shroud
2	X-PSP-ENG-551-2	Threaded Push Rivet Long w/groove for Fender Shroud
1	X-PSP-ENG-551L	Fender Shroud Left for 22+ WRX
1	X-PSP-ENG-551R	Fender Shroud Right for 22+ WRX
6	X-BLT-M618WF-SSBO	M6 x 18 Fender Washer Black Oxide SS
6	X-BLT-M6X6CSB-SS	M6 X 6mm Button Head Socket cap screw SS
1	X-BLT-M4KHS	M4 Hex Key Short Arm

**Remove (3)
Plastic Fasters**

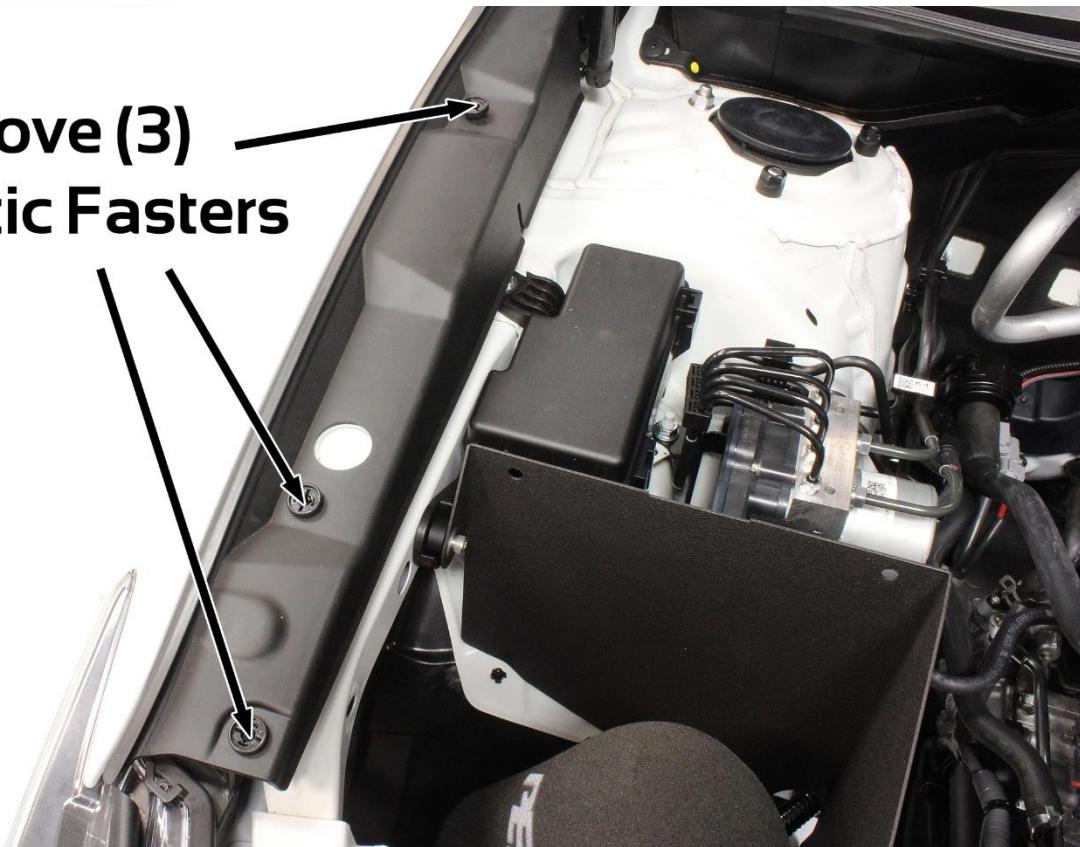

Installation Instructions


1. Open hood, then using a small pick tool, locate and remove plastic fasteners (3 on each side) as shown above holding OEM fender covers onto car.

2. Remove the center portion from each plastic fitting (will require some prying apart of the small “fingers” that hold them in place) then reinstall the lower portion back to the car to hold the fender covers in place.
3. Install supplied longer (with groove on the side) threaded push rivet into the center plastic fitting on each side.



Above picture show the longer threaded push rivet installed into the center plastic fitting

4. Install (4) shorter threaded push rivets into the remaining plastic fittings on both sides of car.
5. Rotate fittings so the longer side is parallel with the length of the car.

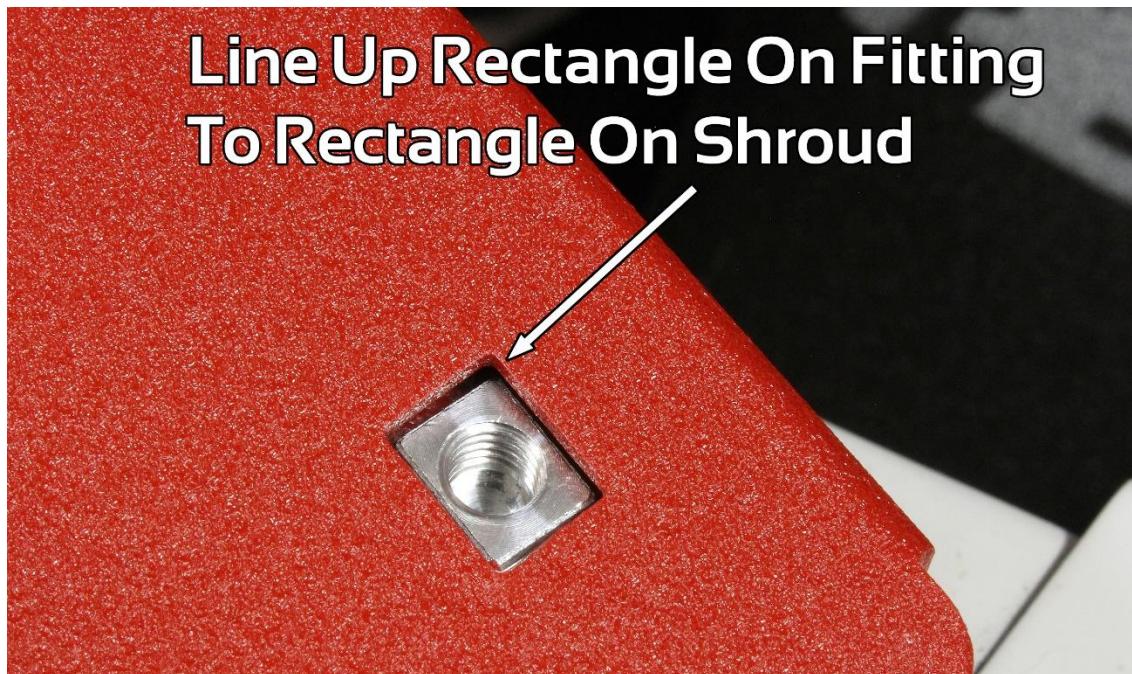

6. Install fender shrouds onto fittings and push down slightly to get the fittings to line up with the slots in fender shrouds. **NOTE: It is normal to have to compress the OEM rubber shroud down a bit to get them to line up.**
7. Using supplied M6x6 bolt and black washers, secure fender shrouds to the car. Tighten bolts to 5- 8 ft-lbs. **NOTE: As you tighten up the fitting make sure that you are pushing down enough to keep it from rotating.**



8. Slowly close the hood and make sure that the rubber hood bump fits into the hole on shroud. If some adjustment is needed, loosen the screws and move the fender shroud front to back until there is clearance.
9. After a week of driving, recheck hardware to make sure they are still tight.

Questions, Comments, and Suggestions Contact: Tech@PERRIN.com
Visit Our Website for Instant Chat Options at www.PERRIN.com
Call Our Tech Team at 503-693-1702