

POWERFLEX®

PART NUMBER

PFF3-813

DESCRIPTION

FRONT ANTI ROLL BAR LINK BUSH

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane Bushes 1 x PTFE/Silicone Grease
4 x Stainless Steel Sleeves 8 x Mild Steel Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the arm and the original bush from the car.

2. Clean any dirt and corrosion from the bore of the arm and file any sharp edges.

3. Lubricate the outside of the new polyurethane bush with washing up liquid and push it into the arm. **Tip: hold the bush at an angle to the arm to get the bush started in the hole.**

4. Apply some of the supplied grease to the knurled bore of the bush and insert the stainless steel sleeve into the bore of the polyurethane part so it sits flush.

5. While fitting the arm back to the vehicle, fit a washer to each of the faces of the bushes (Figure 2). Tension all hardware to manufacturers recommended torque settings.



Figure 1

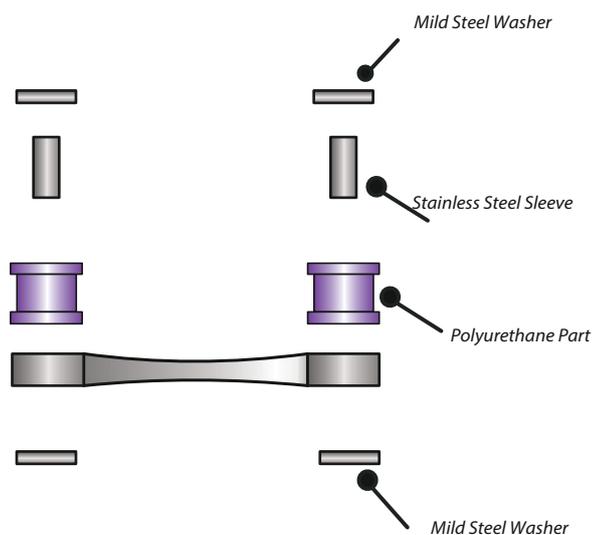


Figure 2