

# POWERFLEX®

## PART NUMBER

**PFF5-1602**

## DESCRIPTION

**Front Arm Outer Bush (1978 - 1983)**

## INSTALLATION GUIDE

### Product description:

This part replaces OEM part number 31121123037

### Contents (parts per pack):

- 4 x bushes (2 x A bush & 2 x B bush)
- 2 x Stainless steel sleeves
- 4 x washers
- 1 x grease



*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.

*All fasteners must be tensioned to manufacturer's torque settings.*

### Fitting Instructions:

1. Remove the original rubber bush from the arm, clean any dirt and corrosion from the bore of the arm. Fig A.
2. Push bush A into the arm bore with the chamfered inner edge (Fig B) from the front of the car.
3. Push bush B into the arm bore with the flat machined face (Fig B) from the rear of the car.
4. Apply some of the supplied grease to the bore of the bushes and insert the sleeve. Use the supplied washers on both sides of the bushes when refitting the arm to the car. Fig C.
5. Tension all hardware to manufacturers recommended torque settings.



Fig A

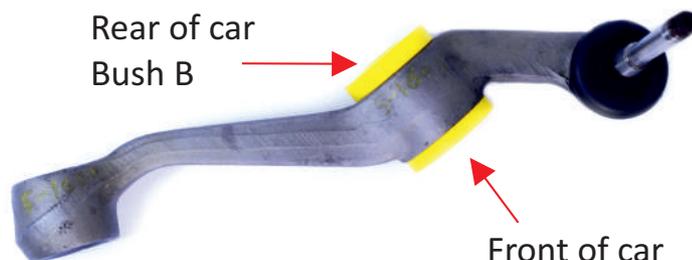


Fig B



Fig C