



800-601-8072
Factory Direct **CALL TODAY!**

- PRODUCTS ▾
- INSTALL @ BANKS
- NEWS & MEDIA
- ABOUT BANKS ▾
- SUPPORT ▾
- PROJECTS
- CONTACT US

INSTALL INSTRUCTIONS

Part #s 48996, 48996-B, 49825, 49825-B, 49829, 49829-B, 48997, 48997-B

Banks Monster Exhaust® 5-inch System
2017-2019 Chevy/GMC 6.6L L5P Duramax (DCSB, DCLB, CCSB, CCLB, INCLUDING DUALY MODELS)

2020-2022 Chevy/GMC 2500/3500 6.6L L5P Duramax (DCSB, CCSB, DCLB, CCLB) Does not fit 2020+ Dually Models


Please read through the following instructions thoroughly before starting your installation. If you have any questions please visit our [Support Page](#).



Monster Exhaust L5P Installation
from **Banks Power**

07:37 |

★ REVIEWS

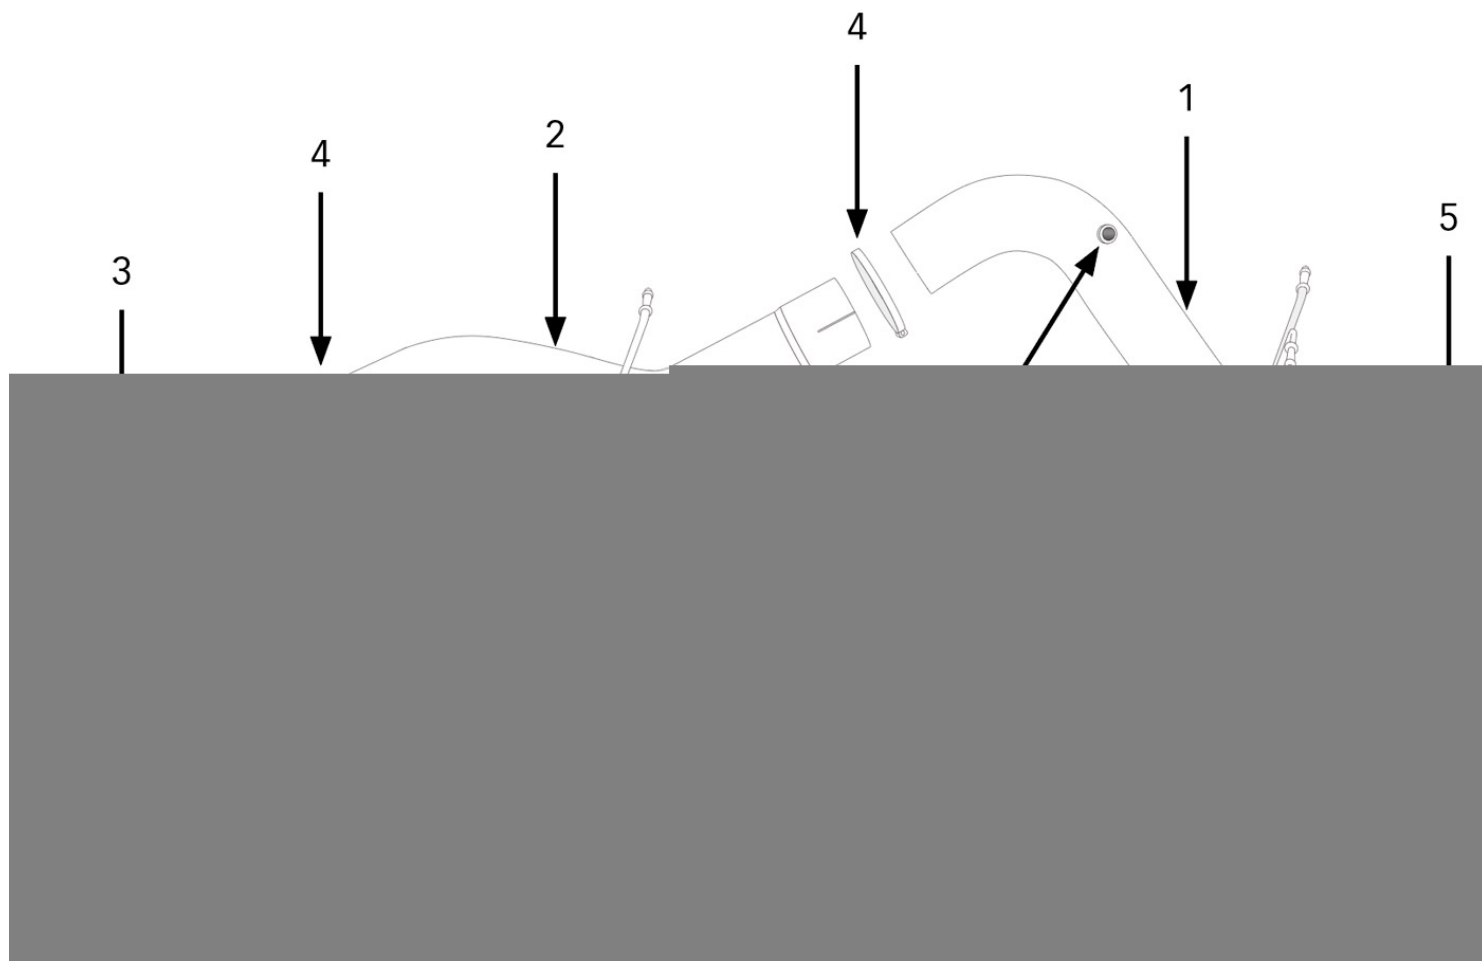


Item #	Description	Quantity	Unit Price	Total Price
Bill of Materials				
★ REVIEWS				

General Installation Practices

[General Installation Practices - Show](#)

Monster Exhaust System Installation



1. Disconnect the battery(s).

As a precaution, disconnect the ground of the battery (if there is more than one battery, disconnect both.)

Tuck the cable out of the way to prevent contact with the battery.



2. Raise the vehicle and support it with properly weight rated safety stands, ramps or a commercial hoist.

Follow the manufacturer's safety precautions and take care to balance the vehicle to prevent it from slipping or falling.

When using ramps, be sure the front wheels are centered squarely on the ramps; place the transmission in park; set the parking brake, and place blocks behind the rear wheels.

CAUTION: DO NOT WORK UNDER ANY VEHICLE SUPPORTED ONLY BY A JACK. SEVERE INJURY MAY RESULT.

3. Remove the NOx sensor from the over-axle pipe using a 24mm wrench.


NOTE: If the sensors appear to be rusted and/or ceased, soak for a few hours in rust penetrating oil or equivalent.

The stainless steel tube coming out of the sensors should not twist as you loosen the sensor. If it twists, **STOP NOW**. Do not bend, tweak or twist this tube or you'll find yourself at the dealership buying a replacement.

Short bed models:

Remove the two emissions sensors using a 17mm wrench. Move the sensors out of the way. They will be reinstalled into the Banks Monster Exhaust.

WARNING! The following step will require the use of a saw. Proper safety equipment should be used. Failure to use proper safety equipment may result in severe injury.



Cut exhaust here

4. Measure from the front of the exhaust hanger, as shown, toward the DPF.

Take time when measuring and cutting the factory pipe to ensure the proper location and a straight cut. An improper cut will result in poor fitment.

Cut the factory exhaust pipe behind the Diesel Particulate Filter (DPF).

NOTE: *Lubricating the rubber hangers with WD-40 or similar lubricant will ease the removal of the hanger pins*

Additional will ease the removal of the hanger pins.

5. Remove the factory tailpipe from the vehicle.

Disengage the exhaust system hanger pins from the rubber hangers using a large screwdriver, pry bar or hanger removal tool sold in any auto parts store.

6. Slide a 4" exhaust clamp onto the front of the Banks front tailpipe.

Install the front tailpipe onto the cut factory pipe.

Loosely snug the 4" clamp & sensors.

7. Install a 5" exhaust clamp onto the inlet of the Rear Tailpipe & Install the Rear Tailpipe onto the outlet of the Front Tailpipe.

Insert the Rear Tailpipe hanger pin into the factory rubber hanger

★ REVIEWS

hanger.

Rotate the tailpipe until the hanger pin is parallel with the frame mounted pin. Loosely snug the 5" clamp.

8. Engage the factory rubber hangers onto the hanger clamp pins.

NOTE:

Maintain an adequate air gap clearance of one (1) inch between the exhaust and the shock absorber and between the exhaust and the spare tire.

9. Reinstall the NOx sensor.

Use a 24mm wrench.

10. Long bed models:

Use the supplied plugs to seal the factory ports on the Banks front tailpipe.

★ REVIEWS

NOTE:

The supplied sealing washer must be installed onto the larger 16mm plug before installing to prevent the plug from bottoming out.

11. Short bed models:


Reinstall the two emissions sensors into the new front tailpipe using a 17mm wrench.

12. Install Banks SideKick exhaust tip with band clamp on the exhaust.

Keep the protective wrapping on until installation is complete.

NOTICE:

The minimum distance between exhaust tip and body is one (1) inch.



13. Adjust each of the pipes to ensure that all of the hanger pins

★ REVIEWS

are parallel with the frame-mounted pins.

Check that the rubber hangers are all positioned slightly forward, leaning at a similar angle as your seatback. This allows the hangers to be properly positioned once the exhaust system reaches operating temperature.
Fun fact: Your Monster Exhaust may grow more than 1" in length when it gets hot.

14. This image illustrates the proper location of an exhaust clamp on a tubing joint.

15. Tighten all clamps to 50 ft-lbs.

With everything positioned properly, begin to tighten the clamps starting with the ones closest to the turbo and working your way back.

16. Remove the protective covering from the tailpipe tip.

★ REVIEWS

CAUTION: The protective covering may ignite and burn if not removed prior to running the engine.

17. Your system includes two Banks Power decals designed to complement the Duramax emblems on the vehicle's front doors.

18. Re-connect the negative battery cable(s).

Start the engine and listen for exhaust leaks. Tighten the exhaust clamps as necessary. Whenever possible, tack weld slip connections to prevent disengagement is recommended. The Banks Monster Exhaust installation is now complete.

← 96425 Monster-Ram Intake with Banks Boost Tube for 2003-07 Dodge 5.9L Cummins 96434 Torque Tube System for Jeep 4.0L →

NEED HELP? Call **800-601-8072** from 7am-5pm Pacific.

Latest Videos

View All

▶

Subscribe to Banks Power channel

How Not To Drive A 1,400HP Trans-Am | Speed School Podcast Ep 2

Pics or it didn't happen!



bankspower

Turbochargin' since '58. #bankspower
#banksbuilt #houseofhorsepower
#galebanks

▶

Load More...

Follow us on Instagram

★ REVIEWS

★ Popular

↺ Recent

6.6L Crate Engine

Derringer LSP Tuner for the 2017-2019 Duramax: Real Power is here!

Owners Manuals

Changing Times: GM's Push To Make LSP Duramax Un-Crackable

World's Fastest Production Car | Speed School Podcast with Gale Banks Ep 1

I've raced & built engines since '56. Since '65 my favorite performance tool has been the turbocharger, I boosted my first diesel in '78, set a few records too!

Our mission is to improve performance, durability and the driving experience, all without compromising emissions requirements.

Gas & Diesel Performance for Cars, Trucks, Jeeps and Motorhomes
Copyright © 2022 Gale Banks Engineering. All rights reserved.

Questions?
Ask us anything.
Power... Durability...
Efficiency! You want it, we
have it!! Nobody knows it
better than us.

Privacy Policy

Sitemap

Contact Us

Call 800-601-8072
Mon-Fri 7am-5pm
Pacific Time

Send us a message

Fax 626-691-2122

546 S Duggan Avenue
Azusa, CA 91702

Map/Directions

Looking to buy Banks?

800-601-8072
CALL, ORDER OR EMAIL US

800-601-8072
CALL, ORDER OR EMAIL US

Shop online 24/7

or visit our PowerHouse

