

[034Motorsport Turbo Inlet, MQB I4](#)**034 MOTOR SPORT**

034Motorsport's Turbo Inlet is an essential upgrade to optimize power by eliminating a critical flow restriction in the intake tract. Engineered with performance in mind and manufactured from powder coated aluminum, for strength, light weight, and long lasting reliability.

***Be sure to clean out any intake related components to remove any possible contaminants.**

Installation Spiciness Rating: MILD

Installation of your 034Motorsport Turbo Inlet is a straightforward process that will take approximately 30 minutes to complete.

Supplied Parts:

- 034Motorsport Turbo Inlet
- M8 socket head cap screw

Tools Needed:

- T30 Torx
- T25 Torx
- Phillips head screwdriver
- 6mm Allen wrench

About This Guide

This Install Guide documents the installation process on a 2015 Audi S3, a 2015 and a 2018 VW Golf GTI. There may be minor differences with other vehicles, depending on specific vehicle, market, options, etc.

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

customerservice@034motorsport.com


Step 1

Open your hood to access the intake.



Step 2

Using a Phillips head screwdriver, or appropriate socket, loosen the hose clamp holding the intake to the turbo inlet.

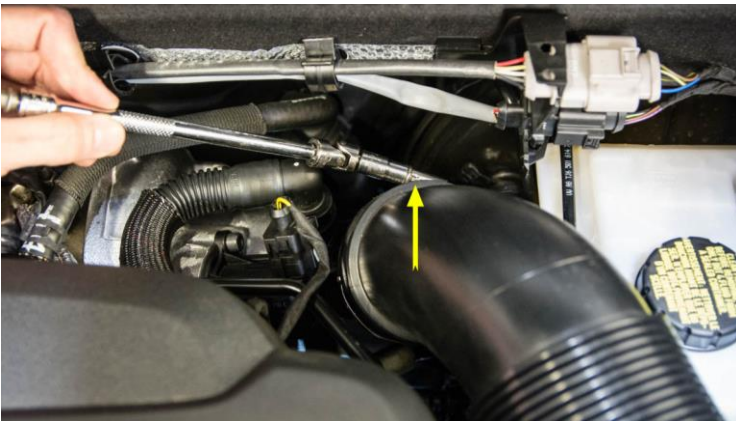

Step 3

Remove the breather hose from the left side of the airbox.



Step 4

Using a T25 Torx, remove the upper airbox screws.



Step 5

Remove the upper airbox.



Step 6

Using a T30 Torx, remove the screw holding the OE turbo inlet.



Step 7

Take hold of the turbo inlet and turn clockwise to disengage from turbo.



Step 8

Disconnect breather hose from inlet. It will be either a pinch type connector, or a friction snap-on. The pinch connector is easy to remove, while the friction snap-on will require effort; pulling while simultaneously rocking the connector is usually the best way to remove.



Step 9

Apply a small amount of Blue Loctite to the supplied M8 socket head cap screw.



Step 10

Connect the breather hose to the 034motorsport turbo inlet (it will click in).

Step 11

Install the 034Motorsport Turbo Inlet. Torque the M8 screw to **9NM**.




Step 12

Using a T25 Torx bit, reinstall the upper airbox.



Step 13

Connect airbox tube to turbo inlet and tighten the hose clamp.

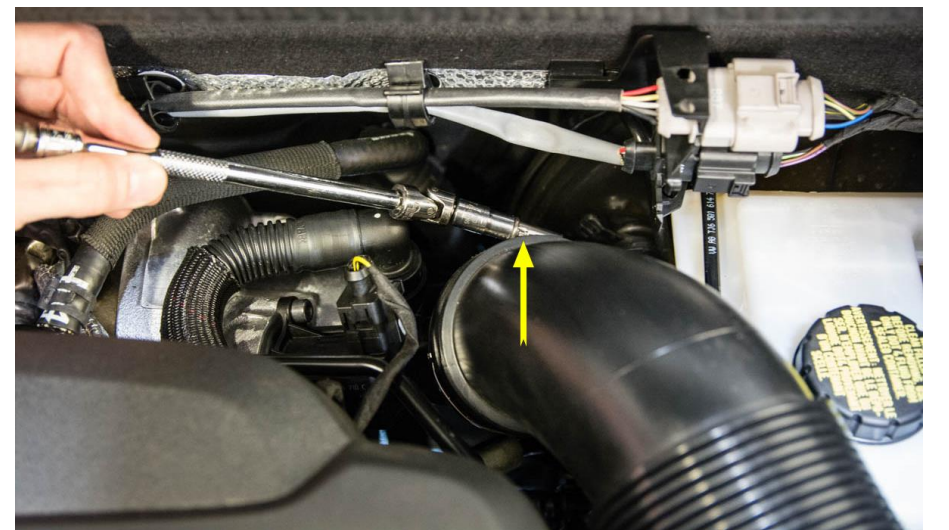

Step 14

Reconnect the breather hose on left side of airbox (disconnected in Step 3)

**Step 15**

Reinstall engine cover.

**Step 16**

Close the hood and enjoy the performance of the 034Motorsport Turbo Inlet!