

034Motorsport High Flow Throttle Body Intake Hose, 4M  
Audi Q7 3.0 TFSI

**034 MOTORSPORT**

Reduce flow restriction and enhance supercharger sounds and performance with the 034Motorsport High Flow Throttle Body Intake Hose for the 4M Audi Q7 3.0 TFSI! This upgraded intake hose is designed to replace the restrictive corrugated plastic unit and integrated intake silencer and features a larger cross-sectional area and smooth insides for higher flow and increased performance.

Installation Spiciness Rating: MILD



The installation of your 034Motorsport Intake is a straightforward process that will take approximately 15 minutes to complete.

**Supplied Parts:**

- 034Motorsport Intake Hose
- Vacuum Line Adapter
- (2x) Hose Clamps

**Tools Needed:**

- 7mm Socket
- 8mm Socket
- Flat-Head Screwdriver

About This Guide

This Install Guide documents the installation process on a 2018 Audi Q7. There may be minor differences depending on specific vehicle, market, options, etc.

## Getting Started


Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

[techsupport@034motorsport.com](mailto:techsupport@034motorsport.com)

## Install Steps

### **Step 1**

Open your hood to access the intake system.

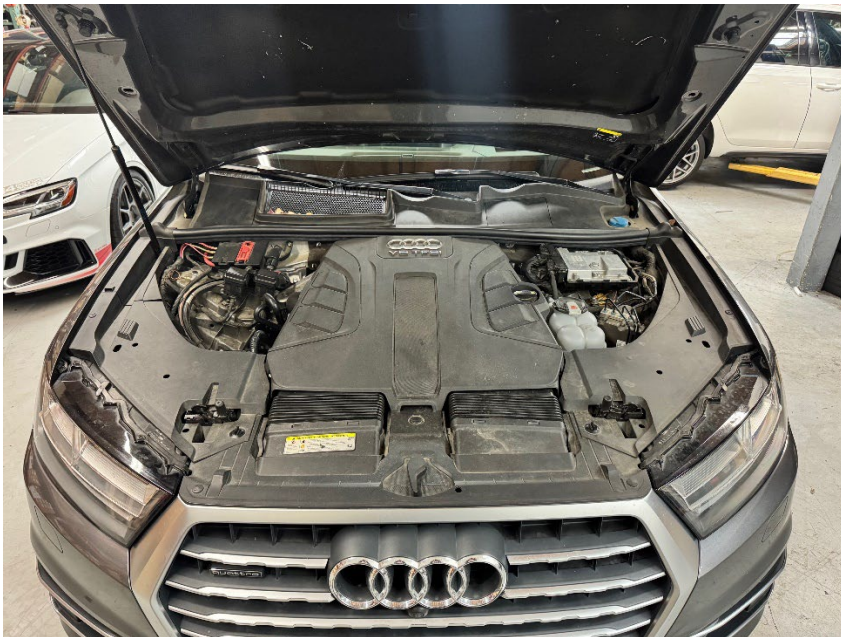

### **Step 2**

Remove the engine cover and heat shield to expose the turbo inlets.




### **Step 3**

Loosen the two intake hose clamps using flathead or 8mm socket.



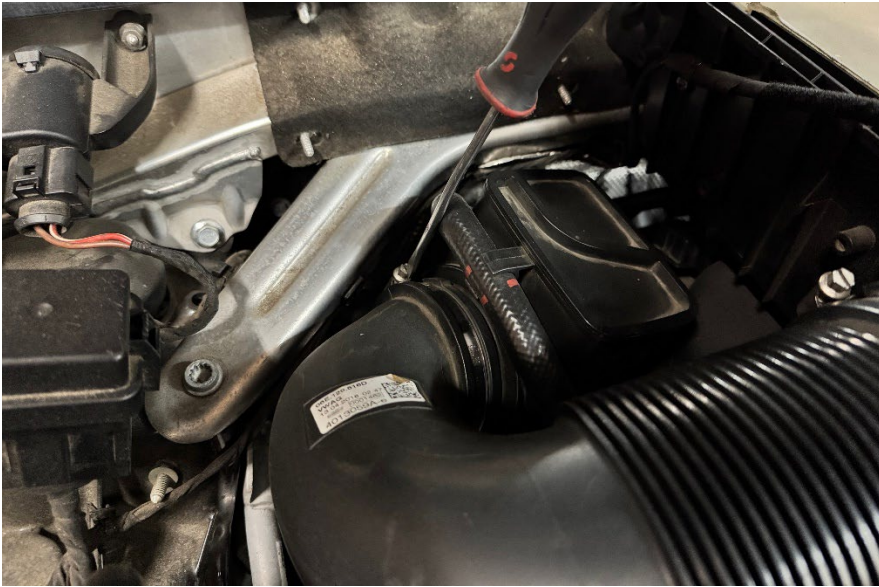

**Step 4**


Use a 8mm socket to loosen the clamp securing the intake muffler to the throttle body.

**Step 5**

Remove the intake muffler from the throttle body.

**Step 6**

Install your 034 intake hose and secure both clamps with a 7mm socket. Install the vacuum line onto the vacuum line adapter.

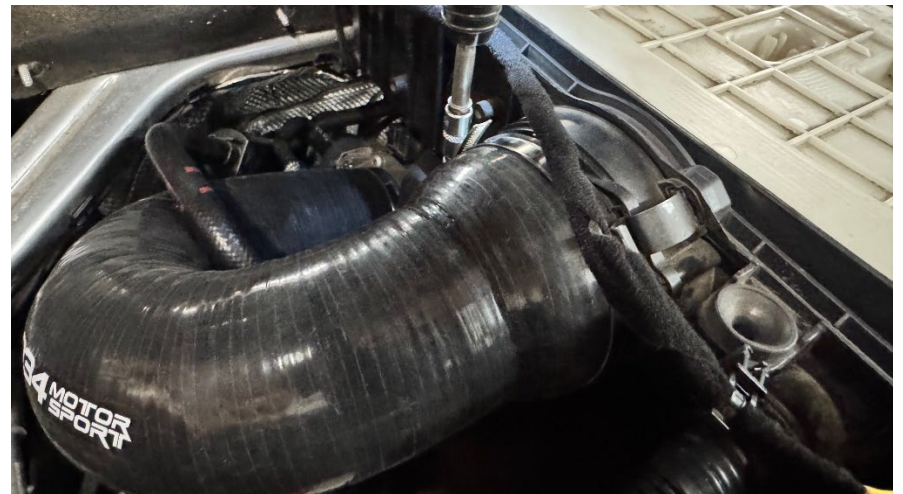



**Step 7**

Reinstall the engine cover.

**Step 8**

Rest easy, knowing that your car now breathes easier than you ever will! Gently close the hood and enjoy your power gains and supercharger noises!

