




**ADVENTURE
FURTHER®**

FLEX ERA 3 FOG LIGHT MOUNT
07-17 JEEP JK WRANGLER | 18-22 JEEP JL JT
FOR OEM PREMIUM BUMPER - #7472, #97146

INSTALLATION INSTRUCTIONS

IMPORTANT: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner.

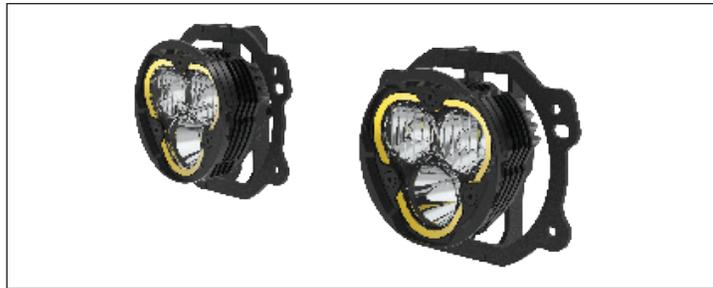

07-17 JEEP JK STANDARD (SPORT, SPORT-S) | 2018-2022 JEEP JL, JT, PREMIUM PLASTIC BUMPER (SAHARA)

ASSEMBLY INSTRUCTIONS

TOOLS NEEDED:
METRIC ALLEN KEY SET

- 1**
- 2**
REMOVE SCREWS AND WASHERS
- 3**
THE BRACKETS ARE THE SAME FOR BOTH DRIVER & PASSENGER
- 4**
POSITION SERRATED LOCK WASHER BETWEEN BRACKET AND HOUSING TO ENSURE THAT THE HOLES ARE ALIGNED TO HOUSING
- 5**
POSITION BRACKET BRACKETS OVER SERRATED WASHERS
- 6**
LOOSELY SECURE BRACKET & LOCK WASHER TO HOUSING (FOR FINAL ANGLE ADJUSTMENT)
- 7**
LOOSELY SECURE HARDWARE MOUNTING ON OTHER SIDE.
- 8**
FIRMLY SECURE BRACKET & LOCK WASHER TO HOUSING (LEAVE LOOSE FOR FINAL ANGLE ADJUSTMENT)
- 9**
(PASSENGER SIDE) (DRIVER SIDE)
POSITION THE SHROUDS SO THAT THE TRIANGULAR OPENING MATCHES THE FRONT PROFILE OF THE LIGHT.
- 10**
(PASSENGER SIDE) (DRIVER SIDE)
SIMPLY SNAP THE SHROUDS INTO POSITION


LIGHT INSTALLATION INSTRUCTIONS

TOOLS NEEDED:
PHILIPS SCREWDRIVER



1. USING THE FACTORY HARDWARE, SIMPLY ALIGN THE FOG LIGHT AND FIX INTO POSITION.
2. WITH THE FOG LIGHT ASSEMBLY INSTALLED, USING THE LIGHT MOUNTING SCREWS, FIND THE DESIRED PITCH ANGLE AND FIRMLY SECURE THE LIGHT IN PLACE.

HARNESS ADAPTER INSTALL - #30546

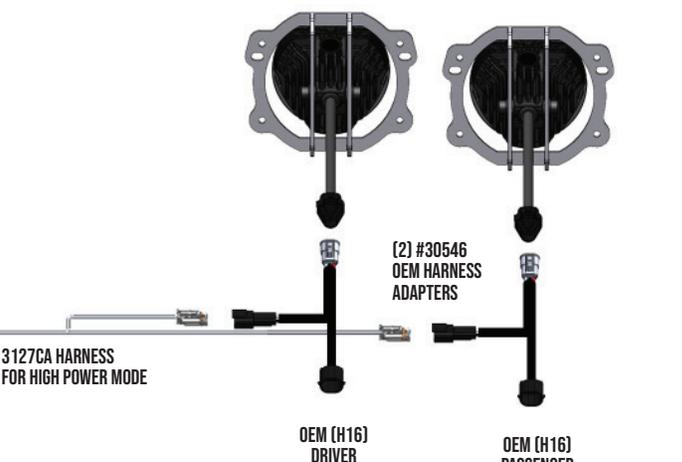

3127CA HARNESS FOR HIGH POWER MODE

(2) #30546 OEM HARNESS ADAPTERS

OEM (H16) DRIVER

OEM (H16) PASSENGER