



## 44-8084, 44-8085 GMC, 1500 (19-On), Fog Pocket Kit



185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

info@bajadesigns.com • [www.bajadesigns.com](http://www.bajadesigns.com)



**baja designs**<sup>®</sup>  
*The Scientists of Lighting*

## LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

### **Exclusions:**

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

### **Indemnification:**

**Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies**

## **Tools Required**

- \* T-10 Torx Bit
- \* Pliers
- \* 7mm, 7/16" Socket
- \* 7/16" Wrench

1. Using a T-10 torx bit, remove the 4x bolts securing the splash guard. Pull the splash guard to the side exposing the fog light.





2. Using a 7mm socket, remove the 3x fasteners securing the fog light. Unplug the fog lights connector.

3. At the top of the fog light mount is a small plastic guide tab. Using any type of snips, trim the tab off so the surface is flush with the U-nut.




4. Install the S1's into the bracket as shown.

5. Place the bracket onto the OEM mount. Place the supplied spacer in between the bumper and bracket on the mount shown. On the same mount, use the supplied screw instead of the OEM fastener.

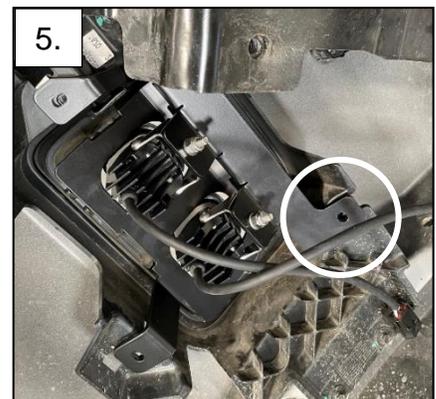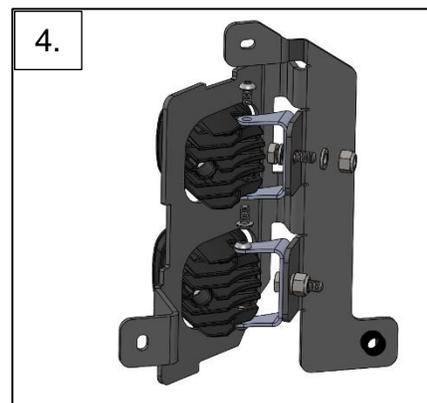



6. Plug in the supplied 1 → 2 splitter harness into the top fog light. Plug in the supplied 2 → 1 Anti-Back feed Splitter into the bottom fog light. Plug in both splitter harnesses together. Plug in the OEM fog light connector into the 2 → 1 Anti Back feed Splitter.

7. Attach the red terminal on the main harness to the battery positive. Attach the black terminal to the nearest chassis ground. Route the main harness from the battery down to each side of the vehicle. Connect the main harness to the 1 → 2 Splitter harness.

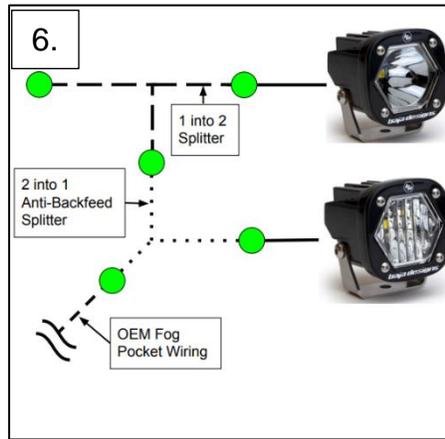


8. Take the supplied trigger harness and remove the toggle switch. Replace the toggle switch with the jumper plug. Remove the toggle switch from the main harness. Attach the trigger harness to the main harness.

9. Locate the head light connector on the back side of the passenger side headlight. Un-plug the connector.

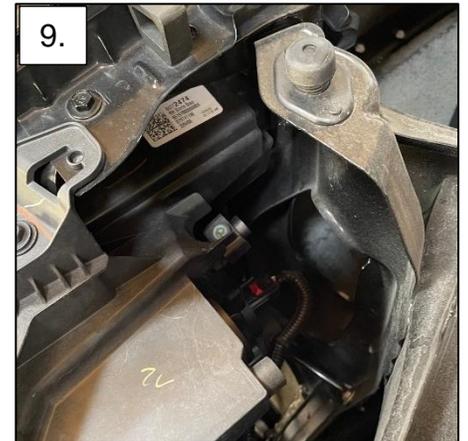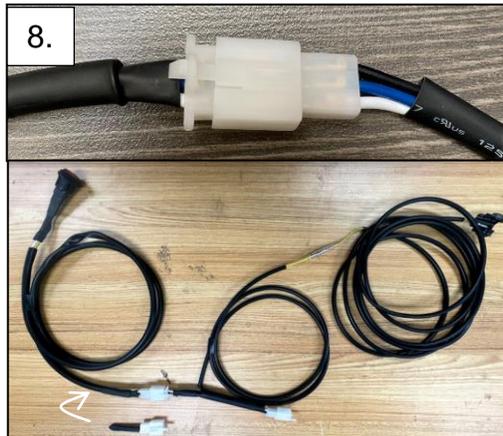

10. Locate the high beam wire. It will be the wire connected to the top left port when the release tab is located on the top. Take the clasp connector on the trigger harness and place it over the wire. Using pliers, force the splice connector shut.

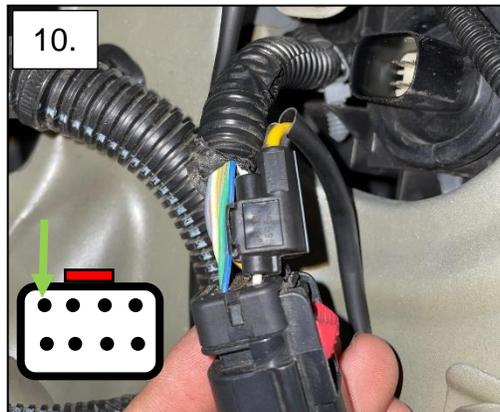

\*Tie all wires away from sharp, hot, and/or rotating components.

\* Re-torque all the fasteners after 100 miles.

\*Your install is now complete! Thank you for choosing Baja Designs.