

POLARIS RZR® PRO SERIES
RIDE COMMAND
STAGE 6 STEREO KIT
UTVS-PRO-S6-RC



COMPATIBLE VEHICLE:
RZR® PRO SERIES

INCLUDED IN THE KIT

- UTV Stereo RZR Pro Series Ride Command Stage 6 Kit
- UTV Stereo Polaris RZR Pro Series Ride Command Front & Rear RCA Output with Speaker Wire & Remote
- UTV Stereo Subwoofer Level Controller with a Rocker Switch Housing
- UTV Stereo Polaris RZR Pro Series Single Color Tweeter LED Harness
- UTV Stereo Pro Series 6.5" Speakers (Pair)
- UTV Stereo Pro Series Tweeter with built-in smoked LED Rings (Pair)
- UTV Stereo Elite Series 5 Channel Amplifier
- UTV Stereo Polaris RZR Pro Series Firewall Amplifier Mount
- UTV Stereo 8AWG Amp Power Harness for Installation
- UTV Stereo Flex 10" Elite Series Subwoofer 1 OHM, Dual Voice Coil
- UTV Stereo Polaris RZR Pro Series 10" Vented Sub Enclosure
- UTV Stereo Amplifier to Single Subwoofer Wire Harness
- UTV Stereo Wire Harness Kit
- UTV Stereo RZR Pro Series Stage 6 Ride Command Kit

We want to make sure that your system is installed and tuned correctly. We are here to help!
Reach out to us at info@utvstereo.com or call us at 480.616.2299

INSTRUCTIONS

FOLLOW INSTRUCTIONS TO INSTALL
YOUR UTV STEREO STAGE KIT



Each individual part has its own specific install instructions and/or install video that can be found on that particular items page at utvstereo.com Use this resource to install each part individually.

Step 1: Run 86" Power Harness(es) from Battery through center console. Remove shift knob plastic housing to run wire through the rubber grommet. Leave battery disconnected. ***Pre Install optional LED Power Harness for RGB Activation.**

Step 2: Remove Upper Dash Panels

Step 3: Install Firewall Amplifier Mount and Amplifiers (Reference [Firewall Amplifier Mount Instructions](#)).

Step 4: Locate OEM amplifier in dash and unplug the factory harness. Remove factory amp. Plug pro RCA Out Harness into OEM Plug. (Reference [Pro Series RCA Out Harness Instructions](#))

Step 5: In the dash, locate the blue OEM Sub Out Plug and Plug in Rocker Switch Bass Knob (Reference [Rocker Switch Bass Knob Instructions](#)).

Step 6: Remove all OEM speaker enclosures: rear, dash, & tweeters. Unload OEM speakers.

Step 7: Install 10" vented dash subwoofer into enclosure. Once enclosure is secure, mont subwoofer into enclosure. (Reference [Pro Series 10" Vented Dash Enclosure Instructions](#))


Step 8: Install Pro 6.5" Speakers into front dash pods(2) and install into OEM Locations.

Step 9: Install Tweeters into OEM Location. ***Connect optional LED Power Harness for RGB Activation.** (Reference [Tweeter Manual](#))

Step 10: Wire Pro 6.5" Speakers into (Un-Mounted) Rear Pods. (Reference [Pro Series 6.5" Speaker Manual](#))

Step 11: Make Connections and Install (Loaded) Rear Pods(2).

Step 12: Connect Power Harness to Amplifier(s) and tune your system. ([Reference Page 3](#)).

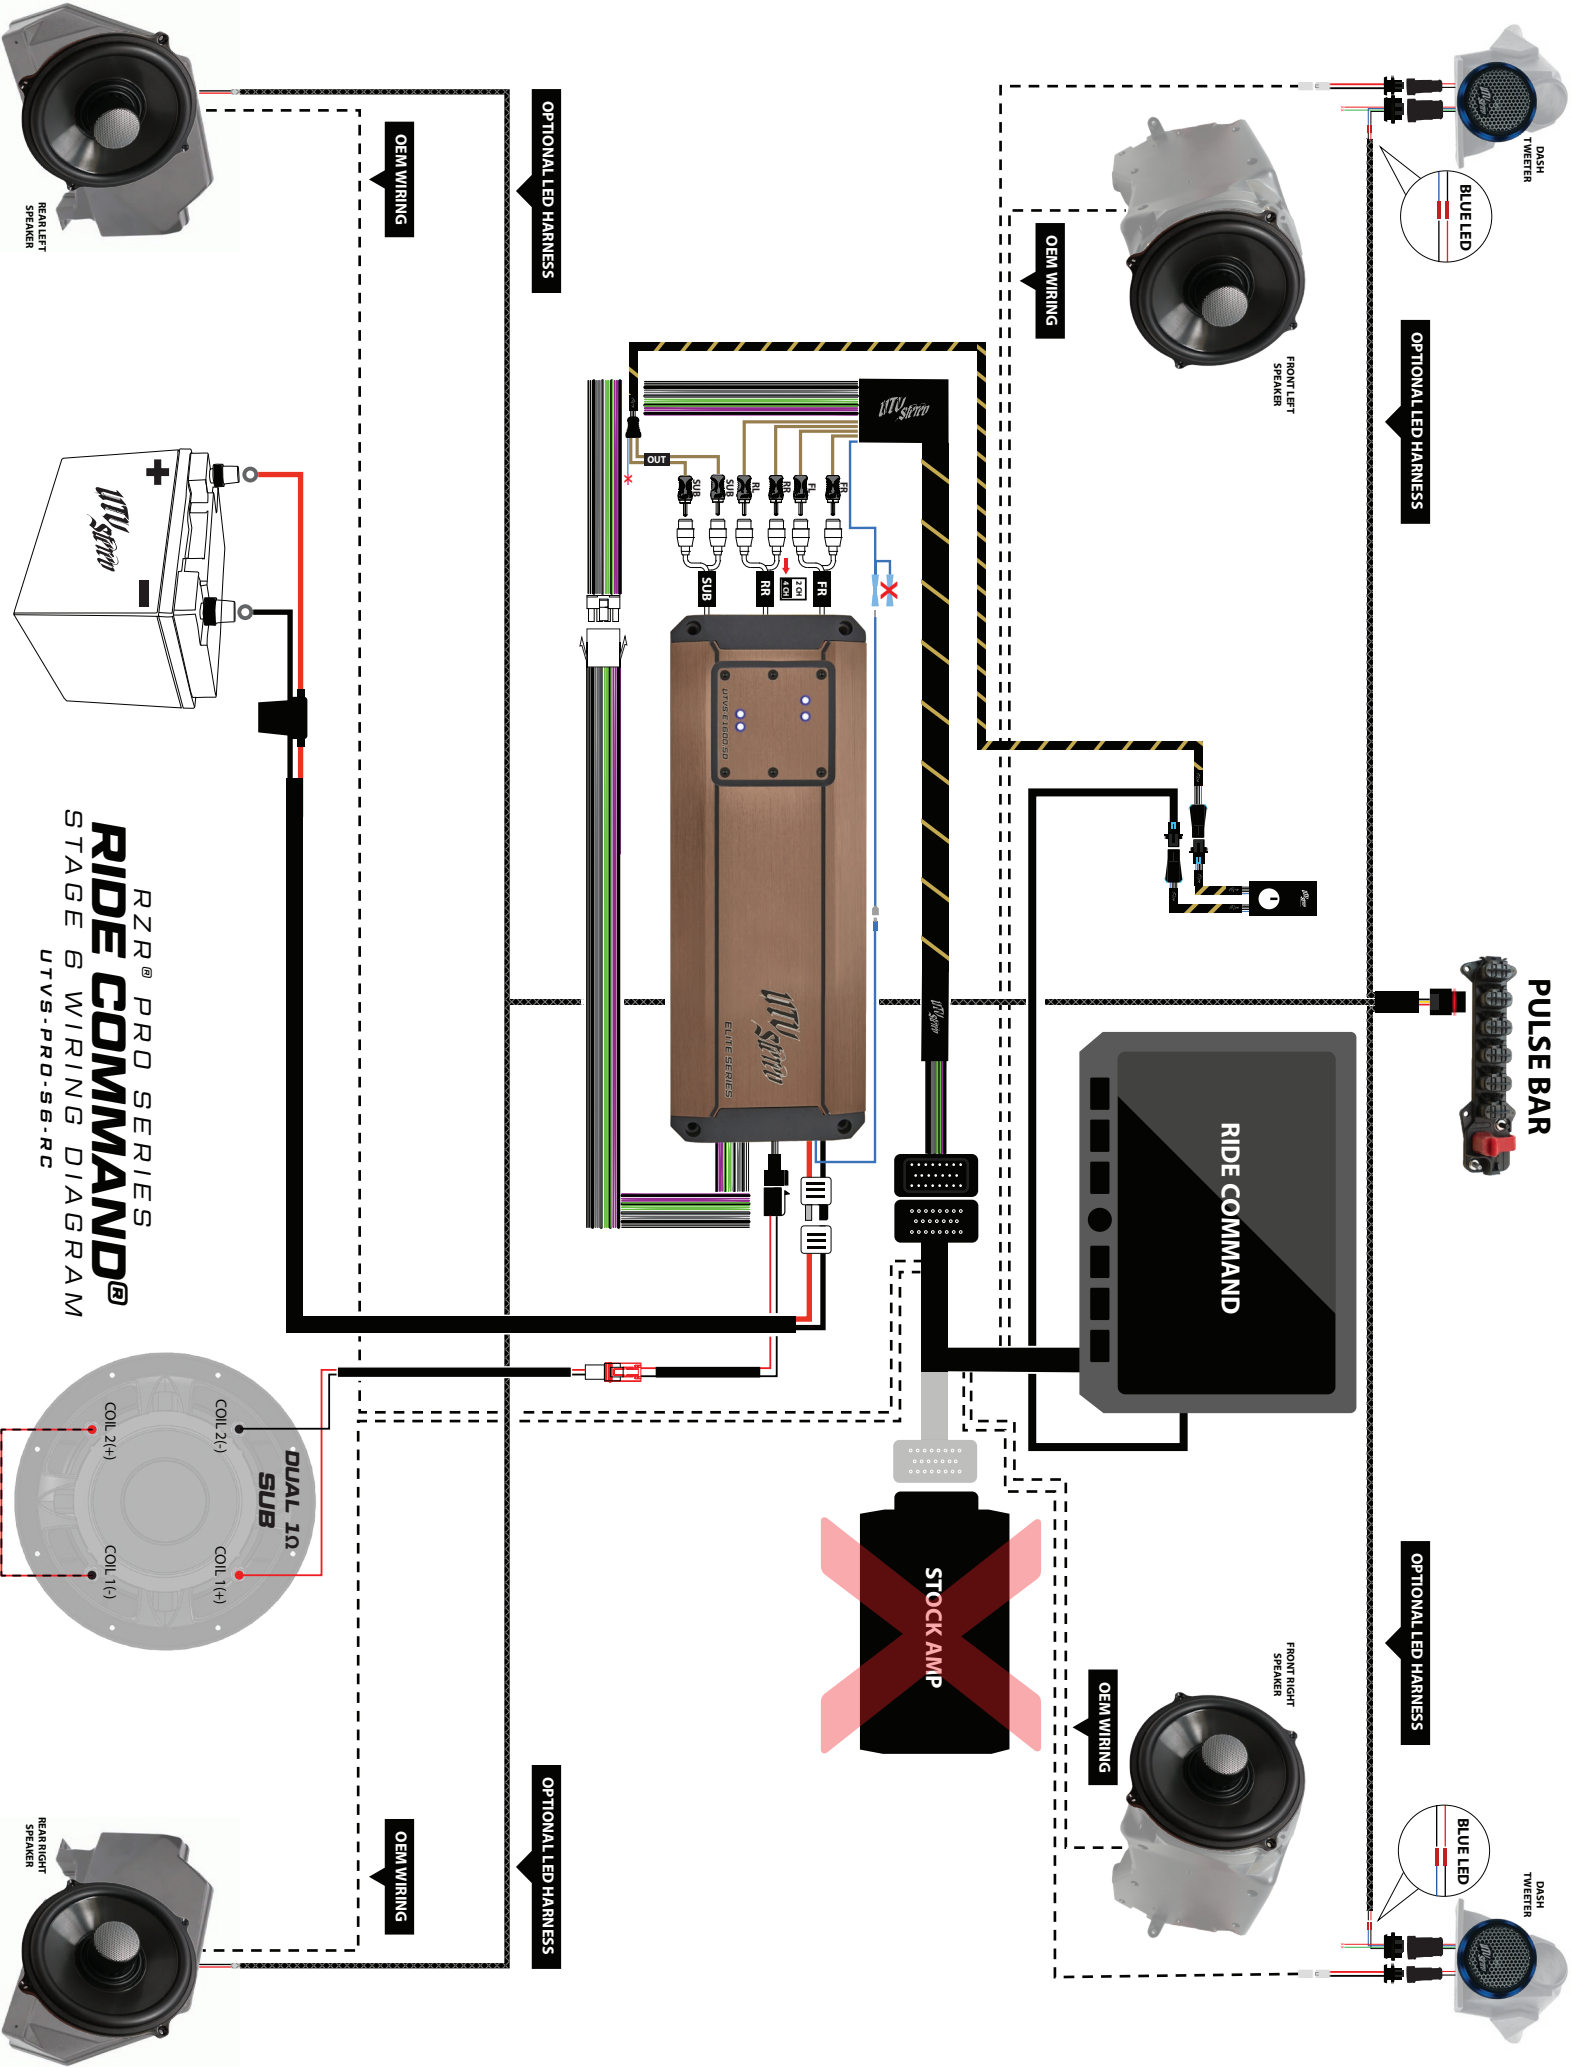


RZR® PRO SERIES
RIDE COMMAND®
STAGE 6 WIRING DIAGRAM
UTVS-PRO-S6-RC

TUNING YOUR SYSTEM

THIS WILL SHOW YOU EXACTLY WHERE TO SET THE
ADJUSTMENTS OF YOUR AMPLIFIER(S) USE THESE
SETTINGS FOR OPTIMAL PERFORMANCE!

ELITE SERIES UTVS-E1600.5D

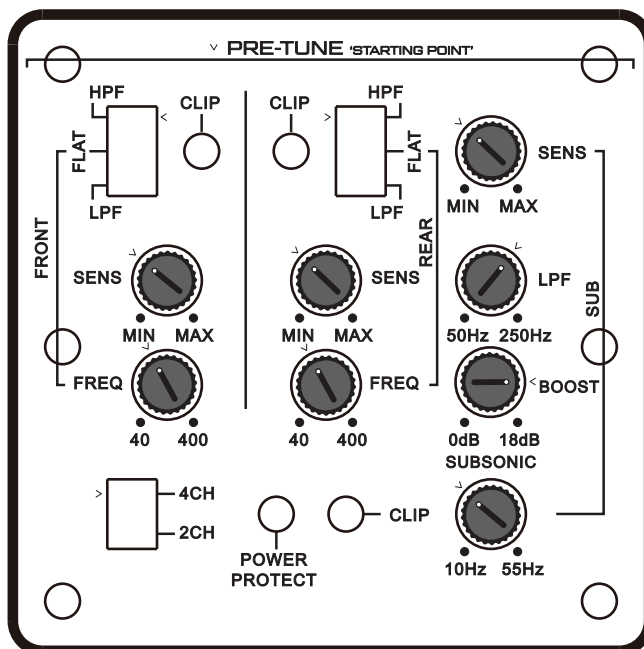

TUNING BLUEPRINT 'STARTING POINT' ►

1. Cut out the image along the red outline.
2. Align the cutout image with the amplifier tuning panel
3. Make your adjustments

