

Thank you for purchasing this Dynojet kit. This kit has been developed for a motorcycle which is set to the parameters listed at the right in the "Stage" description. If your motorcycle does not meet any of these parameters please check with Dynojet before installation. For technical assistance contact your Dynojet distributor or call Dynojet U.S.A. (800)-992-4993

2191 Mendenhall Dr. Suite 105
North Las Vegas, NV 89031
TEL: 702-399-1423
FAX: 702-399-1431
8am-5pm Pacific Time
Monday through Friday

Website Address
<http://www.dynojet.com>

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.

Dynojet


2174.002

U.S Models Only

2000-03 Kawasaki ZR750

Stage 1

For mildly tuned machines using the stock air-box, with stock or K&N filter. May also be used with a good aftermarket exhaust system
K&N filter #KA-0850

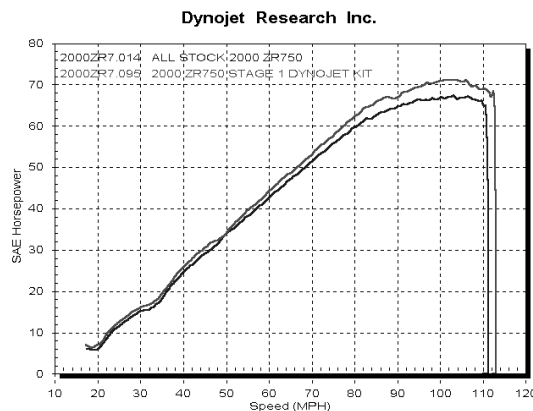

This graph shows a typical gain with a Dynojet jet kit.

WARNING

**NO SMOKING!
NO OPEN FLAME!
WHILE INSTALLING
YOUR DYNोजET KIT**

Parts List

4	Main Jet	DJ098
4	Main Jet	DJ100
4	Main Jet	DJ102
4	Main Jet	DJ104
4	Main Jet	DJ106
4	Fuel Needles	DNO106S
4	Slide Springs	DSP031
4	E-Clips	DE0001
8	Adjusting Washers	DW0001
1	Plug Drill	DD #5/32
1	Screw	DS0001

STAGE ONE INSTRUCTIONS

Dynojet

2174.002

1. Remove vacuum slides from carbs. Remove stock needles and spacers, noting order of assembly (Fig.A).
2. Install the Dynojet needles on groove #3 from the top. Use all stock spacers (Fig. A). Install the small Dynojet washers above the E-clip (2 per needle). **NOTE:** For racing or hard street driving install the Dynojet slide springs (DSP031) in place of the stock slide springs for better throttle response. After installing the slides in the carbs be sure to check slide movement manually.
3. Remove the stock main jets and replace with the Dynojet main jets provided. If you are running the stock exhaust install the DJ098 main jets. If you are running an aftermarket exhaust with high flow baffle use the DJ102 main jets. Be sure that the jet you are changing is the main jet. **NOTE:** If using a K&N filter use the DJ100 main jets with the stock exhaust and the DJ104 main jets with an aftermarket exhaust with high flow baffle.
4. Locate the fuel mixture plug (Fig. B). If you see a screw head at Fig. B then proceed to the adjusting procedure. With the 5/32 drill bit provided carefully drill through the plug. **NOTE:** The mixture screw is directly underneath this plug, be ready to pull back on the drill the instant you break through. Use screw provided to secure and remove this plug. Carefully turn the mixture screw clockwise until lightly seated, then back out 2 turns.

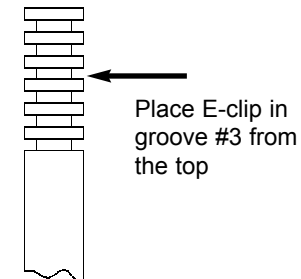


Fig. A

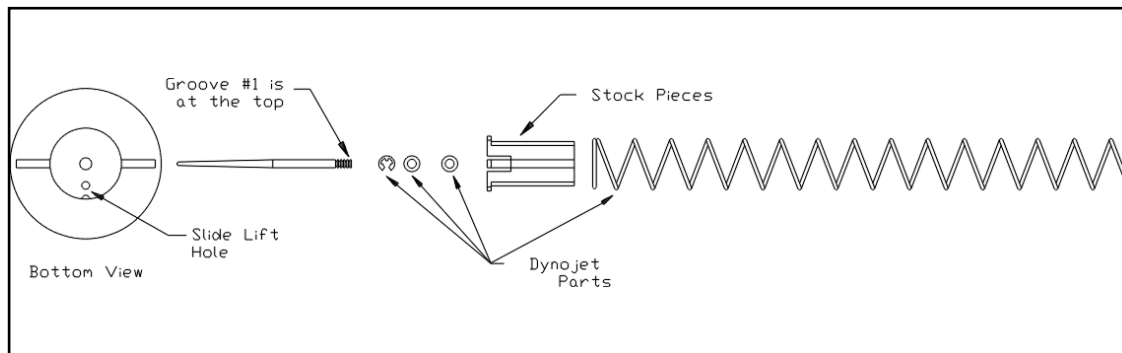


Fig. B

