

Thank you for purchasing this Dynojet kit. This kit has been developed for a motorcycle which is set to the parameters listed at the right in the "Stage" description. If your motorcycle does not meet any of these parameters please check with Dynojet before installation. For technical assistance contact your Dynojet distributor or call Dynojet U.S.A. (800)-992-4993

2191 Mendenhall Dr. Suite 105
North Las Vegas, NV 89031
TEL: 702-399-1423
FAX: 702-399-1431
8am-5pm Pacific Time
Monday through Friday

Website Address
<http://www.dynojet.com>

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.



2185CA.001

California Models Only

1998-99 Kawasaki ZX-9R

Stage 1

For mildly tuned machines using the stock airbox, with stock or K&N filter. May also be used with a good aftermarket exhaust system
K&N filter #KA-0021



This graph shows a typical gain with a Dynojet jet kit.

WARNING

**NO SMOKING!
NO OPEN FLAME!
WHILE INSTALLING
YOUR DYNOJET KIT**

Parts List

4	Main Jets	CJ138
4	Main Jets	CJ142
4	Main Jets	CJ146
4	Main Jets	CJ150
4	Fuel Needles	DNO308
8	Adjusting Washers	DW0001
4	E-clips	DE0001
4	Main Air Correctors	DCO200
1	Tool	DT001
1	Plug Drill	DD #5/32
1	Screw	DS0001

STAGE ONE INSTRUCTIONS

1. Remove the vacuum slide from the carbs. Remove the stock needles & spacers, noting the order of assembly.

2. Install the Dynojet needles on groove #4 from the top, using all stock spacers. Install the Dynojet washers (2 per needle) above the E-clip.

3. Remove the velocity stack plate and locate the main air jet passage (Fig.A). With the flat end facing into the carb, install the main air correctors (DCO200) provided. Use the tool (DT0001) provided to tap lightly in place.

4. Remove the stock main jets and replace with the Dynojet main jets provided. If you are running the stock exhaust use the CJ142 main jets, if you are running an aftermarket header or slip-on with high flowing baffle, use the CJ146 main jets. Be sure that the jets you are changing are the main jets.

5. Locate the fuel mixture plug (Fig. B), if you see a screw head at Fig. B proceed to adjusting procedure. With the DD #5/32 drill bit provided, carefully drill thru the plugs. NOTE: the mixture screw is directly underneath this plug, be ready to pull back on the drill the instant you break thru. Use screw provided to secure and remove the plug. Carefully turn mixture screws clockwise until they seat, turn out 3 turns.

DYNOJET

2185CA.001

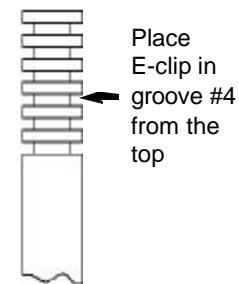


Fig. A

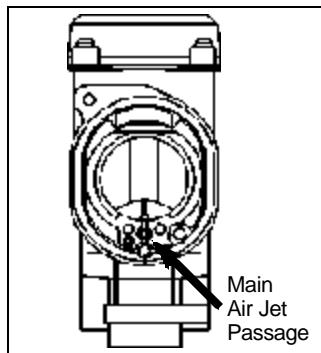


Fig. B

