

DOMINUS ECU

Install guide for 90900001

Model coverage:
Can-Am Maverick X3

PARTS LIST



- 1 DOMINUS ECU
- 1 INSTALLATION GUIDE
- 2 DYNOJET DECALS

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION.
THE IGNITION MUST BE TURNED OFF BEFORE INSTALLATION.



I90900001.01




INSTALLING THE DOMINUS ECU




- 1 Remove the driver's side front seat. Remove the rear seat if on a four-seater.

Slide the seat all the way forward and remove the two nuts at the rear of the seat.

Remove the two bolts at the front of the seat.
- 2 Remove the panel covering the ECU behind the seat.

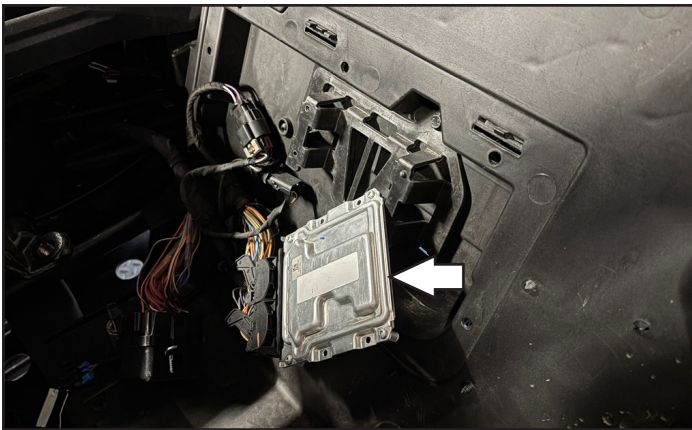

- 3 Remove the three small screws securing the ECU. Save these screws if you may want to reinstall the stock ECU at a later date.

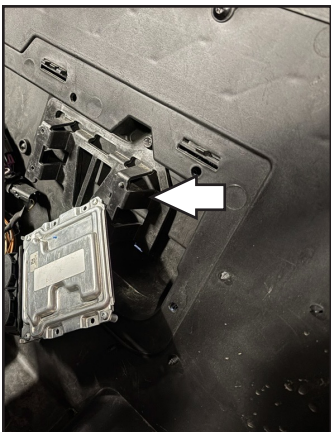

- 4 Remove the two 10mm screws securing the mounting standoff behind the ECU.

Keep the two screws for installing the Dominus ECU.

- 5 Attach the two ECU connectors from the main harness.
- 6 Using the two screws removed earlier, install the Dominus ECU.
- 7 Replace the cover panel.

This cover is a tight fit. If needed, a small hole can be drilled in the panel to clear the small silver screws of the Dominus enclosure.
- 8 Reinstall the seat(s).





TRUTH IN PERFORMANCE

200 ARDEN DR. BELGRADE, MT. 59714 - 800-992-4993 - DYNOJET.COM
© 2025 DYNOJET RESEARCH ALL RIGHTS RESERVED