



# **KR175** 2001-2010 Death Grip Idler Arm Support

## Installation Instructions


WARNING! Please read and understand these instructions completely before installation to avoid possible injury to yourself or damage to the parts or your vehicle.

1. Remove the front heat shield, set it aside.
2. Disengage the idler arm by loosening the large nut at the bottom end of the OEM unit, then separate using a large mouth tie rod puller tool.
3. Remove the nut, lock washer, and idler arm, set aside the idler arm and hardware, next remove idler support hardware
4. Install your new Kryptonite Idler Support using the supplied 22mm Hardware (3.5" M14x2). Torque to 100 ft. lbs.
5. Reassemble the idler arm to your new Kryptonite Idler Support using new lock washer and nut. Torque to 100 ft. lbs.
6. Have a professional alignment performed after replacement or modification of any steering and suspension component.

\*See reverse for Hummer H2 Instructions

# Hummer H2 Installation Instructions

1. Remove the front heat shield, set it aside.
2. Disengage the idler arm by loosening the large nut at the bottom end of the OEM unit, then separate using a large mouth puller.
3. Remove the nut, lock washer, and idler arm, set aside the idler arm and hardware, next remove idler support hardware
4. Modifications will need to be made to your factory idler mount to fit your new Idler Support (See images below)
5. Install your new Kryptonite Idler Support using the supplied 5/8" Grade 8 Hardware. Torque to 100 ft. lbs.
6. Reassemble the idler arm to your new Kryptonite Idler Support using new lock washer and nut. Torque to 100 ft. lbs.
7. Have a professional alignment performed after replacement or modification of any steering and suspension component.

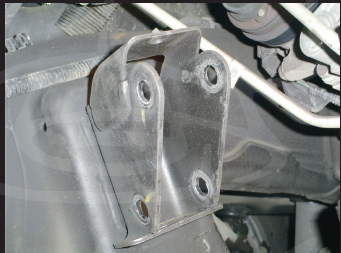

A. Factory bracket  
before modification



B. Modified idler support  
bracket for fitment of  
your new Death Grip  
Idler Support