




Kryptonite 2011+ Shock Extension Installation


WARNING! Please read and understand these instructions completely before installation to avoid possible injury to yourself or damage to the parts or your vehicle.

1. Park the truck on a clean level surface put the vehicle in park and chock the rear tires.
2. Lift the front of the truck up with a jack and support it with jack stands. Removing the front tires will provide more workspace.
3. (If **stock shocks are to remain in place**) Loosen the bolts on the top of the shocks; once free compress the shock enough to install the two spacers.
4. Bolt orientation is not critical, install to your preference. (Hardware orientation shown on reverse side)
5. With the hardware installed torque to 65 lb/ft

Reference pictures on the back

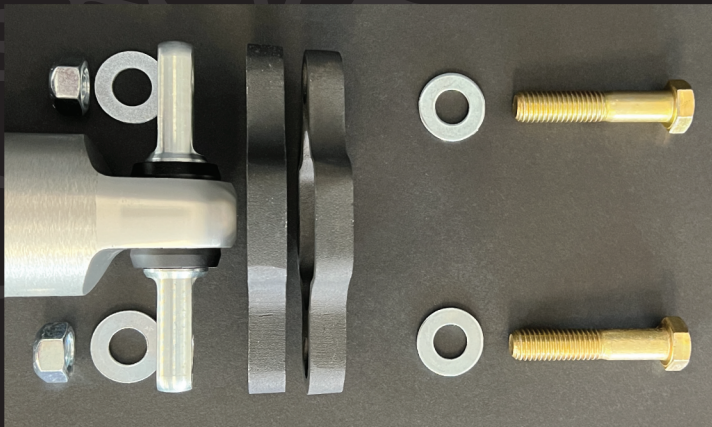

2" Increase (Stock Shocks)

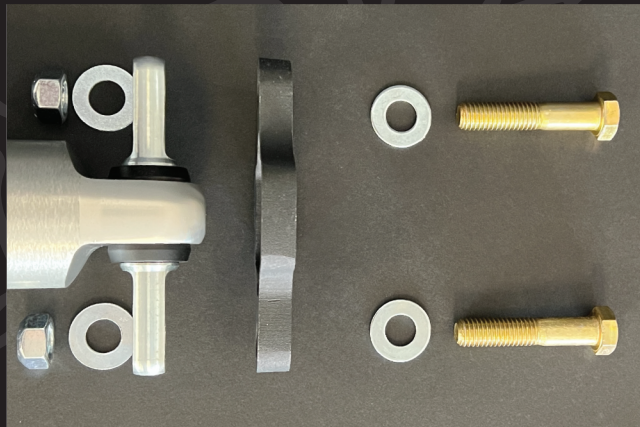

1" Increase (Bilstein 5100 on 2011+)