



## TOYOTA GR SUPRA FOILER™ WIND DIFFUSER INSTALLATION GUIDE:

For up-to-date fitment information,  
please visit the product page on  
[AWE-Tuning.com](http://AWE-Tuning.com).

Welcome to the AWE family! By purchasing this  
**AWE Foiler™ Wind Diffuser** you are showing your  
Supra that 'sound' matters; some sounds are  
unwelcome, and will be silenced ...*discretely*.



***Installation questions?***  
**CONTACT US**

# PARTS LIST



Inspect **ALL** parts prior to disassembly of vehicle; If damaged **OR MISSING**, please contact the place of purchase immediately.

Symbol	Part Number	Description	QTY
<b>A</b> >>	200006	DS A90/A91 Supra Foiler	1
<b>B</b> >>	200007	PS A90/A91 Supra Foiler	1
	850001	3M 5962, Double Sided Foam Tape	2

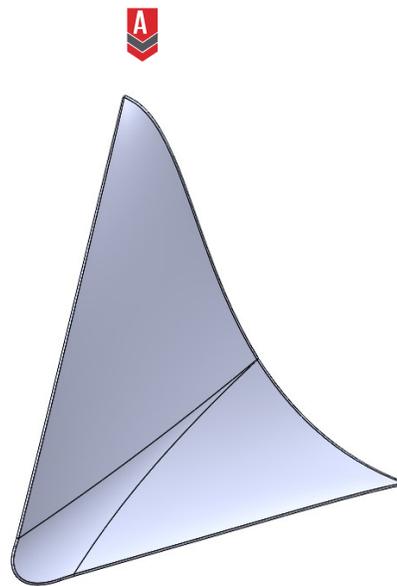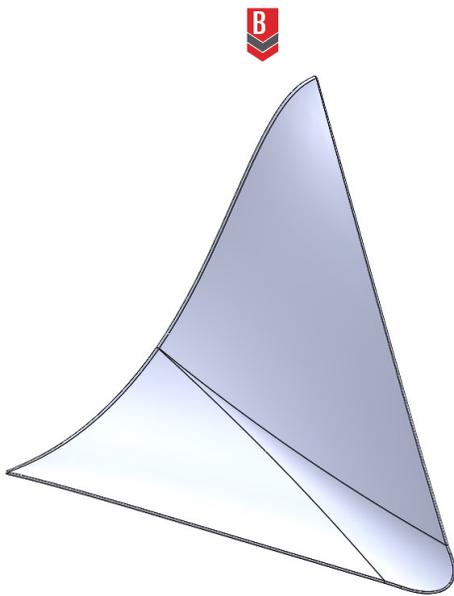

## STEP 1

Gather your 2 AWE Foilers (**A**) and the double sided tape (**B**), as seen in **Figure 1-1**. Apply the double sided tape to the back of each AWE Foiler (**C**), as shown in **Figure 1-2**.



It is critical for fitment to keep the tape inside the pocket, allowing flush fitment to the body of the vehicle.



FIGURE 1-1



FIGURE 1-2

## STEP 2

Before applying your AWE Foiler to the vehicle, note the faint straight line in the casting of the mirror frame, as shown in **Figure 2**.

This will be used to help place the Foiler in the correct spot.

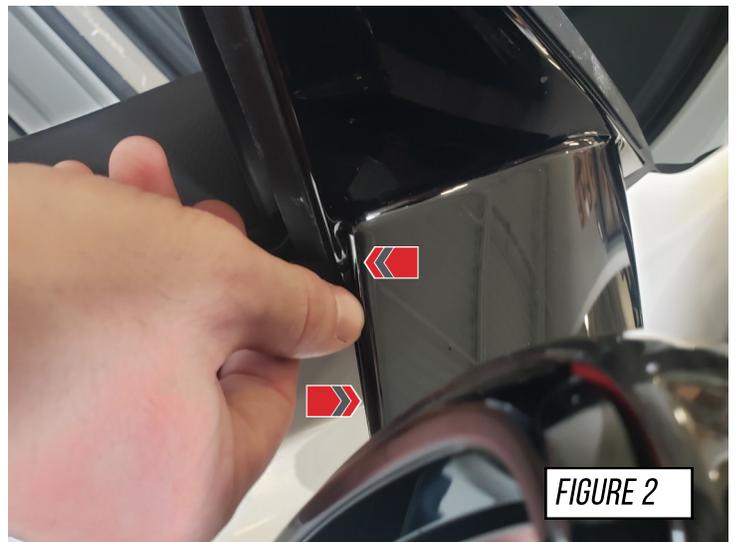


FIGURE 2

## STEP 3

With the tape applied to the back of the AWE Foiler, carefully apply the Foiler to the mirror.

(A) Using the casting line in the mirror as a guide, place the rear of the Foiler down.

(B) Keeping the front centered on the door, push the front of the Foiler into place, as shown in **Figure 3**.



## STEP 4

With the Foiler in the correct spot, press down firmly, pushing into the bend of the door to help set the double sided tape, as shown in **Figure 4**.



## STEP 5

Ensure the AWE Foiler is tightly seated to the mirror frame, as shown in **Figure 5**.



**FIGURE 5**

**ENJOY!**



## TROUBLESHOOTING

Issue	Solution
Wrong or missing parts	Double check the parts list for your system and compare them with what you received. Fill out our contact form, found below and let us know what parts you need.

## CARE

Once installed, the AWE Foiler™ will eliminate wind buffeting in the interior of the vehicle when only one window is in the down position.

Avoid using polishes or waxes on injection molded parts, the compound can be difficult to remove from the porous surface finish.

Any questions or comments,  
please do not hesitate to contact us:

**AWE**  
199 Precision Drive  
Horsham, PA 19044  
215-658-1670  
[CONTACT FORM](#)

## WARRANTY

Up-to-date warranty information is found [HERE](#).