



## EXHAUST INSTALLATION GUIDE: 2017+ McLAREN 720S

Thank you for your purchase of the **AWE Performance Catalysts and Performance Exhaust** for the **2017+ McLaren 720S**. For up to the minute fitment information, be sure to visit the McLaren section of the **AWE** website [HERE](#).

As always, AWE Performance Specialists are standing by for any questions, at 215-658-1670, or email us [HERE](#).

Let's go!

These instructions are intended for the following part numbers:

**3010-31002, 3010-32040, 3010-33050, 3010-11094, 3810-32012, 3810-33012**

# PARTS LIST



**INSPECT ALL PARTS PRIOR TO DISASSEMBLY OF VEHICLE; IF DAMAGED OR MISSING, PLEASE CONTACT THE PLACE OF PURCHASE IMMEDIATELY.**

## **Performance Catalysts:** **RACE USE ONLY**

- 1 Driver side catalyst section
- 1 Passenger side catalyst section
- 2 Turbine outlet gaskets
- 8 Exhaust flange nuts

## **Performance Exhaust:**

- 1 X-pipe exhaust assembly

## **Optional:**

- 2 102mm slash-cut tips (*optional finish*)



**NOTE:** It is ***strongly*** recommended that a trained professional install the AWE Performance Exhaust system.

## STEP 1



Installation of the AWE Performance Exhaust System is the reverse of the removal OEM exhaust.



Always refer to the manufacturer service manual for precise torque specifications on all OEM fasteners.



### **PRO-TIPS:**

- The airbrake bolts are one-time use, so replacements will need to be ordered for reassembly.
- The turbo flange studs are extremely delicate, a penetrant oil must be used and given ample time to soak into the threads to prevent breakage.
- The A/C system will need to be drained to remove the driver side downpipe.



FIGURE 1

Follow factory procedures for disassembly and removal of the factory exhaust system.

The AWE Performance Exhaust suite is a direct replacement for the factory exhaust and utilizes each original mounting location.

## STEP 2

If the AWE Exhaust Tips have been purchased, align the "AWE" logo to the top.

The tips align in the openings the same way as the originals, as shown by the arrows in **Figure 2**.

Torque the OEM olive clamp to factory specification.

**Installation is complete!**

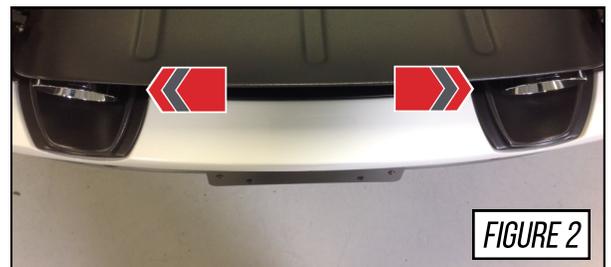


FIGURE 2

# ENJOY!



## CARE

Once installed properly, your AWE Performance Exhaust will provide years of trouble-free performance.

The exhaust volume and sound will settle with usage; 800-1000 miles is required to break-in new exhaust systems.

Any questions or comments,  
please do not hesitate to contact us:

### AWE

199 Precision Drive  
Horsham, PA 19044

215-658-1670  
performance@AWE-Tuning.com

## WARRANTY

Up-to-date warranty information is found [HERE](#).