





SMK340 INSTALLATION INSTRUCTIONS – 4th Gen F-Body

FRONT TOOLS REQUIRED:

- Hydraulic jack and jack stands
- Metric Wrenches and Sockets

INSTALLATION:

1. Lift the front of the vehicle and safely support with jack stands under the cradle.
2. Using a **10mm** and **13mm socket**, remove the three (3) bolts holding the sway bar bracket deflector shield to the chassis and the sway bar bolt.
3. Using a **13mm socket**, remove the bolts holding the front sway bar to the sway bar bracket, allow the sway bar to hang.
NOTE: It is not necessary to fully remove the sway bar.
4. Using a **13mm socket**, remove each sway bar mounting bracket from the chassis.
5. Install your new sway bar mounting bracket to the chassis. Start all bolts before tightening them to **40ft-lbs**.
6. Re-install the sway bar, torque fasteners to **40ft-lbs**. The bolt with the studded head goes on the driver side front.
7. On the driver side, route the traction control cable on the outside of the bracket as shown. Replace the deflector shield.
8. Lower vehicle.

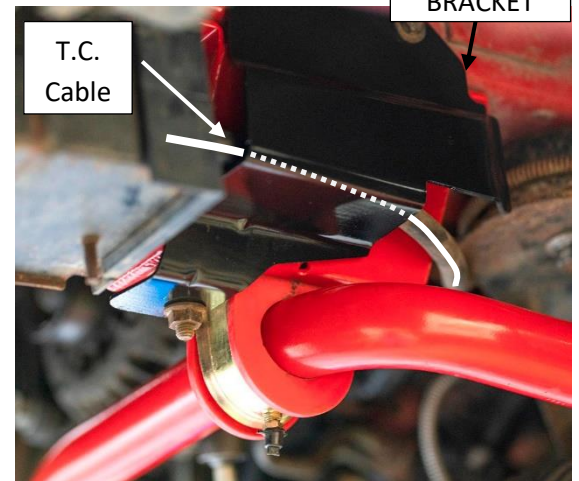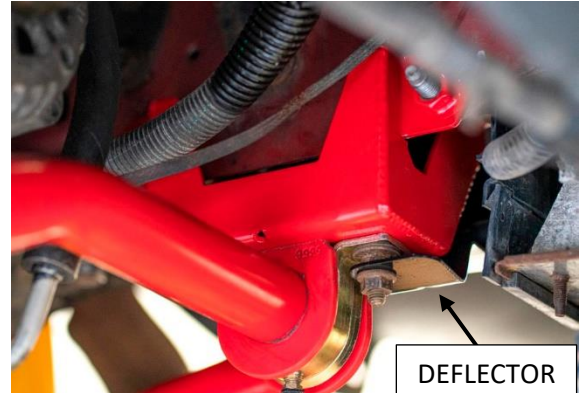

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any damage caused to the vehicle or person during installation or use of this product.