
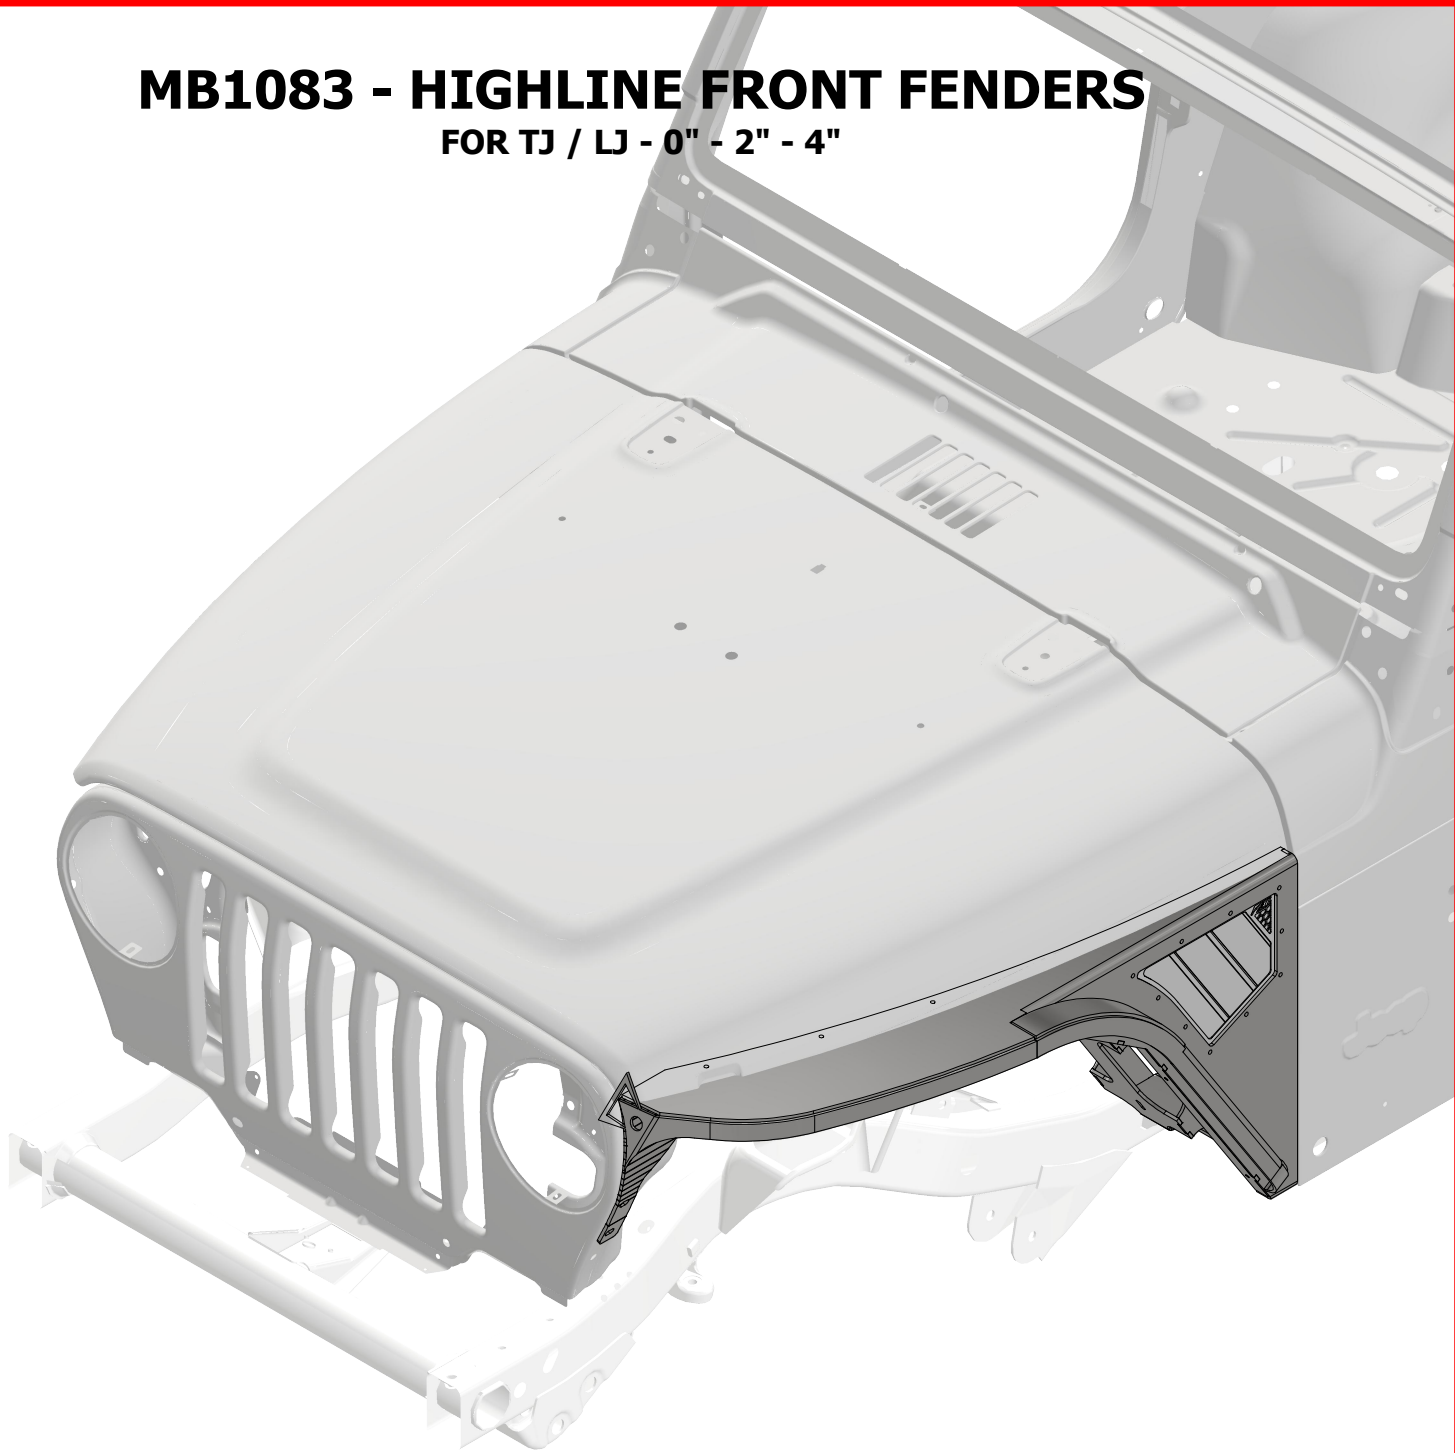


MB1083 - Assembly Instructions High Line Flat Fender and Inner Fender**MB1083 - HIGHLINE FRONT FENDERS**
FOR TJ / LJ - 0" - 2" - 4"**ASSEMBLY INSTRUCTIONS**


MB1083-0 TJ Highline Front Fender 0" Offset

CONTENTS

MB1083-0 0" STEEL

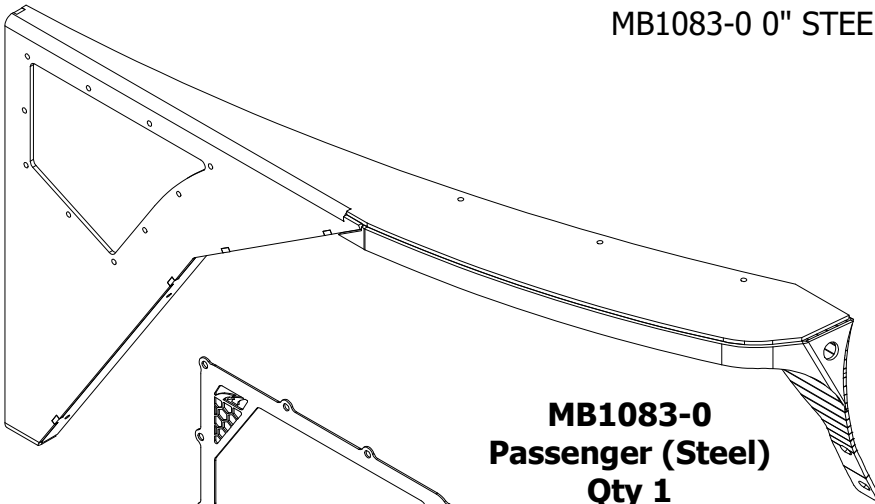


MB1083-0
Passenger (Steel)
Qty 1

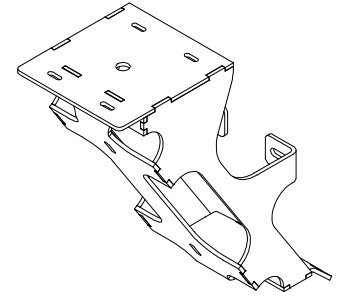


MB1083-BA
Battery Support (Steel)
Qty 1


MB5542-03
Qty 1

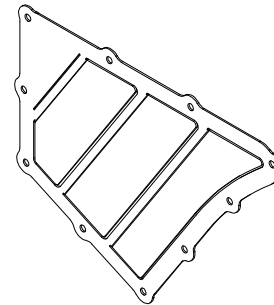


MB5542-01
Qty 2

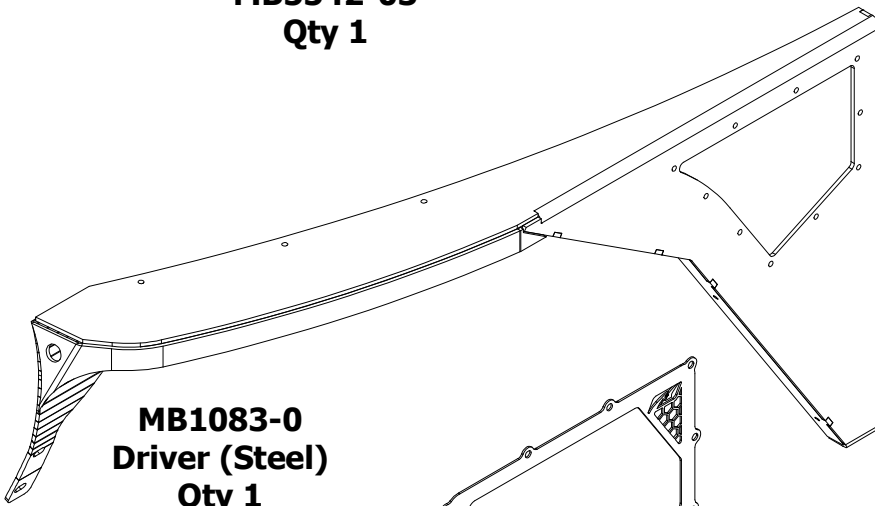


MB1083-0
Driver (Steel)
Qty 1

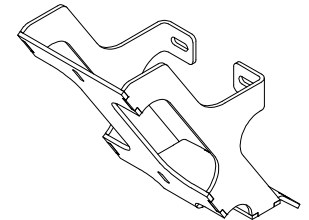

MB1083-BA
Fender Support (Steel)
Qty 1

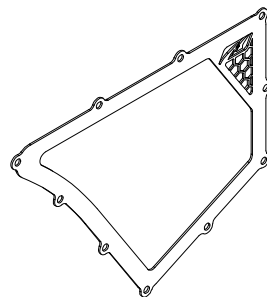


MB5542-02
Qty 1



Round Head Screw
#10-24 x 3/4"
Qty 22
(Includes 2 Spares)



Nylock Nut
#10-24
Qty 22
(Includes 2 Spares)

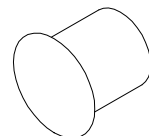


MB6500
LED Side Marker Light
Amber
Qty 2


MB1083-0 TJ Highline Front Fender 0" Offset

CONTENTS

MB1083-0 0" ALUMINUM

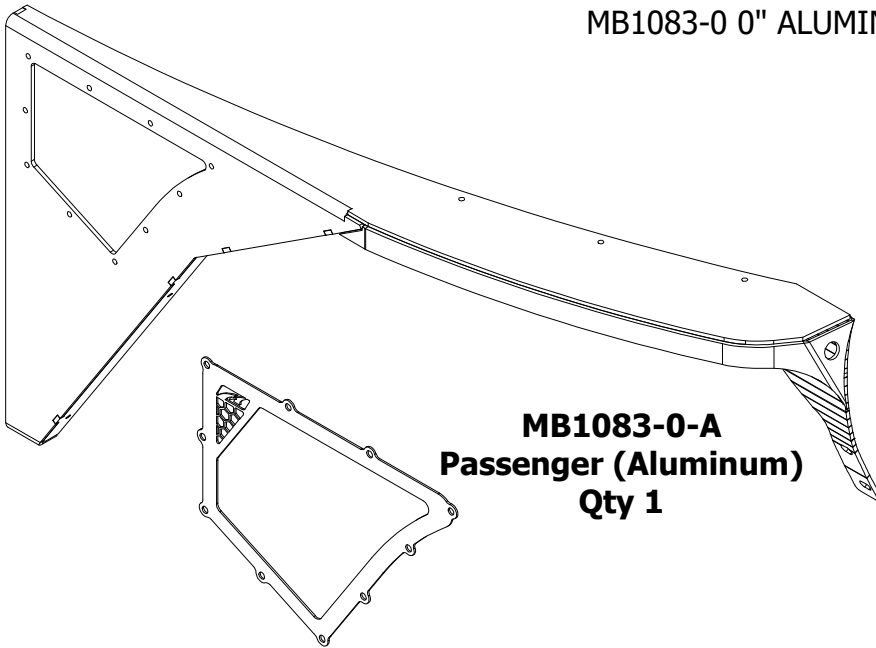


MB1083-0-A
Passenger (Aluminum)
Qty 1

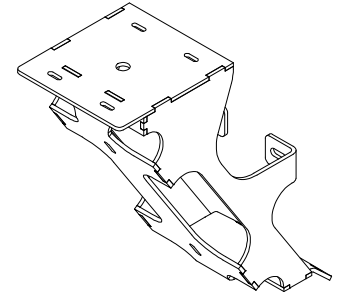


MB1083-BA
Battery Support (Steel)
Qty 1


MB5542-03
Qty 1

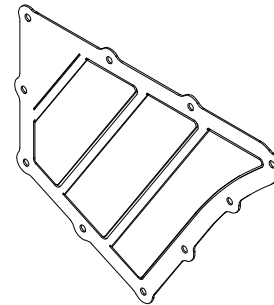


MB5542-01
Qty 2

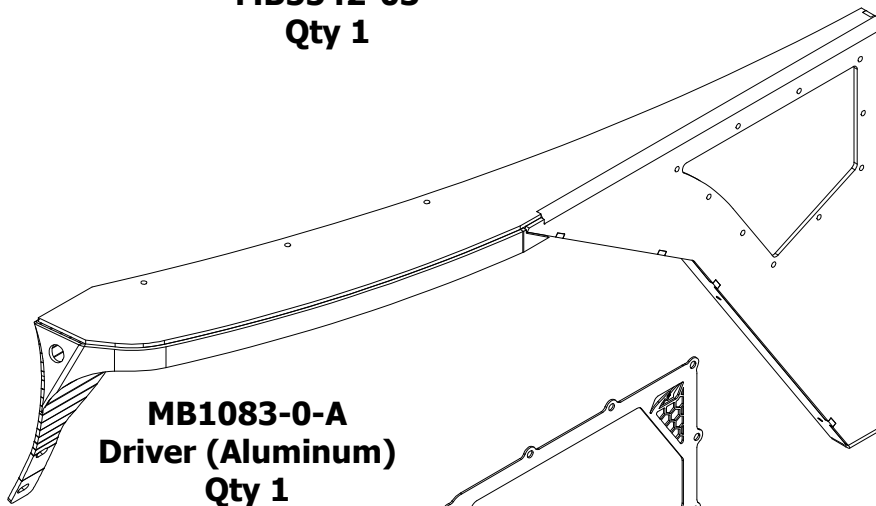


MB1083-0-A
Driver (Aluminum)
Qty 1

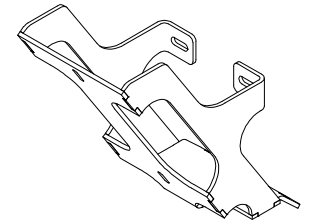

MB1083-BA
Fender Support (Steel)
Qty 1

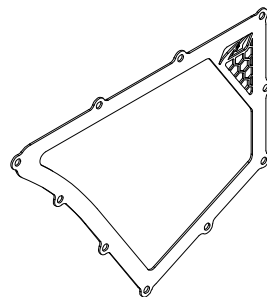


MB5542-02
Qty 1



Round Head Screw
#10-24 x 3/4"
Qty 22
(Includes 2 Spares)



Nylock Nut
#10-24
Qty 22
(Includes 2 Spares)

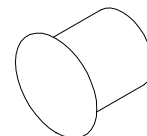


MB6500
LED Side Marker Light
Amber
Qty 2


MB1083-2 TJ Highline Front Fender 2" Offset

CONTENTS

MB1083-2 2" STEEL

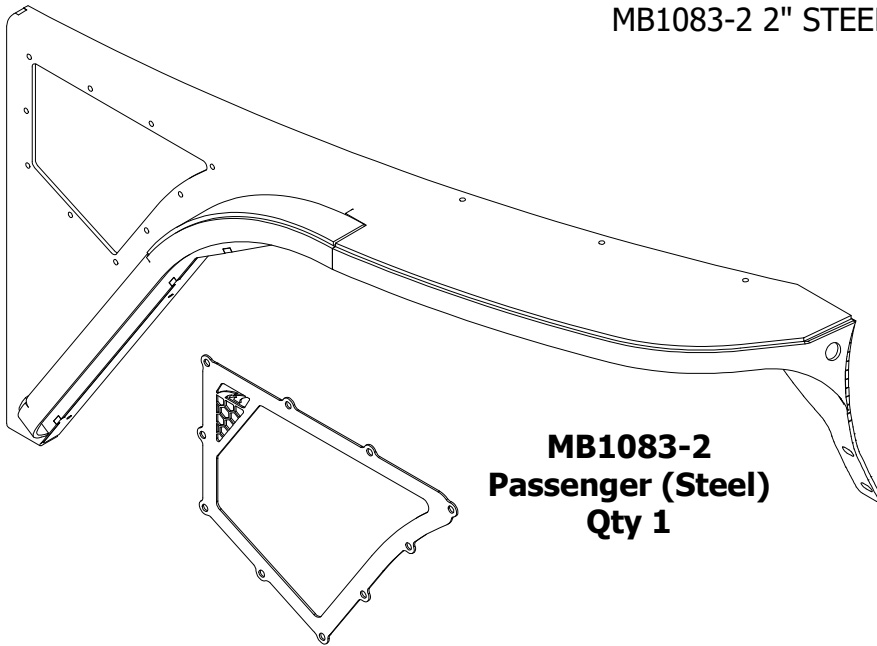


**MB1083-2
Passenger (Steel)
Qty 1**

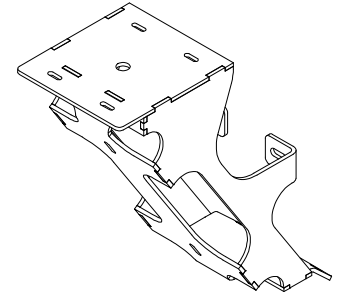


**MB1083-BA
Battery Support (Steel)
Qty 1**


**MB5542-03
Qty 1**

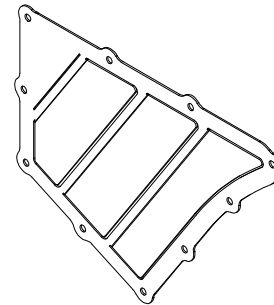


**MB5542-01
Qty 2**

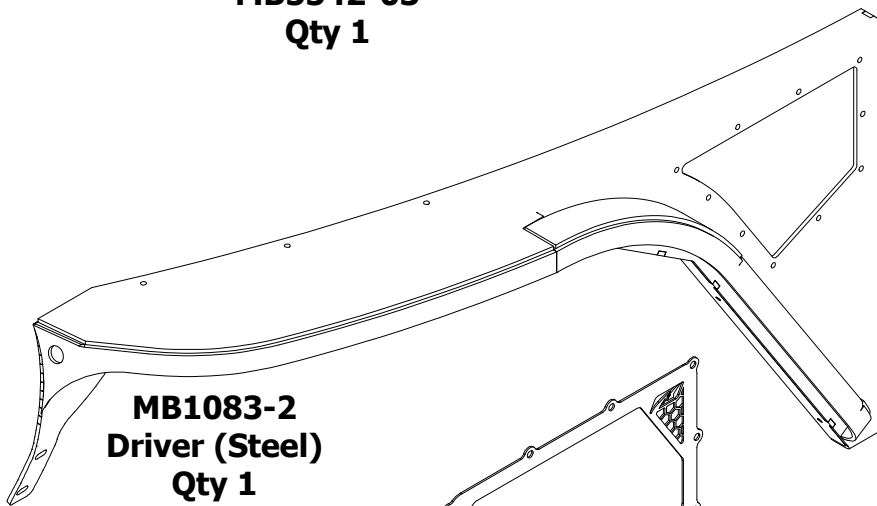


**MB1083-2
Driver (Steel)
Qty 1**

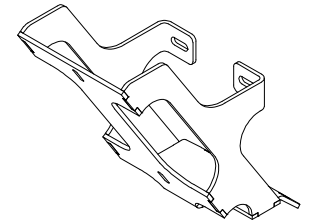

**MB1083-BA
Fender Support (Steel)
Qty 1**

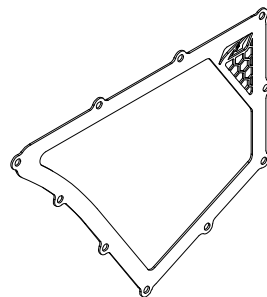


**MB5542-02
Qty 1**



**Round Head Screw
#10-24 x 3/4"
Qty 22
(Includes 2 Spares)**



**Nylock Nut
#10-24
Qty 22
(Includes 2 Spares)**

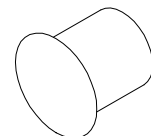


**MB6500
LED Side Marker Light
Amber
Qty 2**


MB1083-2 TJ Highline Front Fender 2" Offset

CONTENTS

MB1083-2 2" ALUMINUM

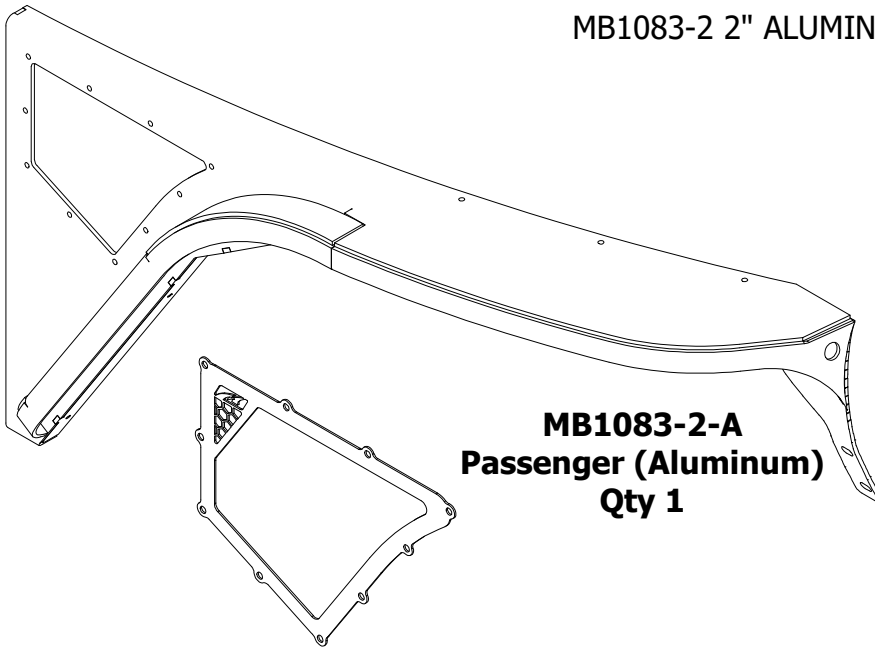


MB1083-2-A
Passenger (Aluminum)
Qty 1

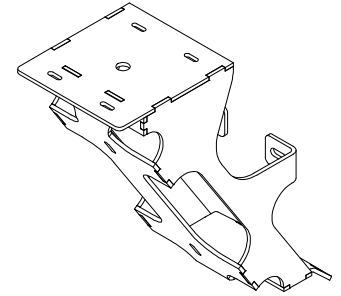


MB1083-BA
Battery Support (Steel)
Qty 1


MB5542-03
Qty 1

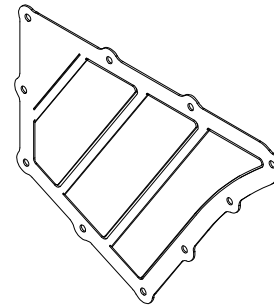


MB5542-01
Qty 2

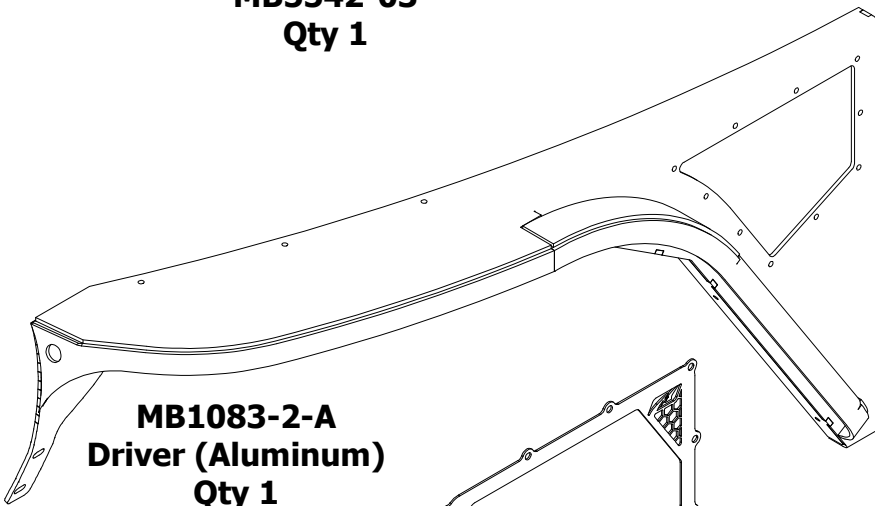


MB1083-2-A
Driver (Aluminum)
Qty 1

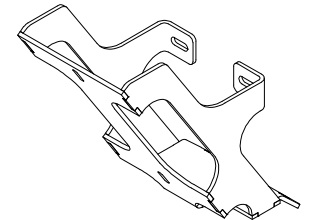

MB1083-BA
Fender Support (Steel)
Qty 1

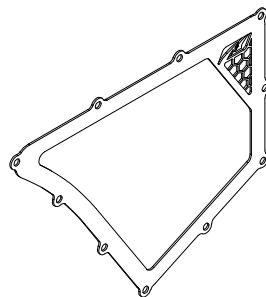


MB5542-02
Qty 1



Round Head Screw
#10-24 x 3/4"
Qty 22
(Includes 2 Spares)



Nylock Nut
#10-24
Qty 22
(Includes 2 Spares)

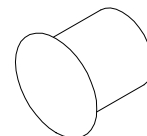


MB6500
LED Side Marker Light
Amber
Qty 2


MB1083-4 TJ Highline Front Fender 4" Offset

CONTENTS


MB1083-4 4" STEEL

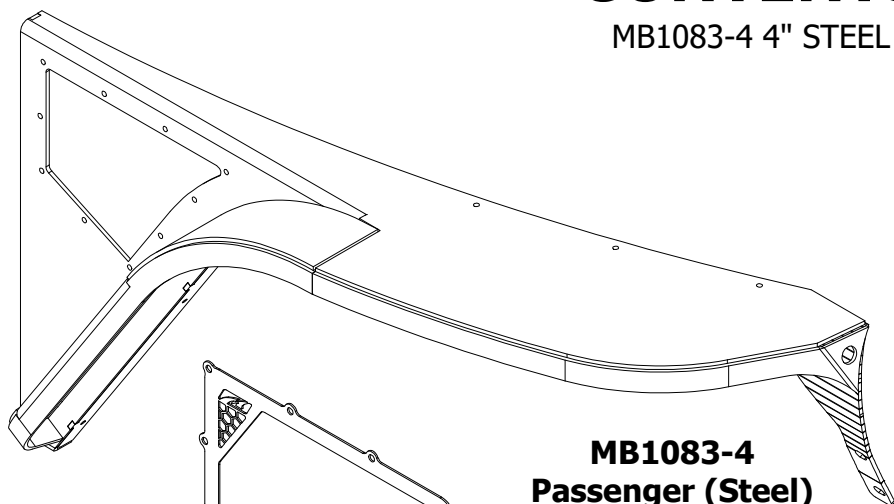


**MB1083-4
Passenger (Steel)
Qty 1**

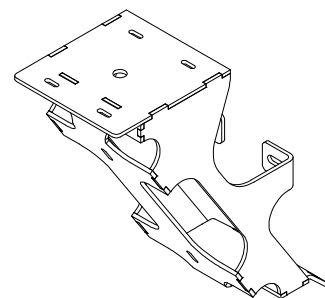


**MB1083-BA
Battery Support (Steel)
Qty 1**

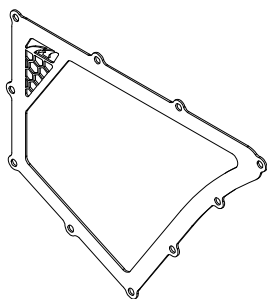


**MB5542-03
Qty 1**

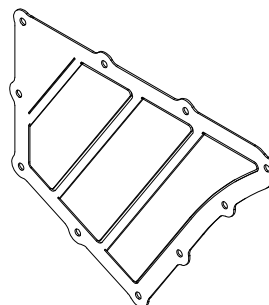


**MB5542-01
Qty 2**

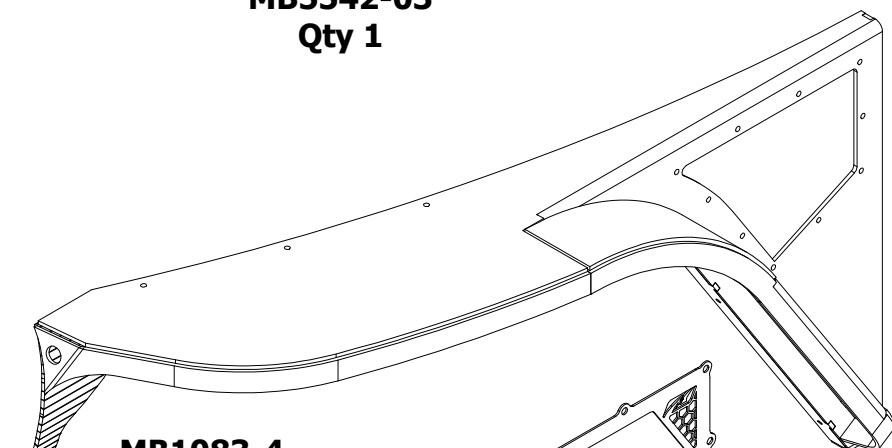


**MB1083-4
Driver (Steel)
Qty 1**

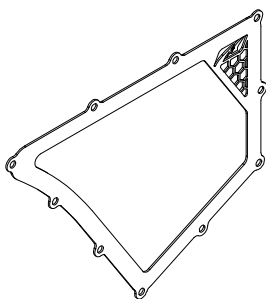

**MB5542-02
Qty 1**

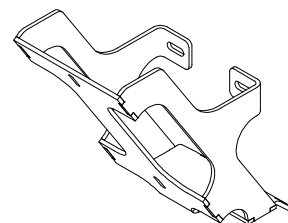


**MB1083-BA
Fender Support (Steel)
Qty 1**



**Round Head Screw
#10-24 x 3/4"
Qty 22
(Includes 2 Spares)**



**Nylock Nut
#10-24
Qty 22
(Includes 2 Spares)**

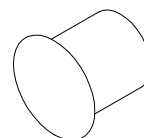


**MB6500
LED Side Marker Light
Amber
Qty 2**


MB1083-4 TJ Highline Front Fender 4" Offset

CONTENTS

MB1083-4 4" ALUMINUM

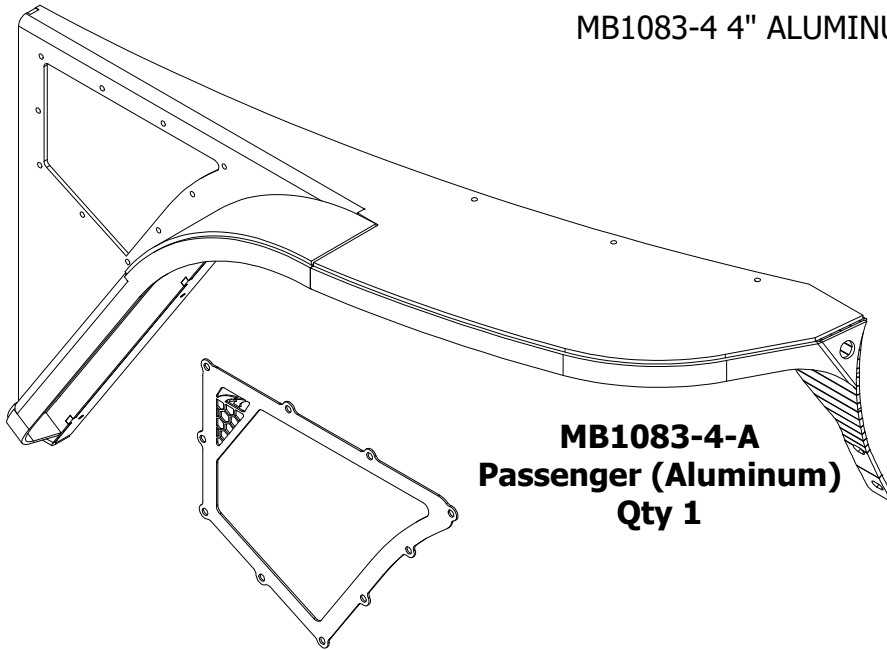


MB1083-4-A
Passenger (Aluminum)
Qty 1

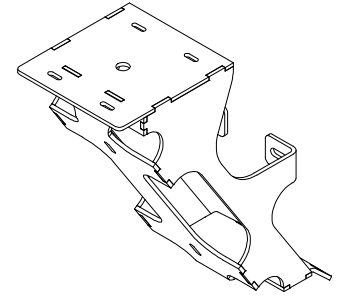


MB1083-BA
Battery Support (Steel)
Qty 1


MB5542-03
Qty 1

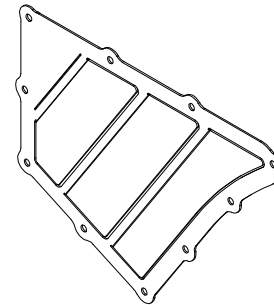


MB5542-01
Qty 2

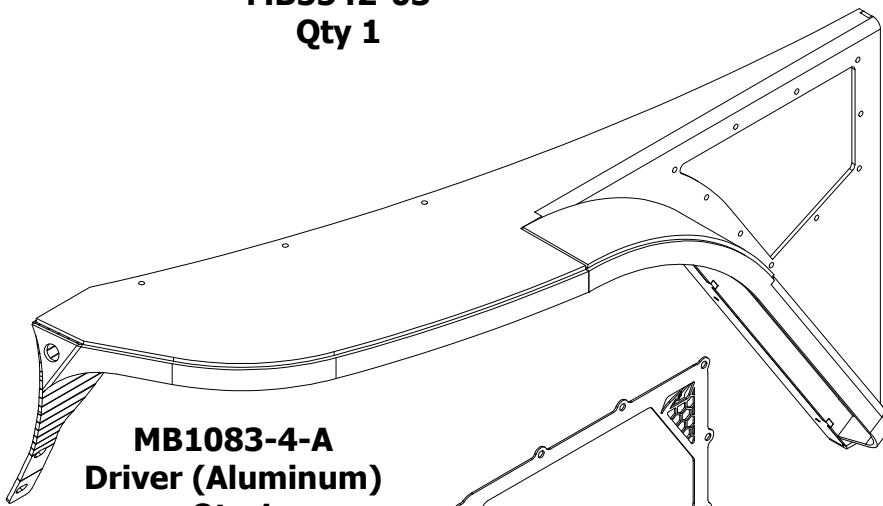


MB1083-4-A
Driver (Aluminum)
Qty 1

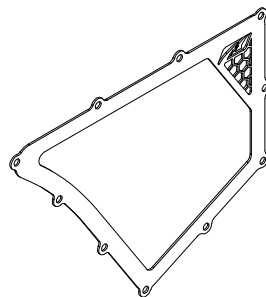

MB5542-02
Qty 1

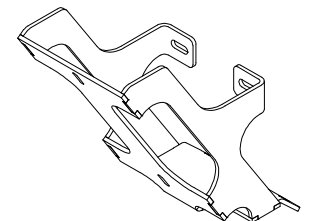


MB1083-BA
Fender Support (Steel)
Qty 1



Round Head Screw
#10-24 x 3/4"
Qty 22
(Includes 2 Spares)




Nylock Nut
#10-24
Qty 22
(Includes 2 Spares)

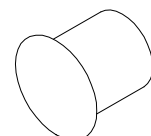


MB6500
LED Side Marker Light
Amber
Qty 2

MB1083-IF TJ Highline Front Inner Fenders


CONTENTS MB1083-IF ALUMINUM INNER FENDER KIT

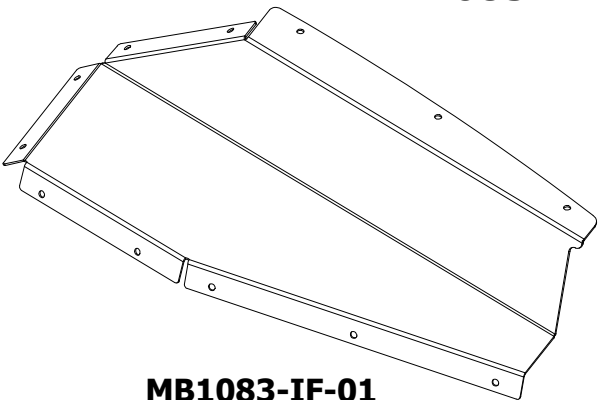


MB1083-IF-01
Driver
Qty 1

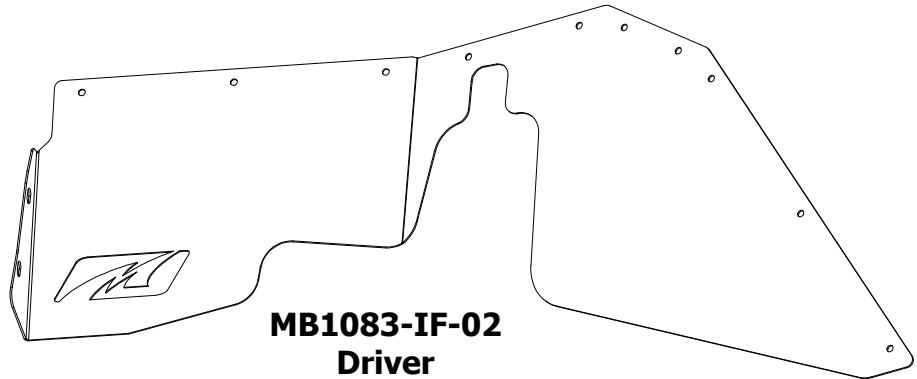


MB1083-IF-02
Driver
Qty 1

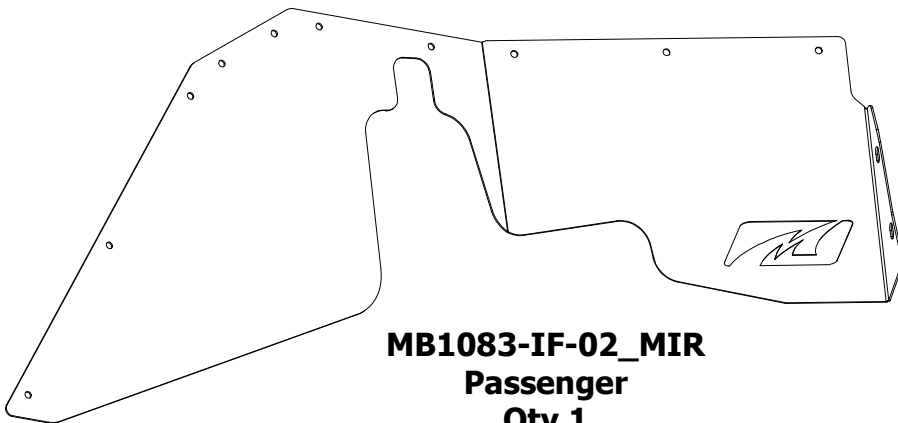


MB1083-IF-02_MIR
Passenger
Qty 1

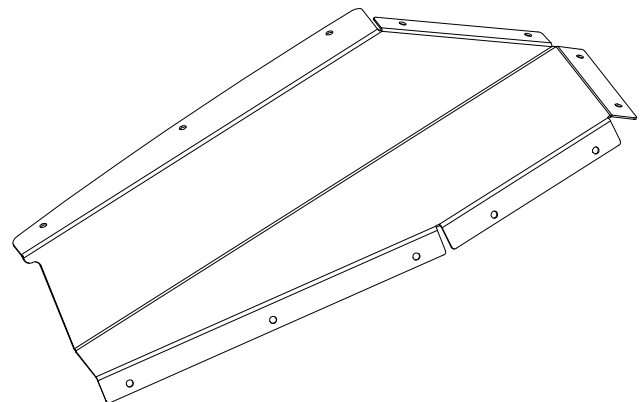


MB1083-IF-01_MIR
Passenger
Qty 1

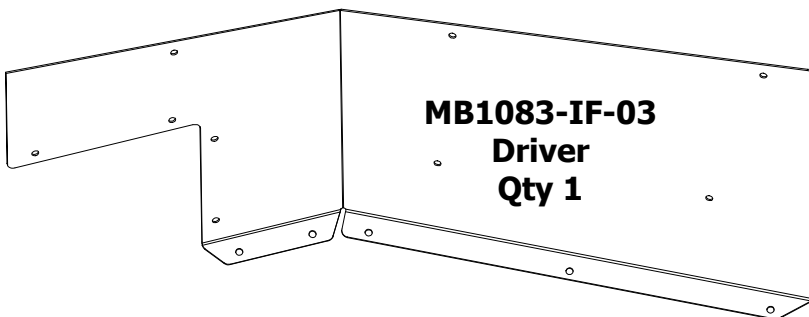

MB1083-IF-03
Driver
Qty 1



Round Head Screw
#10-24 x 1/2"
Qty 46
(Includes 2 Spares)

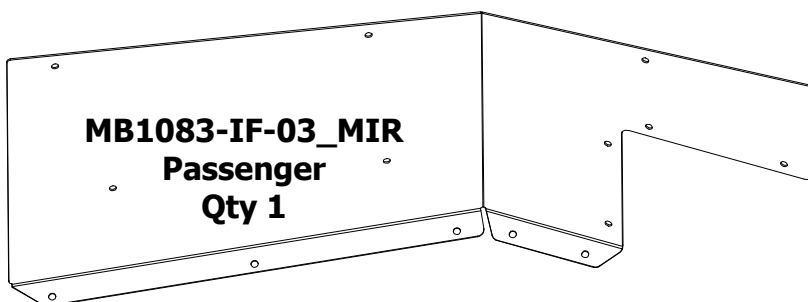

MB1083-IF-03_MIR
Passenger
Qty 1




Nylock Nut
#10-24
Qty 46
(Includes 2 Spares)


MB1083-IFB TJ HighLine Front Inner Fenders (Blank)

CONTENTS


MB1083-IFB ALUMINUM INNER FENDER KIT (Blank)

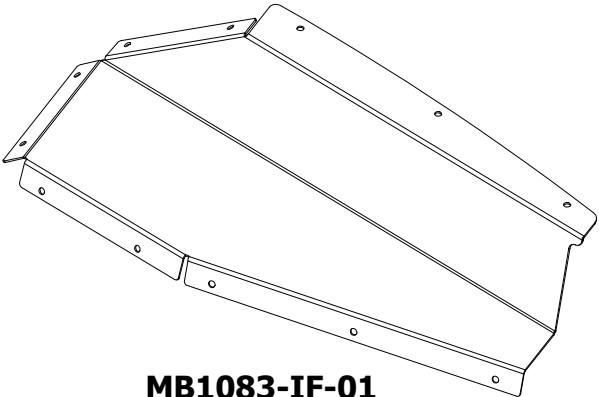


MB1083-IF-01
Driver
Qty 1

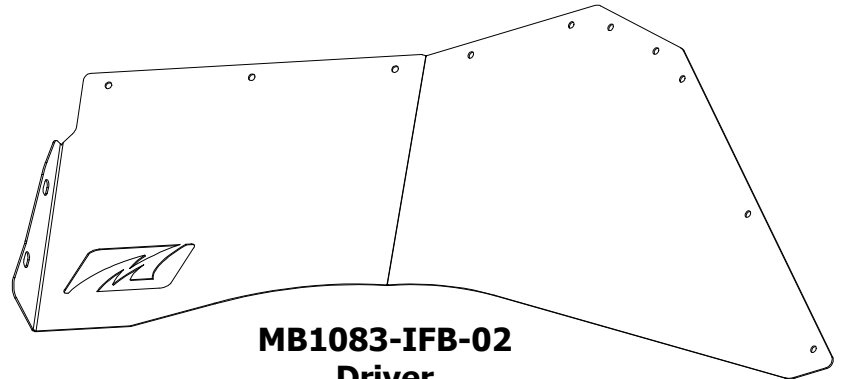


MB1083-IFB-02
Driver
Qty 1

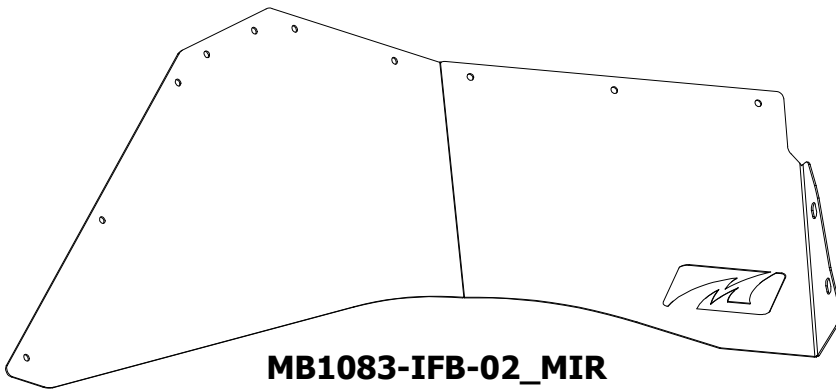


MB1083-IFB-02_MIR
Passenger
Qty 1

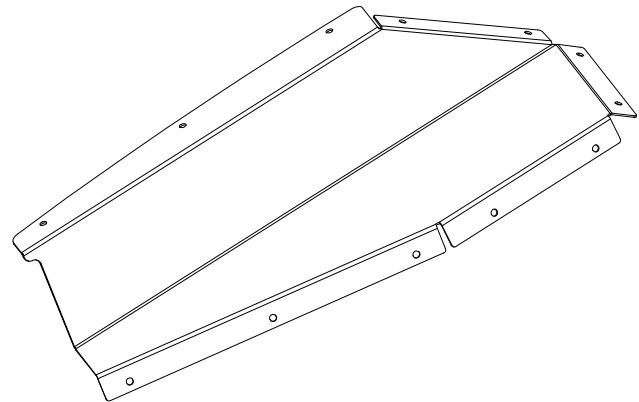


MB1083-IF-01_MIR
Passenger
Qty 1

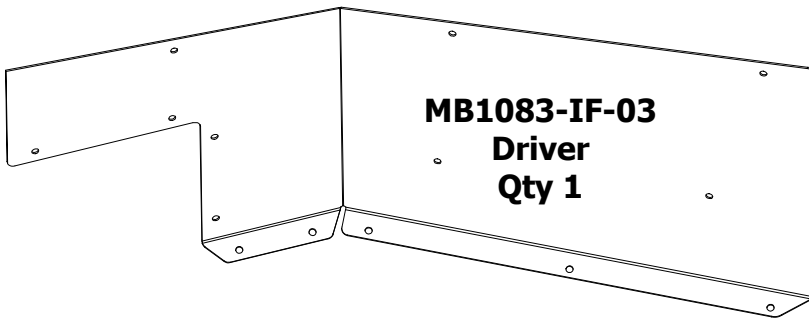

MB1083-IF-03
Driver
Qty 1



Round Head Screw
#10-24 x 1/2"
Qty 46
(Includes 2 Spares)

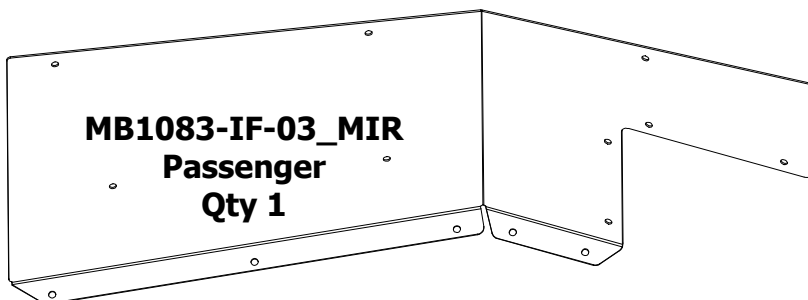

MB1083-IF-03_MIR
Passenger
Qty 1




Nylock Nut
#10-24
Qty 46
(Inclues 2 Spares)

MB1083 - Assembly Instructions High Line Flat Fender and Inner Fender

STEP 1 Trimming the Hood

THE FACTORY AIR CLEANER AND FUSE BOX WILL NEED TO BE REMOVED OR RELOCATED.

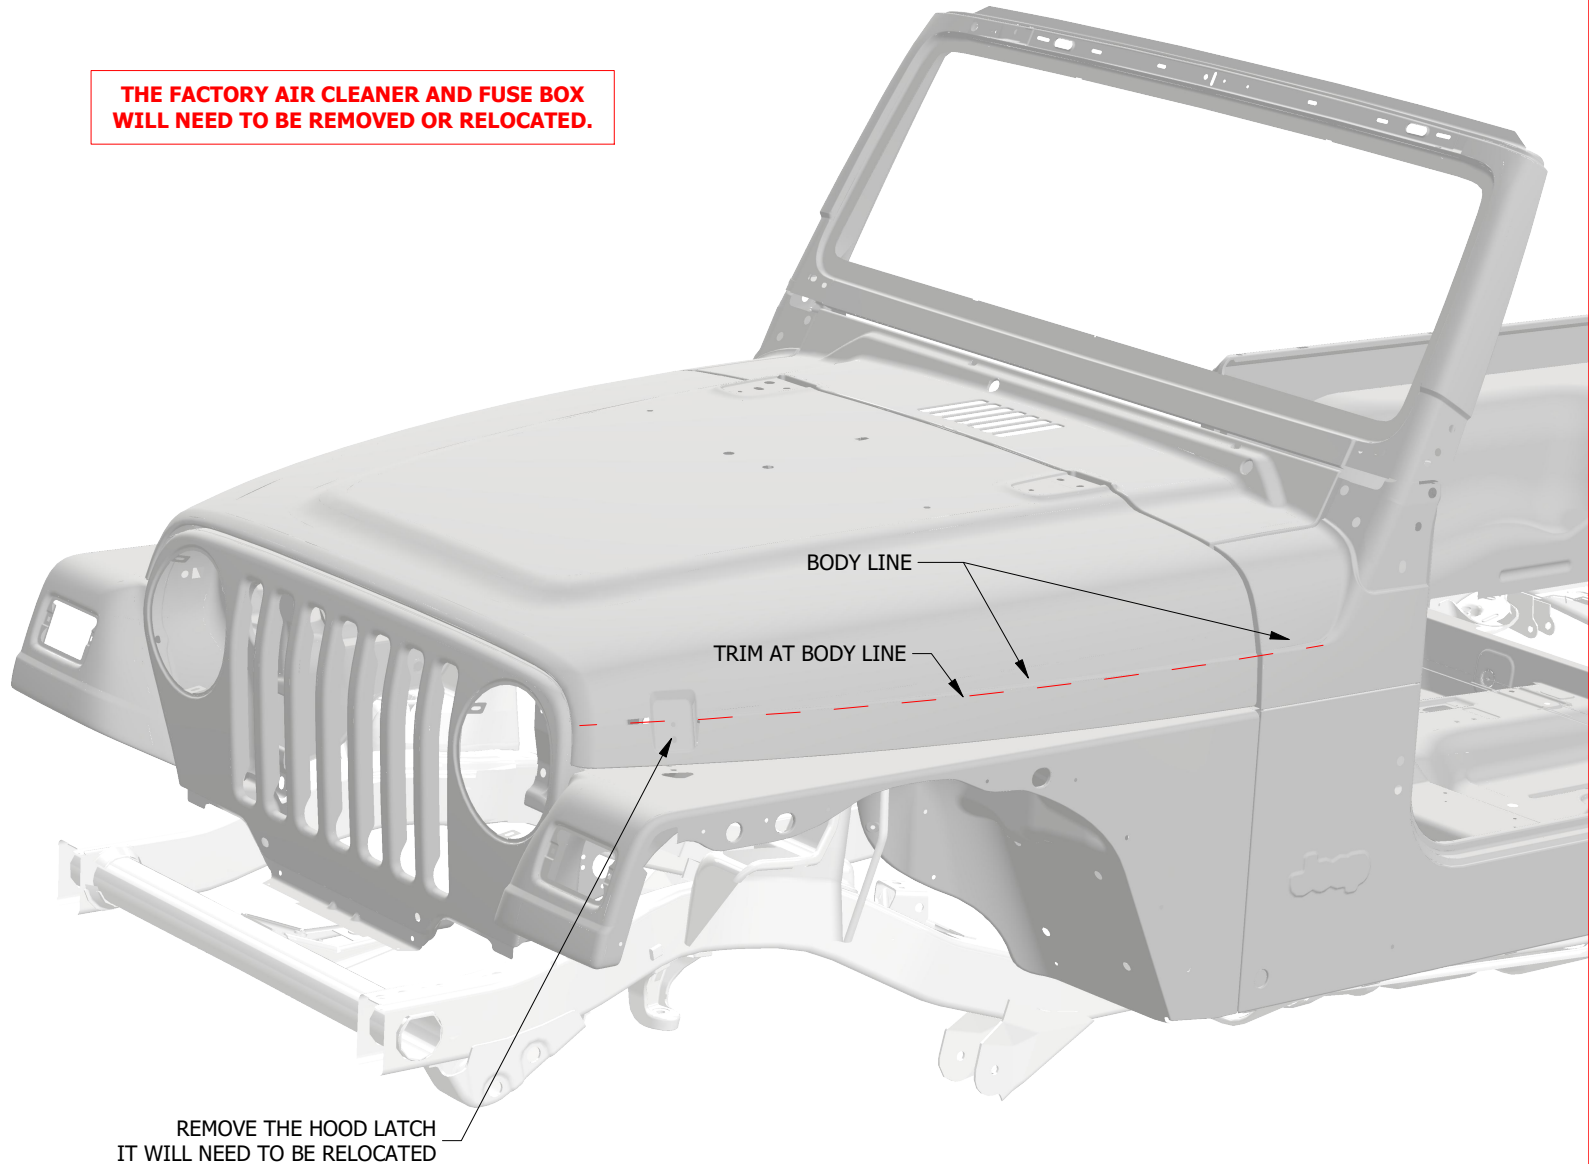

TRIM THE HOOD AT THE BODY LINE THAT STARTS AT THE COWL AND EXTENDS TO THE FRONT OF THE HOOD. YOU MAY WANT TO LEAVE SOME EXTRA MATERIAL AT THE BOTTOM OF THE HOOD TO TRIM LATER ON WHEN THE MOTOBILT FENDERS ARE FINALLY ATTACHED. THIS WILL ENSURE THE BODY GAP BETWEEN THE HOOD AND FENDERS WILL BE IDEAL.

MB1083 - Assembly Instructions High Line Flat Fender and Inner Fender


STEP 2 Factory Fender & Hood Removal

KEEP THE FACTORY
HARDWARE AS IT WILL BE
REUSED TO ATTACH THE
MOTOBILT FENDERS

REMOVE OR FOLD BACK
THE FACTORY HOOD


REMOVE PASSENGER
FENDER AND
INNER FENDER

REMOVE DRIVER FENDER
AND INNER FENDER

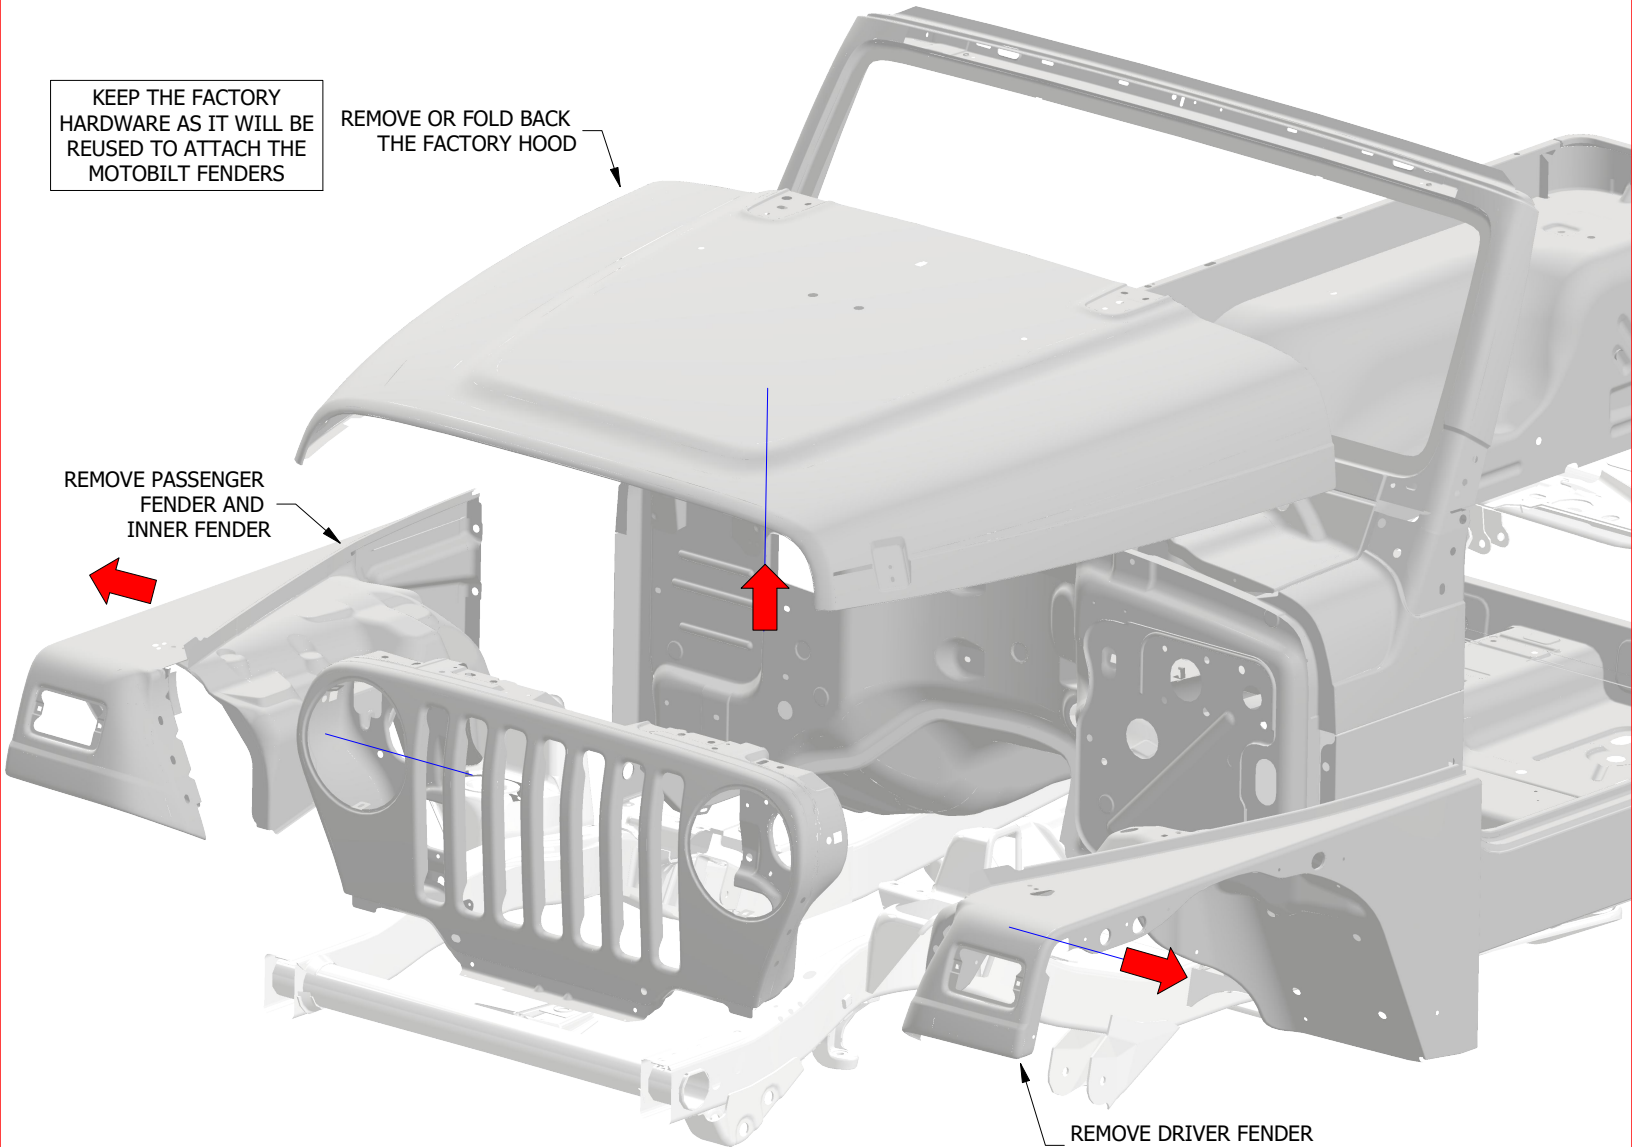


MB1083 - Assembly Instructions High Line Flat Fender and Inner Fender

STEP 3 Fender Pre-Assembly

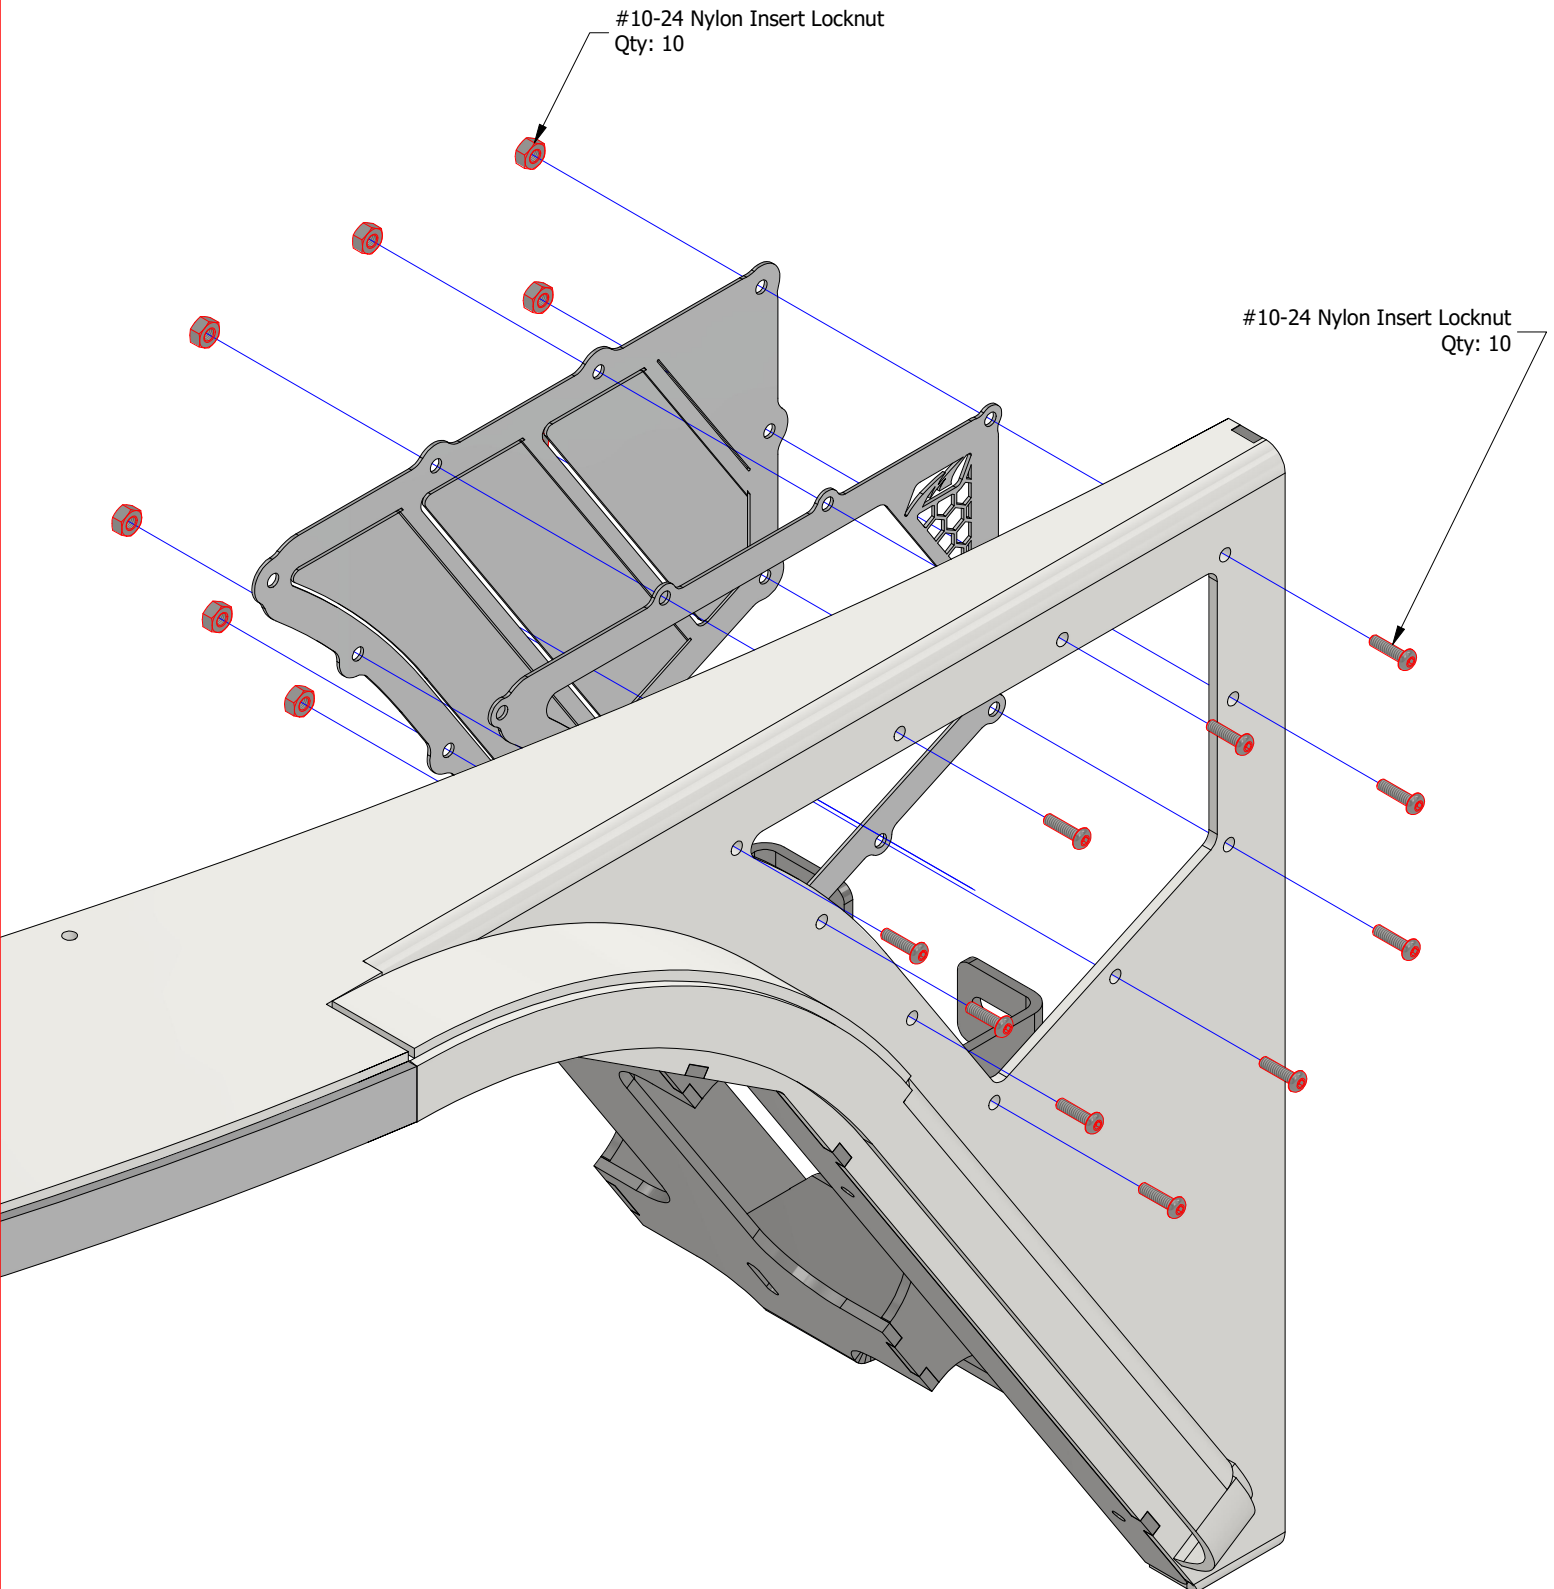


MB1083 - Assembly Instructions High Line Flat Fender and Inner Fender

STEP 4 Install Fender Supports

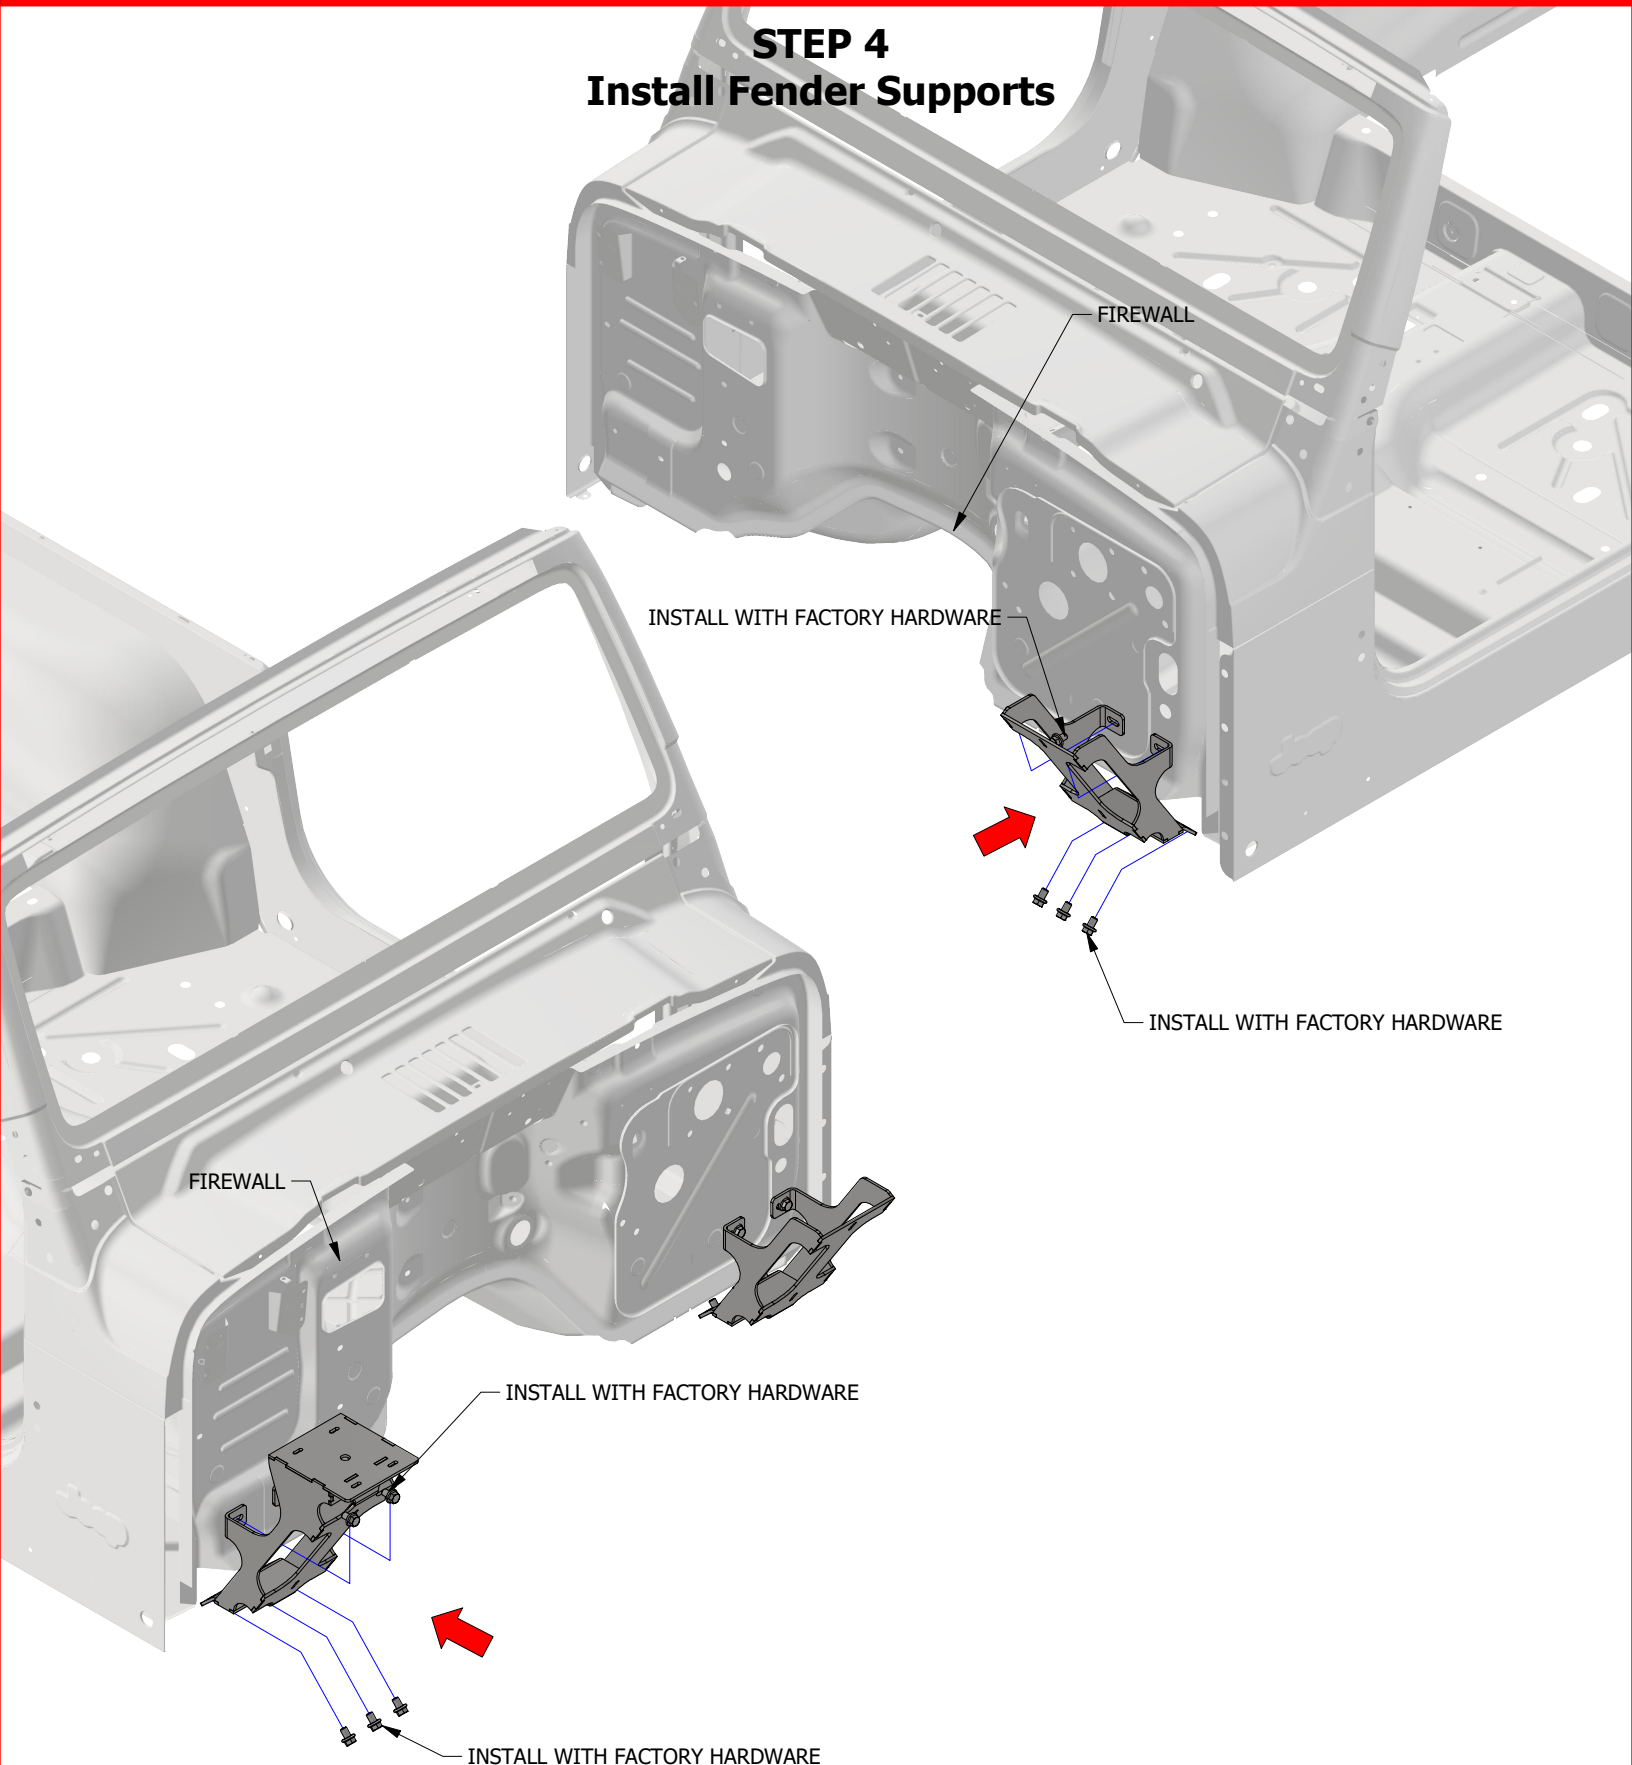

MB1083 - Assembly Instructions High Line Flat Fender and Inner Fender



STEP 5 Install Fenders

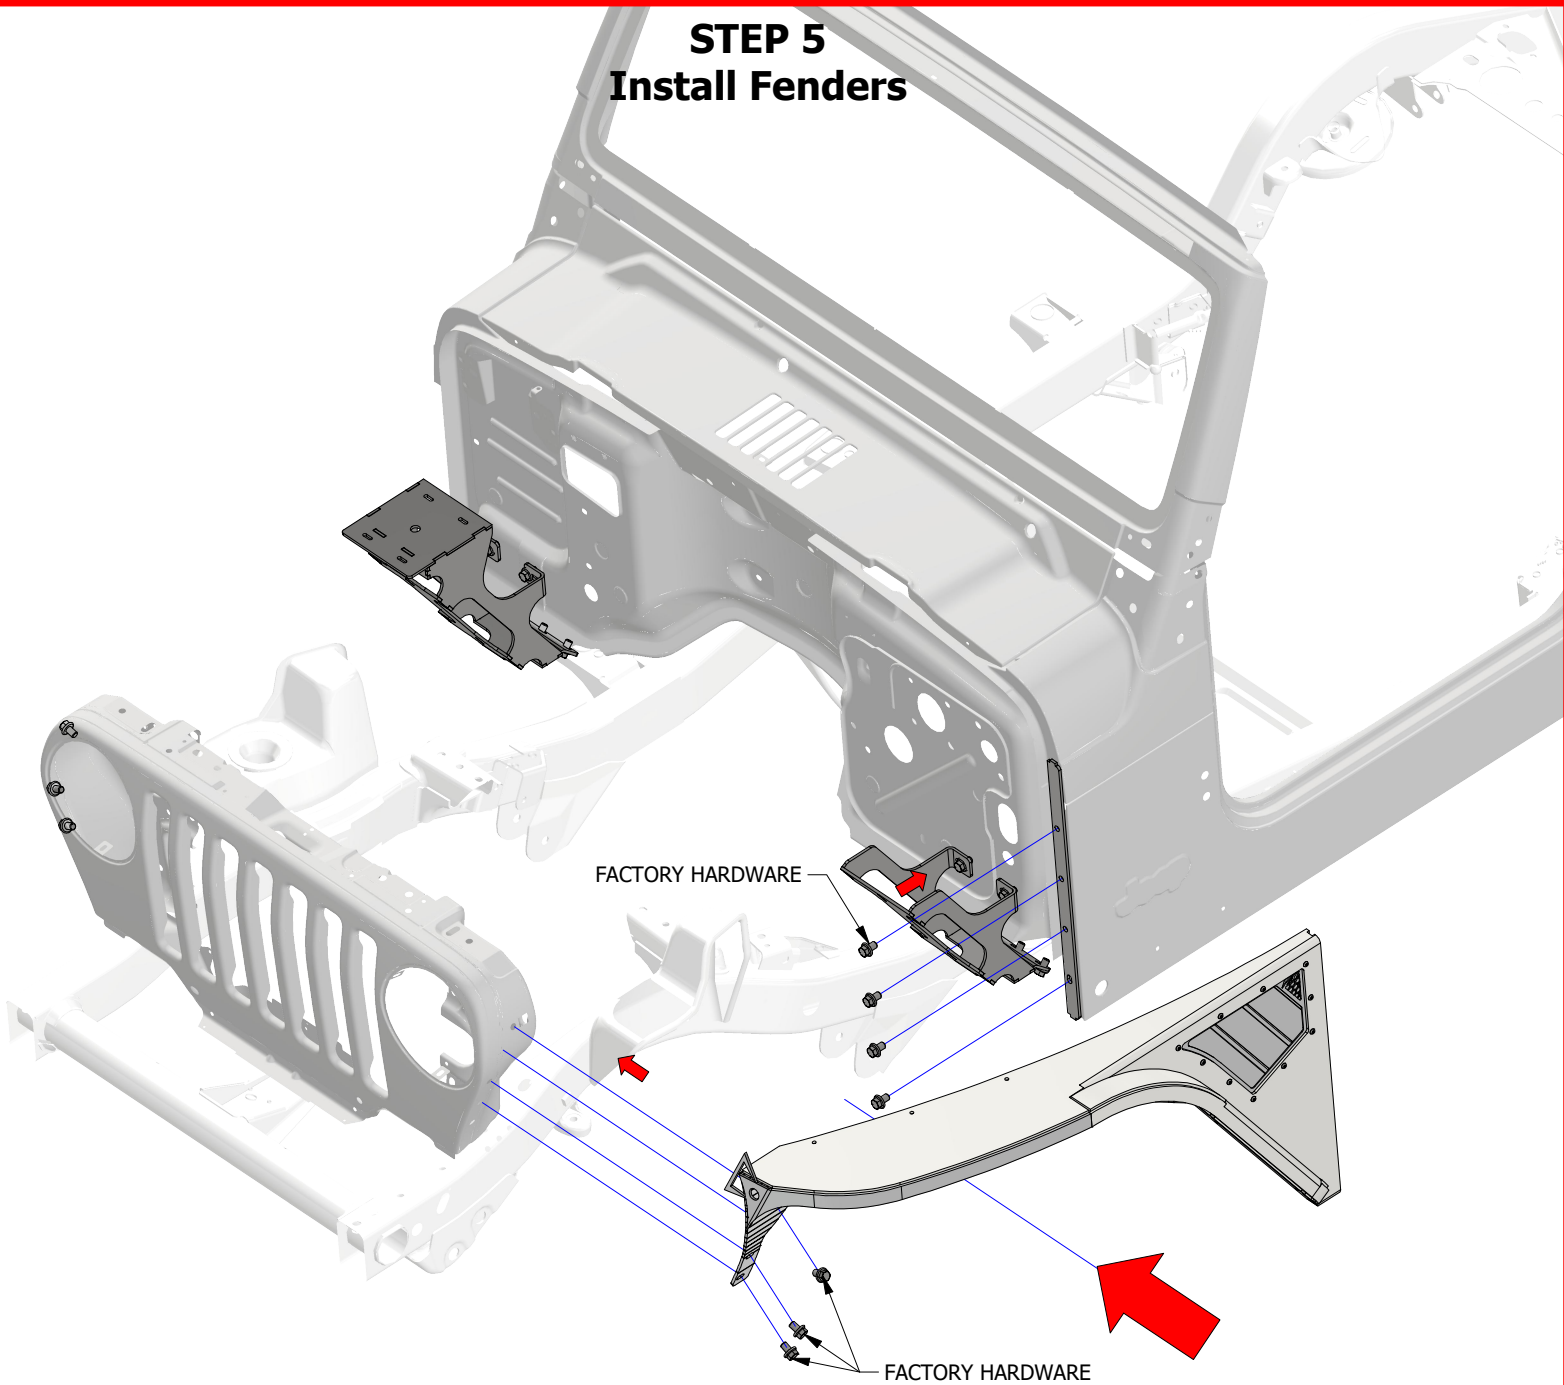

INSTALL THE NEW FENDER USING THE FACTORY
HARDWARE IN THE FACTORY LOCATION. REPEAT
THIS STEP ON THE PASSENGER SIDE

MB1083 - Assembly Instructions High Line Flat Fender and Inner Fender



STEP 6 Install Inner Fenders (Sold Separately)

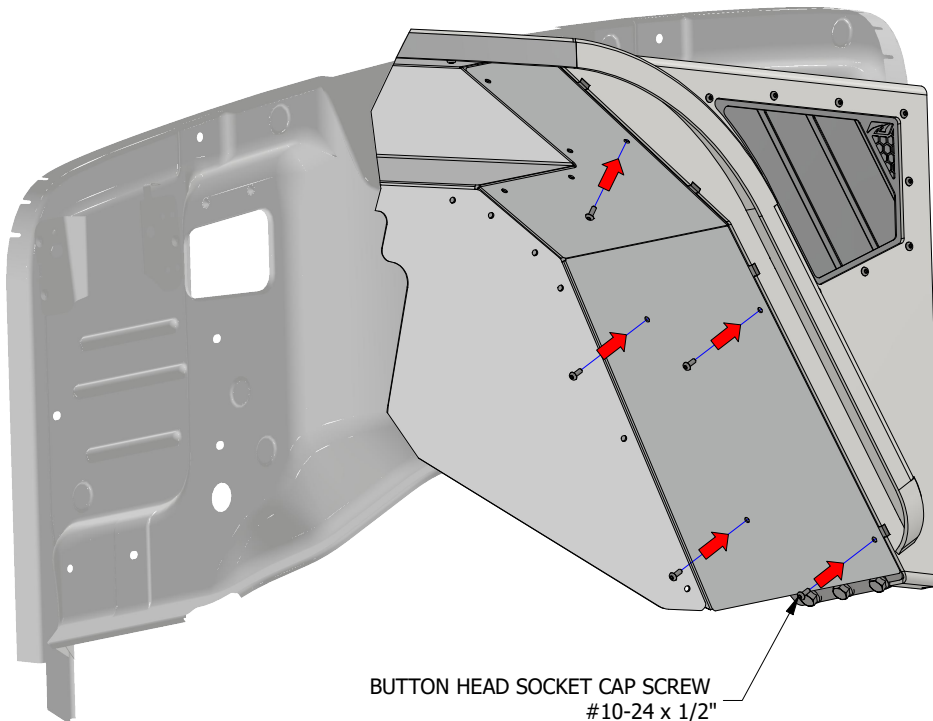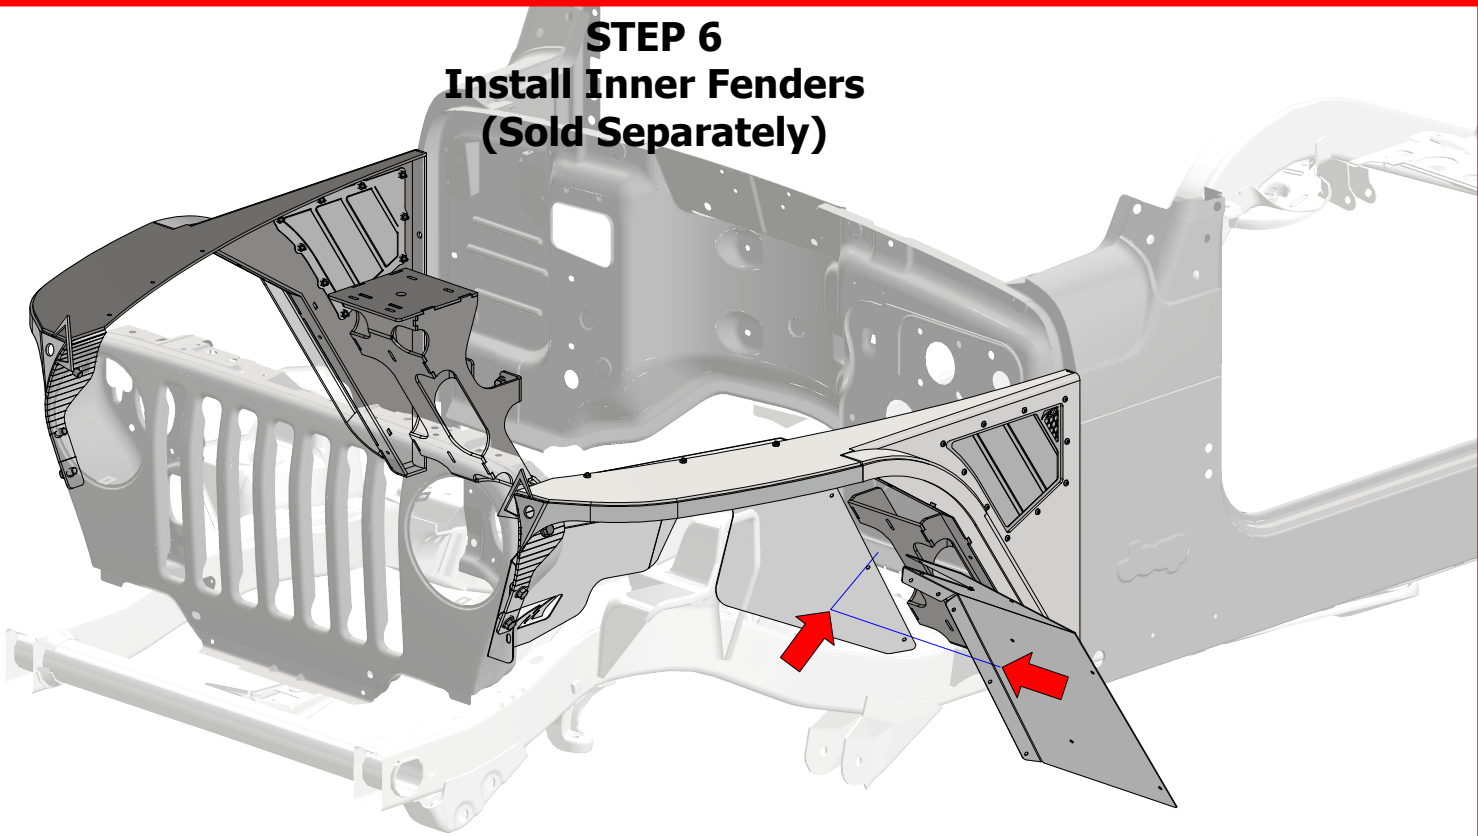

INSTALL THE MB1083-IF-03 INNER
FENDER WITH #10 BUTTON HEAD
SOCKET CAP SCREWS WITH #10
NYLOCK NUTS.

MB1083 - Assembly Instructions High Line Flat Fender and Inner Fender


STEP 7 Install Inner Fenders (Sold Separately)

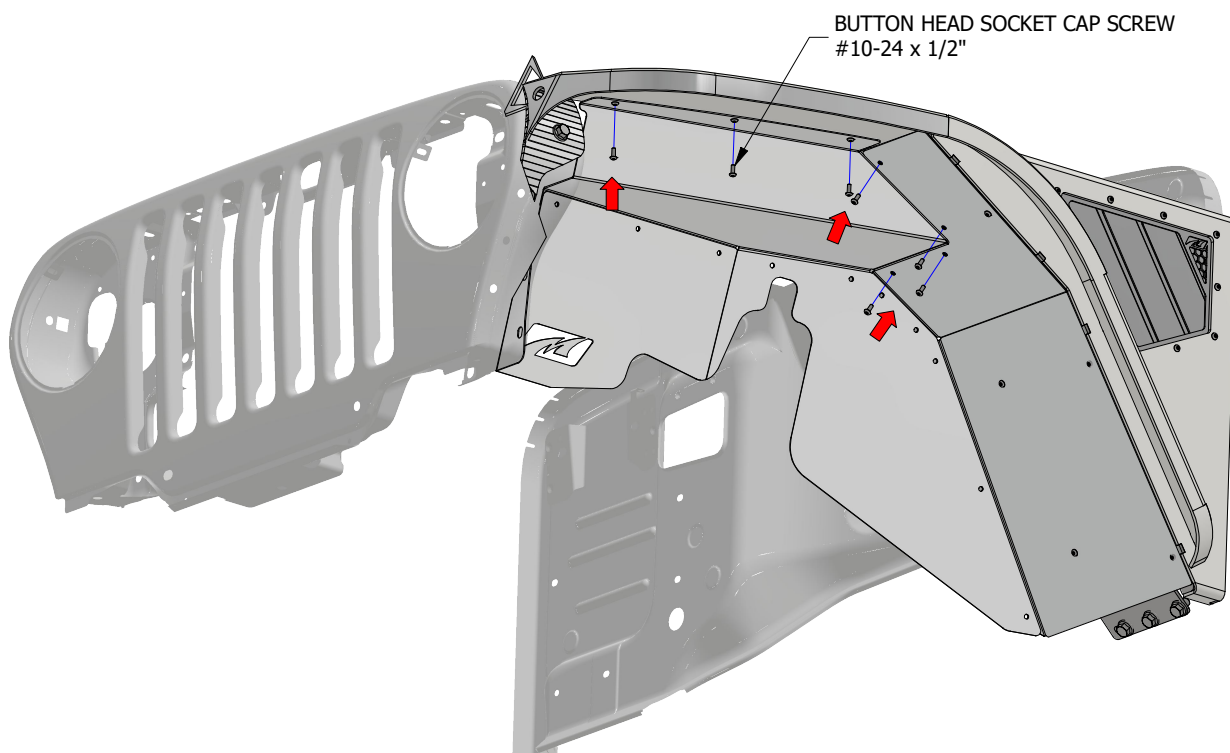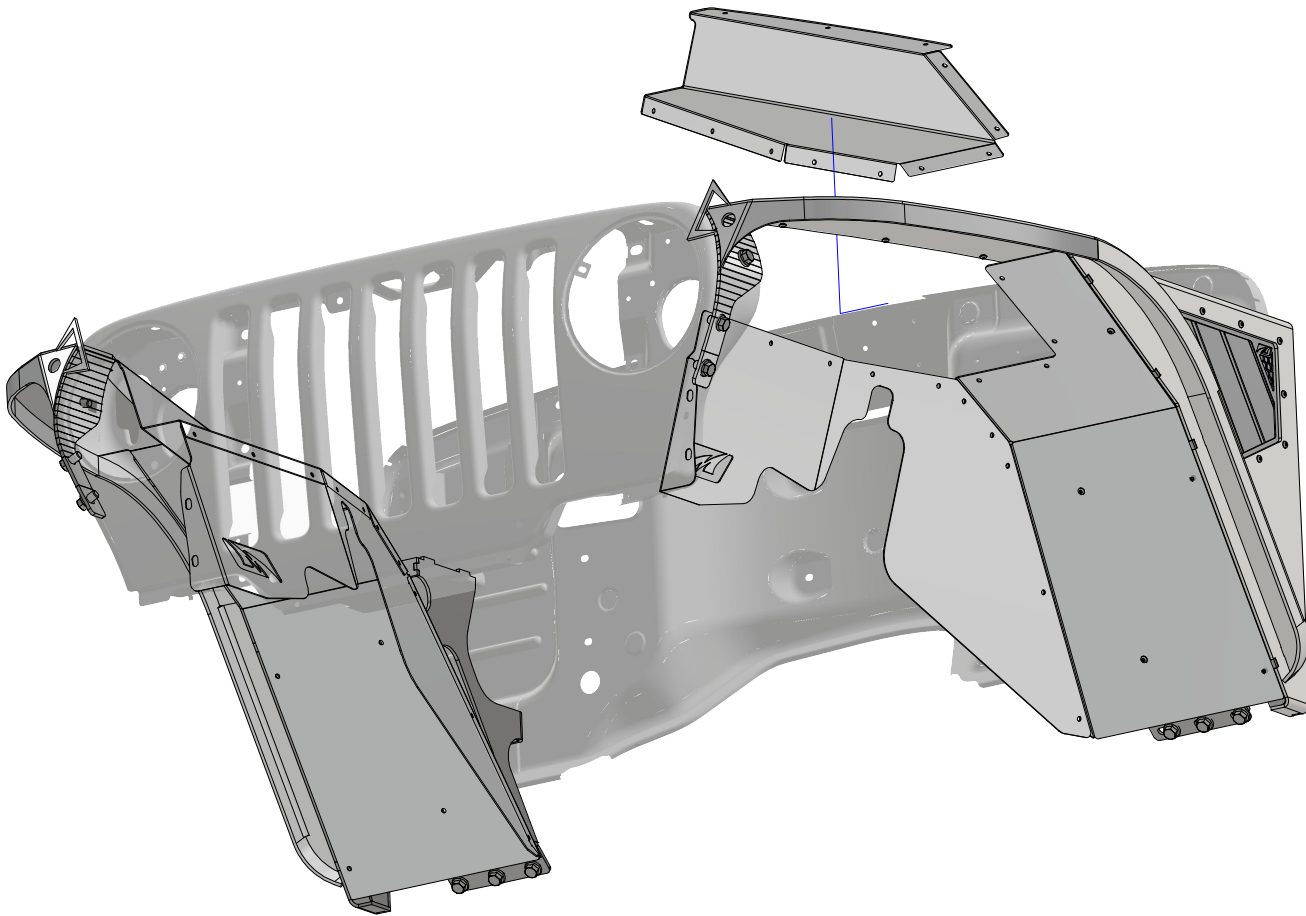

MB1083 - Assembly Instructions High Line Flat Fender and Inner Fender

STEP 8 Install Inner Fenders (Sold Separately)

NOTE: THE AIR FILTER BOX AND FUSE BOX WILL NEED TO BE RELOCATED OR REMOUNTED ON THE NEW INNER FENDER.

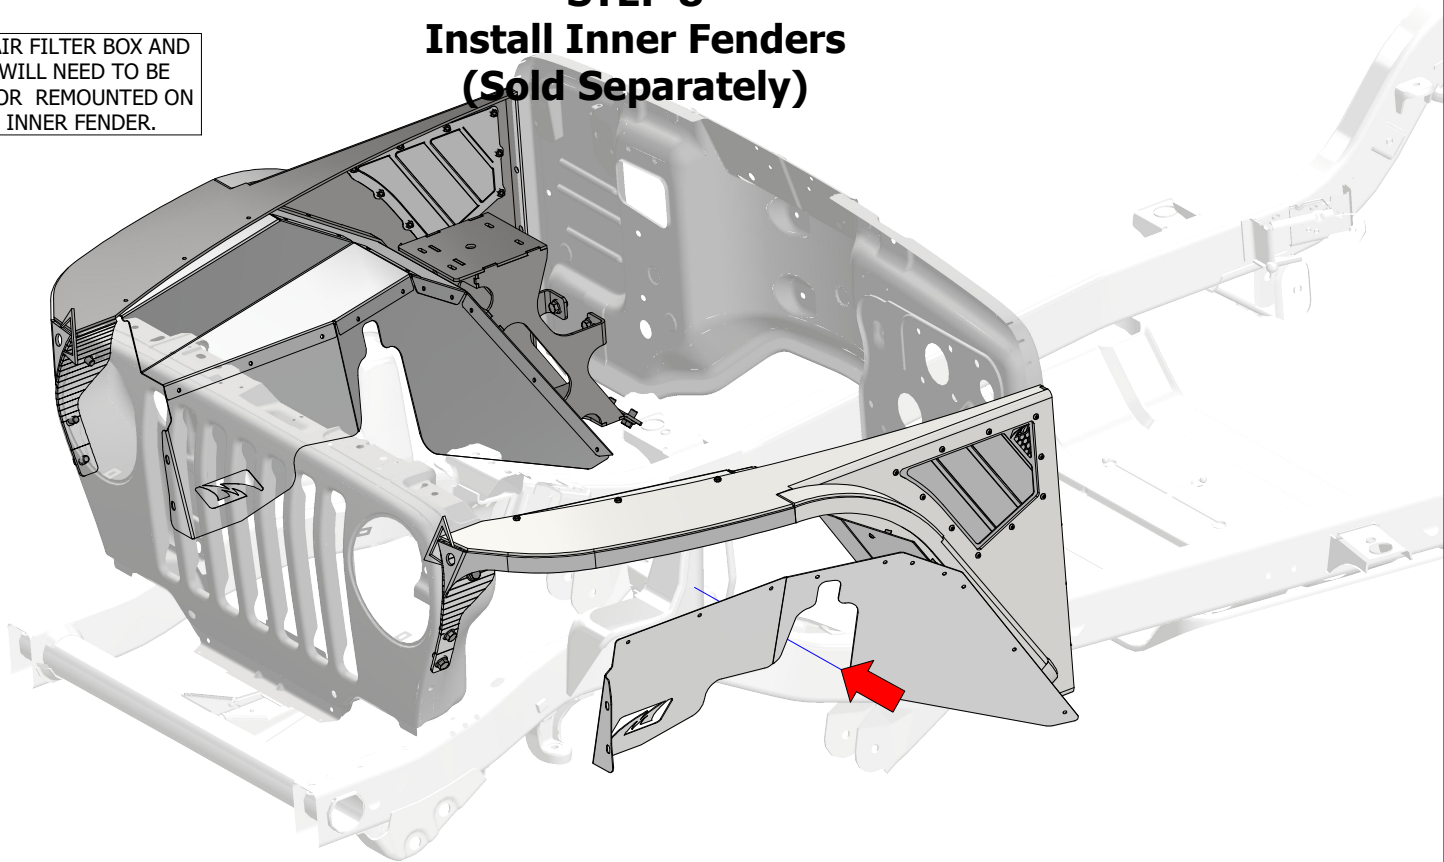

NYLOCK NUT
#10-24
(BACKSIDE)

FACTORY HARDWARE

REPEAT ON
PASSENGER SIDE

