

INSTALLATION INSTRUCTIONS


SUBJECT: PLUMBING A 6.7L CP3 ON 5.9L CUMMINS ENGINE

FPE-2021-51
April, 2021
Page 1 of 1

FITMENT: 2003-2007 5.9L Cummins

KIT P/N: FPE-CUMM-CP3K-5.9

STOCK 5.9L CP3 shown at right with Feed "F" and Return "R" lines marked. The high-pressure line from the pump to the rail will be removed and discarded along with the feed line and approximately 6" of hose when installing the new 6.7L CP3.

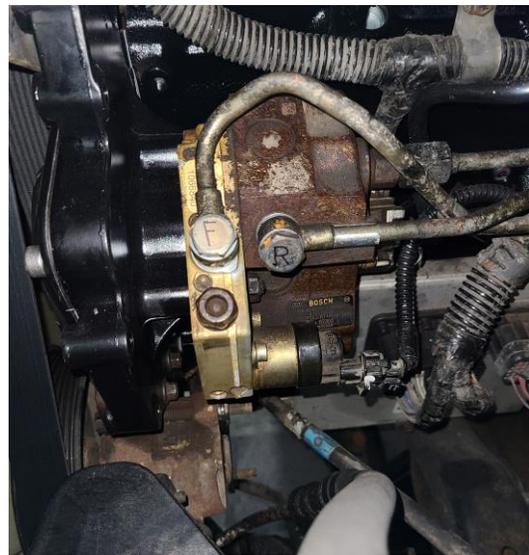

A fully installed 6.7L CP3 is shown at right.

Install the NEW high-pressure line provided with the CP3 along with the NEW fuel feed hose and feed fitting that will be routed from the CP3 to the fuel standpipe. The original return fuel line will be re-used.

