



INSTALLATION INSTRUCTIONS

2021+ JT Gladiator Underseat Lockbox #368

Please read and fill out the enclosed warranty registration card or register online at <https://tuffyparts.com/warranty-registration/> to activate your warranty.

QC CHECK

- _____ SHIP PACK CONTENTS
- _____ VISUAL INSPECTION
- _____ RUBBER SEALS
- _____ LOCK FUNCTION TEST
- _____ SHIPPING/KEY PACK

PARTS CHECKLIST



LOCKBOX #368

SHIPPING PACKAGE CHECKLIST



#1 (2) SCREW
M6-10x030

TOOLS CHECKLIST

- 10 mm Socket Wrench
- M6 Allen Wrench

PLEASE READ ALL INSTRUCTIONS THOROUGHLY BEFORE STARTING INSTALLATION.

1. Remove all the contents from the shipping box and confirm that you have all the items listed above.
2. Open the driver side rear door and lift the seat up.
3. Remove the two OEM hex bolts securing the plastic fence.
4. Place the 368 Lockbox into the space behind the fence and lineup the obround holes with the mounting holes. **Figure 1**
5. Insert the #1 M6 screws into the mounting holes and tighten down.

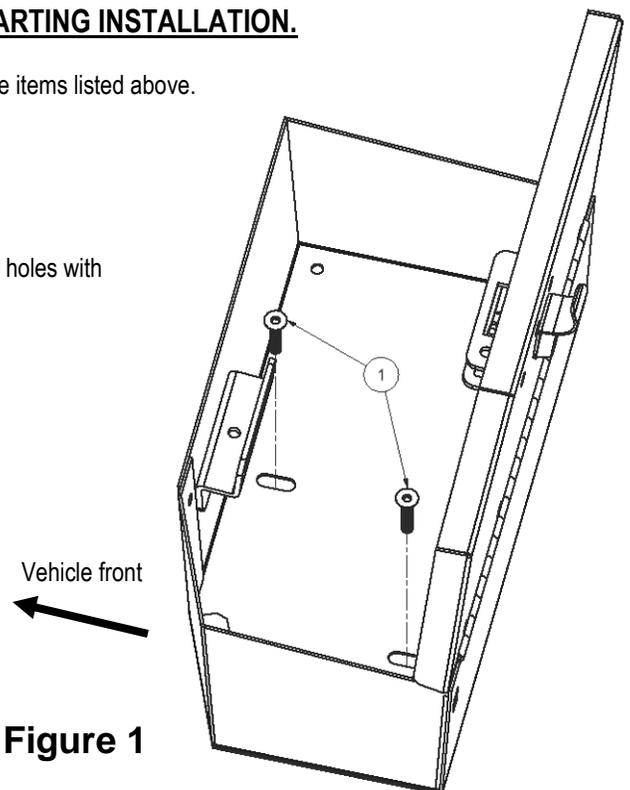


Figure 1