

PERFORMANCE BY



## INSTALLATION GUIDE

iE Aluminum Washer Fluid Cap For Audi & VW

IEGAUU1



This installation guide is for instructional purposes only. For best results, professional installation by an experienced technician is always recommended. By reading this guide you agree Integrated Engineering is not responsible for any damage or personal injury caused by incorrect installation.

## DIFFICULTY

---



Expect 10 Minutes on average

## REQUIRED PARTS

---

- No additional parts are required for this install

## REQUIRED TOOLS

---

- Flathead screwdriver
- 2.5 Allen

## OPTIONAL PARTS

---

## BEFORE YOU BEGIN

---

It is highly recommended to pre-read this entire guide ahead of your installation to familiarize yourself with each step. Always park your vehicle in a safe and level location and allow plenty of time for the engine bay and exhaust to completely cool. Locate and prepare your work space with each required tool listed above. Unbox all components and verify the contents and quantities before you begin. If anything is missing or damaged, please contact us for immediate help at [support@performancebyie.com](mailto:support@performancebyie.com)

### SPECIAL NOTE:

This install guide has been photographed and written on a 2021 VW Jetta GLI. Some steps and factory hardware specifications may vary depending on vehicle model, year, and region. This guide is for reference purposes only. If you are unsure of the installation procedure for any individual step or part, please seek professional help before proceeding.



## INCLUDED PARTS

---

- 01 - Universal Washer Cap
- 02 - Universal Washer Cap Base
- 03 - 18-8 Stainless Steel Cone-Point Set Screw - M5x0.8mm - 5mm Long
- 04 - Oil-Resistant Buna-N O-Ring



Some items may be partially assembled.



1



Pop the cap of your washer fluid reservoir.

2



If equipped, remove the screen from the reservoir by simply pulling it straight up.





3



Use either a flat head screwdriver or simply pry up on this edge to pop the blue ring off the reservoir top.


4



Loosen the set screw and push the entire assembly onto the reservoir top in your preferred orientation.



5

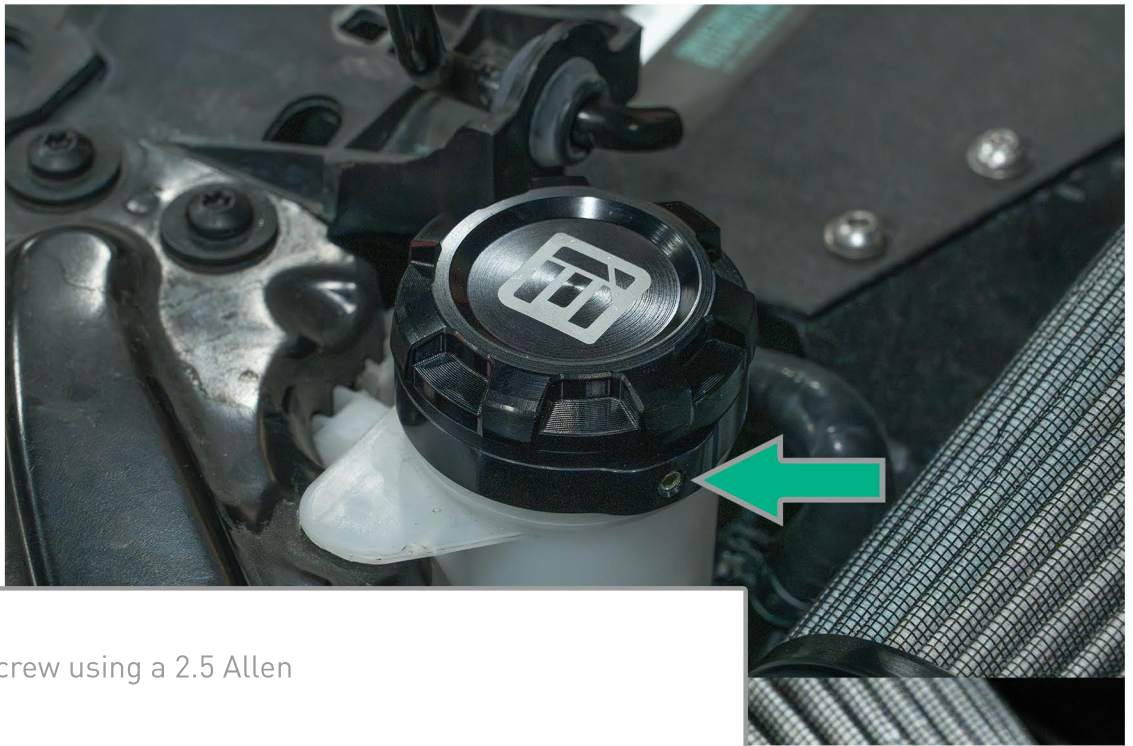

Tighten the set screw using a 2.5 Allen

6



Installation is now complete. Enjoy the look of your new iE Aluminum Washer Fluid Cap!





# ENJOY!

**Thank you** for purchasing an Integrated Engineering product. We are dedicated to serving your performance needs. Please check our website frequently for new product releases. If you have any questions or concerns about this product please do not hesitate to contact us.



## HOW WAS YOUR INSTALL?



### Stoked?

Awesome! Please leave a review.  
[share.performancebyie.com](https://share.performancebyie.com)



### Bummed?

Sorry, let us make it right.  
[support.performancebyie.com](https://support.performancebyie.com)



801.484.2021

[WWW.PERFORMANCEBYIE.COM](https://WWW.PERFORMANCEBYIE.COM)

[SUPPORT@PERFORMANCEBYIE.COM](mailto:SUPPORT@PERFORMANCEBYIE.COM)



Brother owned since 2007.  
Garage started for beer money.  
[performancebyie.com](https://performancebyie.com)

Don't be shy. [Share your project.](#)



[#LiveFastBuyFun](#)