

PERFORMANCE BY



INSTALLATION GUIDE


iE Aluminum Rear Wiper Delete For VW Hatchbacks

IEGAUU2



This installation guide is for instructional purposes only. For best results, professional installation by an experienced technician is always recommended. By reading this guide you agree Integrated Engineering is not responsible for any damage or personal injury caused by incorrect installation.

DIFFICULTY

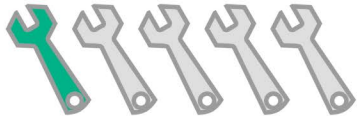

Expect 30 - 60 minutes on average depending on application.

REQUIRED TOOLS

- 5MM Allen

REQUIRED PARTS

- No additional parts are required for this install

OPTIONAL PARTS

- IE Turbo Inlet Pipe [Part number]

BEFORE YOU BEGIN

It is highly recommended to pre-read this entire guide ahead of your installation to familiarize yourself with each step. Always park your vehicle in a safe and level location and allow plenty of time for the engine bay and exhaust to completely cool. Locate and prepare your work space with each required tool listed above. Unbox all components and verify the contents and quantities before you begin. If anything is missing or damaged, please contact us for immediate help at support@performancebyie.com

SPECIAL NOTE:

Some steps and factory hardware specifications may vary depending on vehicle model, year, and region. This guide is for reference purposes only. If you are unsure of the installation procedure for any individual step or part, please seek professional help before proceeding.



INCLUDED PARTS


- 01 - Wiper Delete Base
- 02 - Wiper Delete Cap
- 03 - Oil-Resistant Buna-N O-Ring, 2 mm Wide, 27.5 mm ID (2x)
- 04 - 18-8 SS SOCKET HEAD SCREW, M6 X 1MM THREAD, 6MM LONG



Some items may be partially assembled.



1

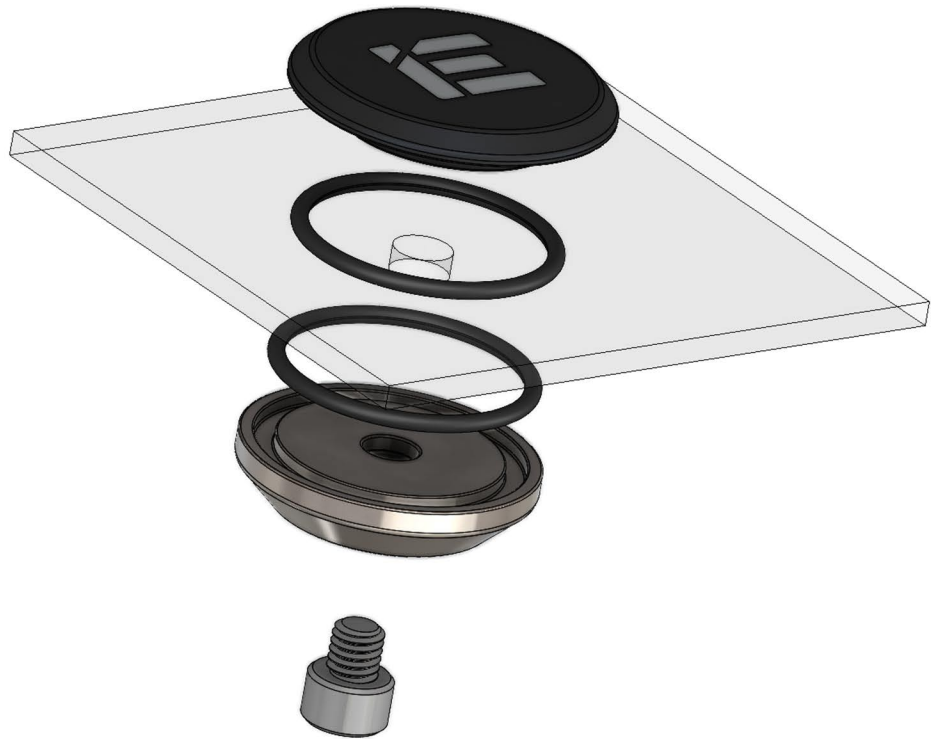


Remove the wiper arm from the vehicle, this will be a different process for each application.

Once you've done that, this is the assembly order of the iE Wiper Delete. Simply put an o-ring on each billet piece. Then put the cap on one side and the base on another. You then install the assembly screw through the base and glass and hand tighten til snug on cap. Do not overtighten. Snug will do.



ENJOY!

Thank you for purchasing an Integrated Engineering product. We are dedicated to serving your performance needs. Please check our website frequently for new product releases. If you have any questions or concerns about this product please do not hesitate to contact us.

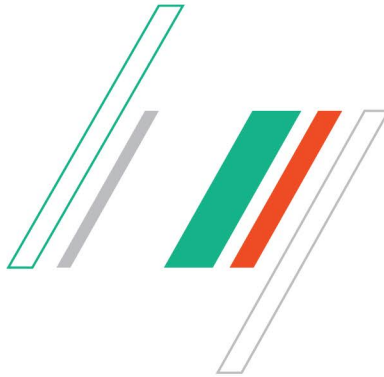

HOW WAS YOUR INSTALL?



Stoked?

Awesome! Please leave a review.
share.performancebyie.com



Bummed?

Sorry, let us make it right.
support.performancebyie.com



801.484.2021

WWW.PERFORMANCEBYIE.COM

SUPPORT@PERFORMANCEBYIE.COM



Brother owned since 2007.
Garage started for beer money.
performancebyie.com

Don't be shy. [Share your project.](#)



[#LiveFastBuyFun](#)