


PERFORMANCE BY

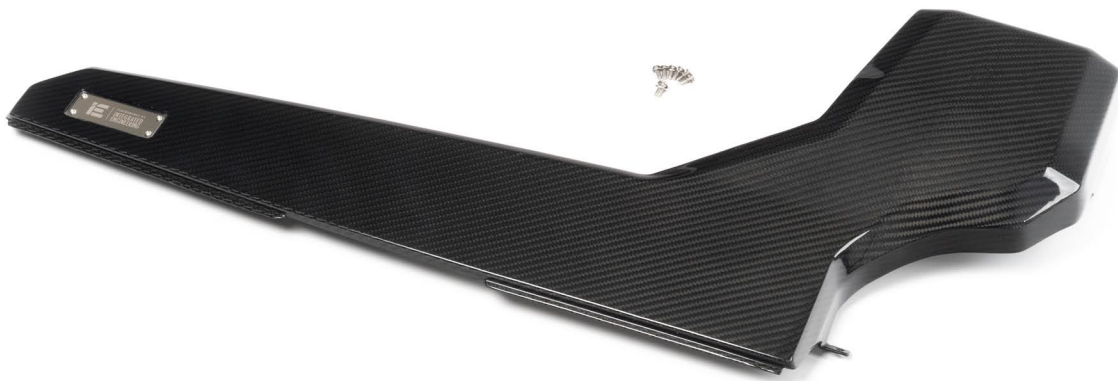

INSTALLATION GUIDE

iE Intake System Carbon Fiber Cover For VW MK8 GTI, Golf R & Audi 8Y S3

IEINDB3



This installation guide is for instructional purposes only. For best results, professional installation by an experienced technician is always recommended. By reading this guide you agree Integrated Engineering is not responsible for any damage or personal injury caused by incorrect installation.

DIFFICULTY



Expect 15 Minutes

REQUIRED PARTS

- IEINDB1 or IEINDB4 MK8 GTI/R/8Y S3 Intake

REQUIRED TOOLS

- 2mm Allan
- 4mm Allan

OPTIONAL PARTS

BEFORE YOU BEGIN

It is highly recommended to pre-read this entire guide ahead of your installation to familiarize yourself with each step. Always park your vehicle in a safe and level location and allow plenty of time for the engine bay and exhaust to completely cool. Locate and prepare your work space with each required tool listed above. Unbox all components and verify the contents and quantities before you begin. If anything is missing or damaged, please contact us for immediate help at support@performancebyie.com

SPECIAL NOTE:

This install guide has been photographed and written on a 2024 Golf R. Some steps and factory hardware specifications may vary depending on vehicle model, year, and region. This guide is for reference purposes only. If you are unsure of the installation procedure for any individual step or part, please seek professional help before proceeding.




INCLUDED PARTS

- 01 - Type 18-8 Stainless Steel Nylon-Insert Locknut, M3x0.5 Thread (4)
- 02 - Button Head Hex Drive Screw, Passivated 18-8 Stainless Steel, M4 x 0.70 mm Thread, 12mm Long (6)
- 03 - Stainless Steel Washer, M4, 4.3mm ID, 9 mm OD (6)
- 04 - Metric DIN 125 18-8 SS Flat Washer M6 Screw Size, 12mm OD
- 05 - Passivated 18-8 Stainless Steel, M6 x 1 mm Thread, 12mm Long
- 06 - 18-8 Stainless Steel Button-Head Socket Cap Screw, M3 Size (4)
- 07 - MK8 R / 8Y Intake Carbon Lid

Some items may be partially assembled.




1

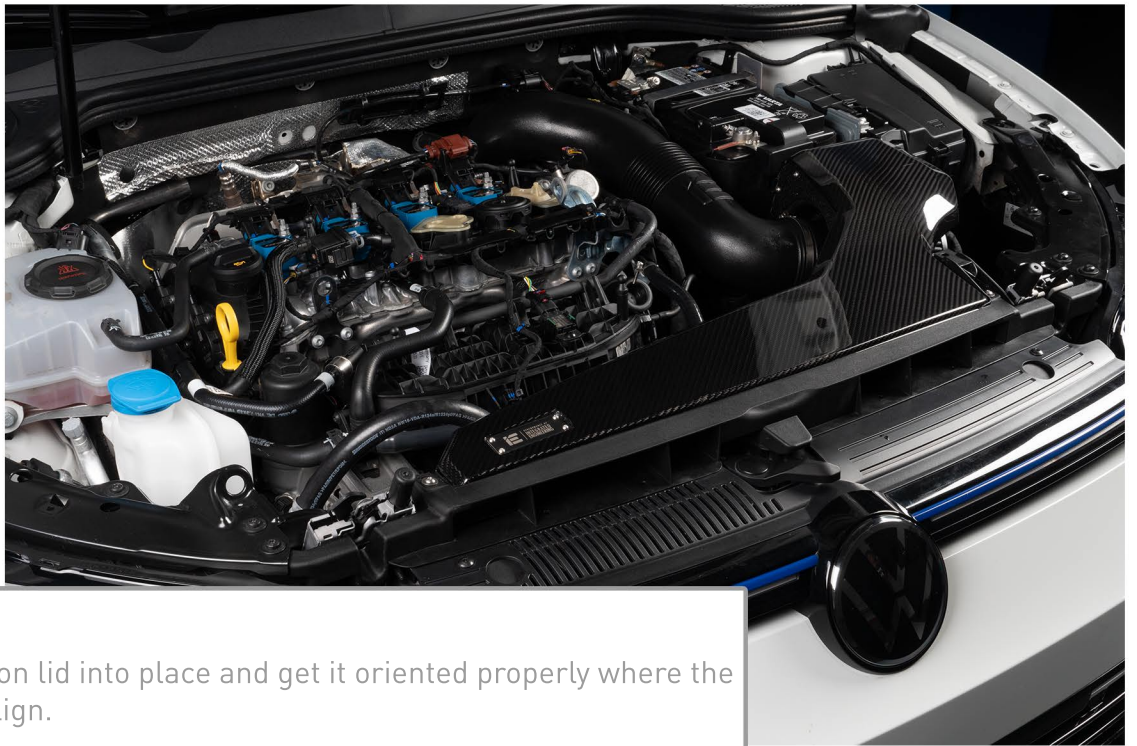

Lower your carbon lid into place and get it oriented properly where the fastener holes align.

2

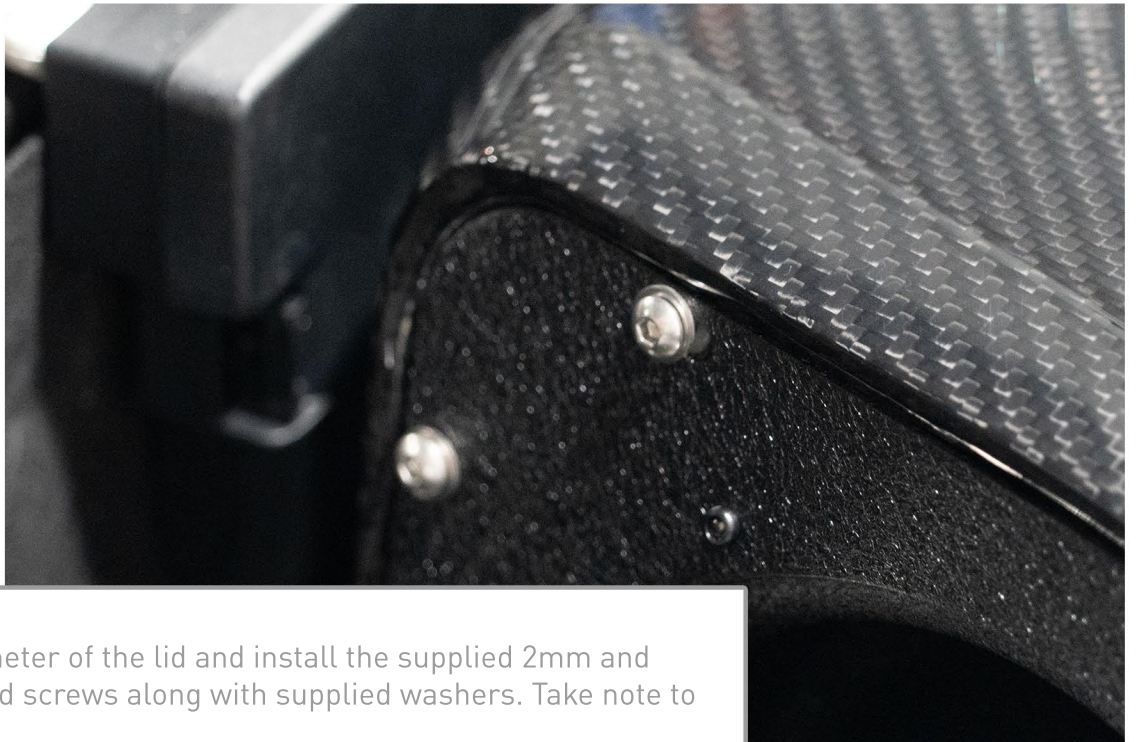


Follow the perimeter of the lid and install the supplied 2mm and 4mm button head screws along with supplied washers. Take note to not overtighten.



ENJOY!

Thank you for purchasing an Integrated Engineering product. We are dedicated to serving your performance needs. Please check our website frequently for new product releases. If you have any questions or concerns about this product please do not hesitate to contact us.

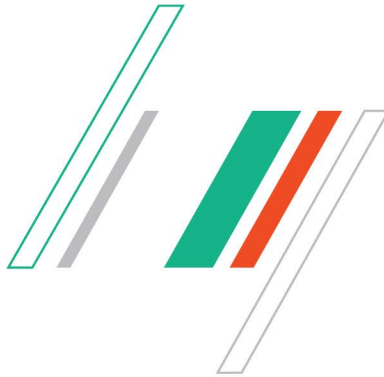

HOW WAS YOUR INSTALL?



Stoked?

Awesome! Please leave a review.
share.performancebyie.com



Bummed?

Sorry, let us make it right.
support.performancebyie.com



801.484.2021

WWW.PERFORMANCEBYIE.COM

SUPPORT@PERFORMANCEBYIE.COM



Brother owned since 2007.
Garage started for beer money.
performancebyie.com

Don't be shy. [Share your project.](#)



[#LiveFastBuyFun](#)