

Contact Us: **FACTORY UTV LLC.**

9237 Beatty Drive Sacramento, CA 95826

Phone : (916) 383-2730

E-mail : info@factoryutv.net

Go online: www.Factoryutv.net



U.H.M.W. Skid Plate / Under Armor Package

Ultra. High. Molecular. Weight. polyethylene all terrain skid plate / under armor kit for UTV's

Installation Guide

Can-Am Maverick R (2024+)

Skid Plate & Rock Sliders



Can-Am Maverick R (2024+) UHMW Skid Plate Installation

#0 Remove Stock Skid Plate. Carefully Drill Out Rivets In ALL (A) Locations.


Please note that there are two rivets under the side guards. Measure inline down 10" from forward center mounting rivets  and drill a 1/2" clearance hole in the center of each side guard to remove rivets. (Refer to image on page 3). Use caution while drilling. You will need to re-use mounting holes with self

#1 Rear Skid Plate :

Install: (14x) 1/4"-20 x 3/4" Self Tapping Bolts in *Rear skid: (A) locations.*

Loosely mount bolts first, to aid positioning of skid and chassis frame before tightening bolts securely.

If installing X-Brace: Place In-between rear skid plate and chassis frame during installation.

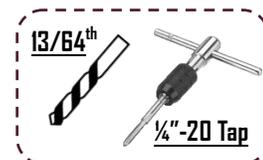

#2 Main Skid Plate :

Install: (26x) 1/4"-20 x 3/4" Self Tapping Bolts in *Main Skid: (A) locations, *Align edge with rear skid.*

Loosely mount bolts first, to aid positioning of skid and chassis frame before tightening securely

*(Note *RS if installing with Rock Sliders)*

#3 Front Diff. Skid Plate :

Install: (7x) 1/4"-20 x 3/4" Self Tapping Bolts in *Diff. Skid : (A) locations.*

** Align edge with Main Skid. (See: *Drilling instructions* below)*

Mark, drill and Install: (4x) 1/4"-20 x 1/2" Self Tapping Bolts in *Diff. Skid : (B) locations.*



**(Align Edge)*

*RS *If Installing Rock Sliders :

Install: Rock Sliders in-between Skid plate and chassis frame, drill out rivets and

Use: (8x) 1/4"-20 x 1 1/4" Self Tapping Bolts in *Main Skid: (A*C) locations, (in lieu of 8x (A) bolts)*



*Drilling Instructions : *

Use a : #No7 (13/64th) drill bit.

(one size above the commonly available 3/16th bit) Recommend the use of : 1/4"- 20 Tap *(Optional)

To drill and thread self tapping bolts in to chassis frame.

Finger Thread All Bolts Prior To Fastening Securely With Power Tools.

We strongly recommend the use of a "Thread Locking Compound" when installing any mounting hardware.


(When installation is complete , ensure all bolts are fastened securely.)

Can-Am Maverick R (2024+) Hardware kit

Main Skid Large bag:




1/4"-20 x 3/4" Self Tapping Bolt (#B-D:2)



Counter Sunk Washers (#W-1)

*If Rock sliders

Replace 8x main skid (B-D:2) with 10x (B-D:4)



1/4"-20 x 1/4" Self Tapping Bolt (#B-D:4)

Rear Skid small bag:



1/4"-20 x 3/4" Self Tapping Bolt (#B-D:2)



Counter Sunk Washers (#W-1)

Front Diff Skid small bag:



1/4"-20 x 3/4" Self Tapping Bolt (#B-D:2)



Counter Sunk Washers (#W-1)



1/4"-20 x 1/2" Self Tapping Bolt (#B-D:5)