




## '55 '56 '57 (Tri-Five) Chevy Replacement Gas Pedal #199250/ #199255



### Tools Needed:

- 5/32" Allen Wrench
- Loc-tite® Thread Locker

1. Remove factory gas pedal from floor.
2. Vacuum carpet/floor area around gas pedal location to remove debris and ensure a clean mounting area.
3. Apply Loc-Tite® thread locker on the threads of the two 1/4-20x1" button head cap screws.
4. Place replacement pedal on floor and attach with the button head cap screws. Tighten firmly.
5. Check pedal action, make sure pedal moves freely and does not bind.

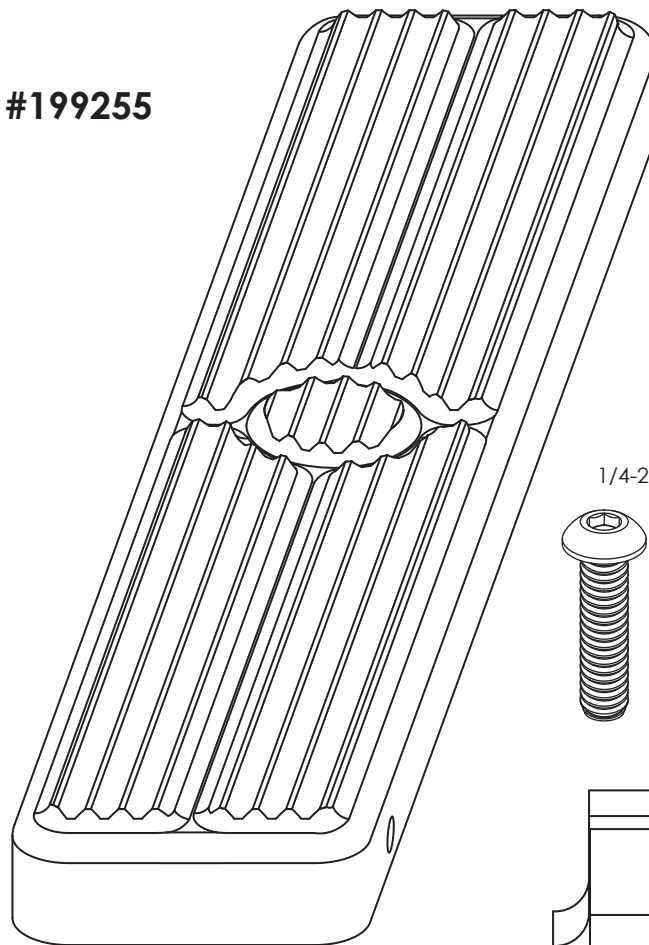

1/4-20 x 1" Button Head Cap Screw

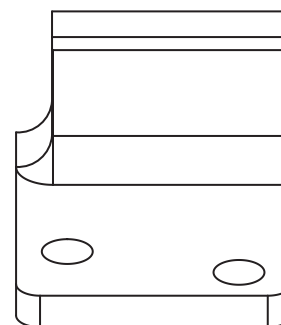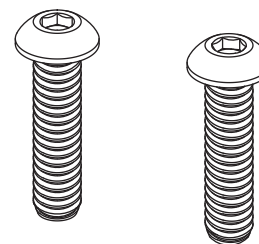

6-32 x 1/8" Set Screw

