



HIGH IMPACT STEEL FRONT BUMPER INSTALLATION MANUAL



For technical support , please write us to:
info@afxmotorsports.com or call us at:
Ph. 956-242-6521

HAVE FUN AND A SAFE RIDE!



www.afxmotorsports.com

4610 Modern Lane, Laredo, TX 78041 Ph. 956-242-6521

THIS PRODUCT IS FOR OFF ROAD USE ONLY

POLARIS RZR TURBO-S 2 & 4 SEATS

DEF050


THANK YOU!

FOR PURCHASING AT AFX MOTORSPORTS

HIGH IMPACT STEEL FRONT BUMPER FOR POLARIS RZR TURBO-S

HOW TO INSTALL

Pieces included:

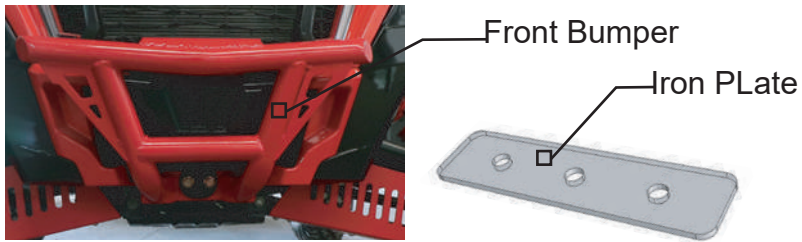

Hardware:

- (1x) 5/16 x 1" Hex Screws with washer and nut
- (4x) 3/8 x 1" Hex Screws
- (2x) 3/8" Plane washer
- (2x) 3/8" Press washer
- (2x) 3/8" Security nut

Tools needed (Not Included):

- T30 Torx Screwdriver.
- 5/32" Allen Key.
- 7/16" or 14 mm Combination Wrench.

Liability Statement

AFX Motorsports products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by AFX Motorsports and is not recommended. AFX Motorsports products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact AFX Motorsports to verify that they will work together. Although AFX Motorsports has thousands of satisfied customers, user should be aware that installing bumpers, rock sliders, spare tire carriers, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. AFX Motorsports urges operators and occupants to wear a helmet and appropriate riding gear at all times. By purchasing and installing AFX Motorsports products, user agrees that should damages occur, AFX Motorsports will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. AFX Motorsports, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from AFX Motorsports. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim. AFX Motorsports will warranty only parts provided by AFX Motorsports. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by AFX Motorsports. AFX Motorsports parts and products are not warranted if item was not installed properly, misused, or modified.

7

To finish, it is necessary to tighten all the used screws and place the plastic in the front part as it is shown in the image.




1

Remove the original plastic at the front of the vehicle.



2

Locate the piece at the front part of the car that is shown in the image, then the front parta must be removed, keep the screws.

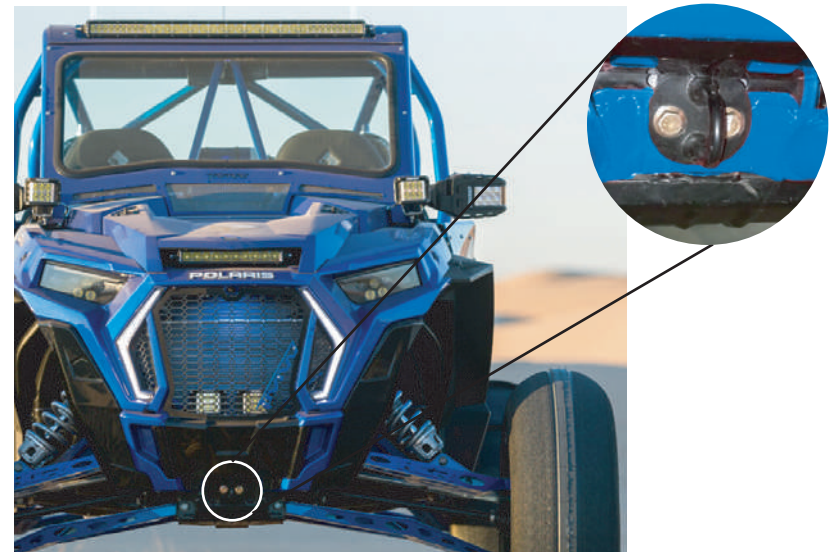

3

Then the plate must be located with three perforations (provided by AFX) from the inside of the plastics as it is shown in the image, then a 5/16" screws must be placed. Do not tighten yet.



4

Settle the bumper starting from the top until setting it on the screws that was placed in to previous step, as it is shown in the image.



5

Then, use the original screw of the car (or use own two 3/8 x 1" screw) and with the help of the perforations of the bumper, adjust it with the original screws (do not tighten yet).



6

Then the top parte must be hold from the bumper using two 3/8 x 1" screws on the each side, as it is shown in the image.

