


4

Place the arm on the support tube of the vehicle as shown in the image). Use a 3/8" x 2 1/2" screw and lock nut to secure the arm and the rear bumper.

Repeat this step on the other side.

3/8 x 2-1/2" screw with lock nut

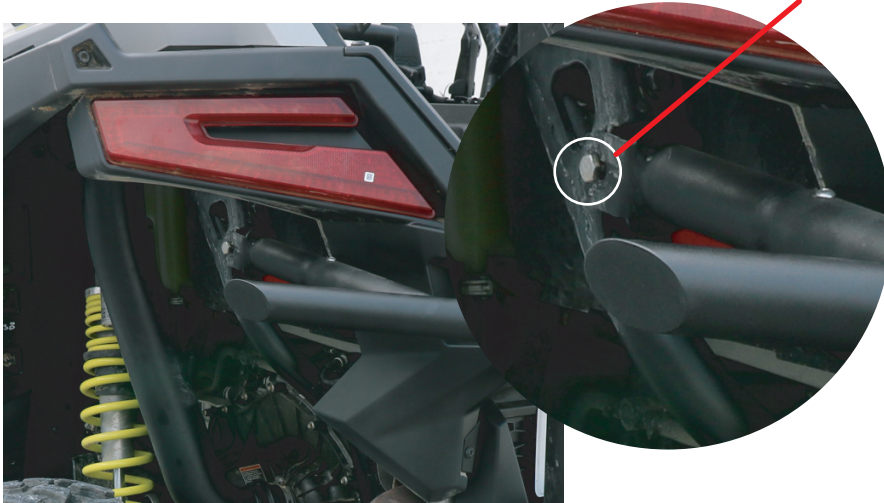

5

To finish the installation, tighten all the screws.

For technical support , please write us to:  
info@afxmotorsports.com or call us at:  
Ph. 956-242-6521

**HAVE FUN AND A SAFE RIDE!**



www.afxmotorsports.com  
4610 Modern Lane, Laredo, TX 78041 Ph. 956-242-6521

**THIS PRODUCT IS FOR OFF ROAD USE ONLY**

## STEEL REAR BUMPER INSTALLATION MANUAL



**Polaris PRO XP  
2019-2021**

**DEF062**


# THANK YOU!

## FOR PURCHASING AT AFX MOTORSPORTS



## HOW TO INSTALL

Pieces included:

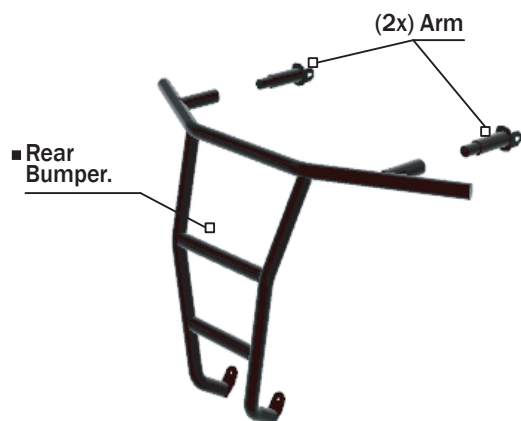

(2x) 3/8" x 3 1/2" Screw


(2x) 3/8" x 1" Screw

(2x) 1/4 x 2 1/2" screws

(4x) 3/8" lock nut

(4x) 3/8" flat washer

(2x) 1/4" lock nut



Tools needed (Not Included):


- 3/4" Wrench.
- 7/32" Allen Key.
- 9/16" or 14 mm Combination Wrench.

### Liability Statement

AF1 Motorsports products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by AF1 Motorsports and is not recommended. AF1 Motorsports products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact AF1 Motorsports to verify that they will work together. Although AF1 Motorsports has thousands of satisfied customers, user should be aware that installing bumpers, rock sliders, spare tire carriers, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. AF1 Motorsports urges operators and occupants to wear a helmet and appropriate riding gear at all times. By purchasing and installing AF1 Motorsports products, user agrees that should damages occur, AF1 Motorsports will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. AF1 Motorsports, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from AF1 Motorsports. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim. AF1 Motorsports will warranty only parts provided by AF1 Motorsports. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by AF1 Motorsports. AF1 Motorsports parts and products are not warrantied if item was not installed properly, misused, or modified.

1

Assemble the arms of the bumper. Align the perforation in the arm with the one in the bumper. Use a 1/4" x 3" screw with a lock nut, do not tighten yet. Repeat this step with the other arm.

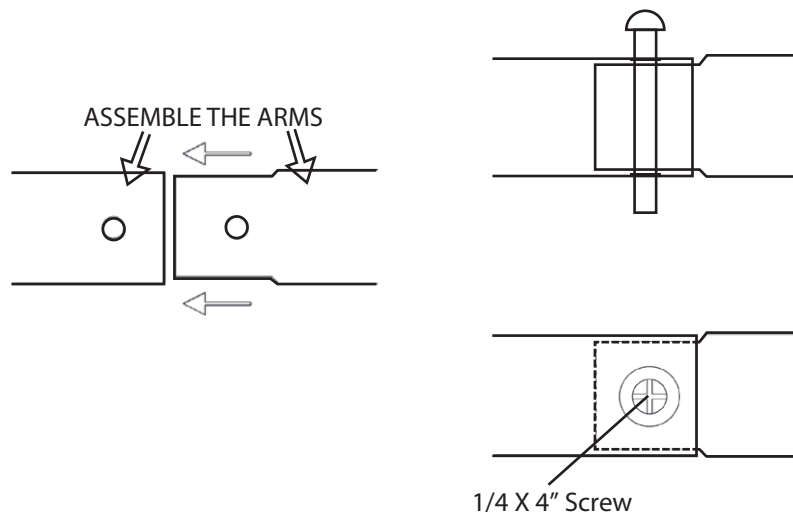

2

Locate the perforations that are in the low part of the rear suspension plate. Align the bumper with the perforations (as it is shown in the image). Use two 3/8 x 1" screws with lock nuts.

