

ALUMINIUM ROCKSLIDERS INSTALLATION MANUAL

HAVE FUN AND A SAFE RIDE!


For technical support, please write us to: info@afxmotorsports.com or call us at: Ph. 956-242-6521

HAVE FUN AND A SAFE RIDE!



www.afxmotorsports.com 4610 Modern Lane, Laredo, TX 78041 Ph. 956-242-6521

THIS PRODUCT IS FOR OFF ROAD USE ONLY

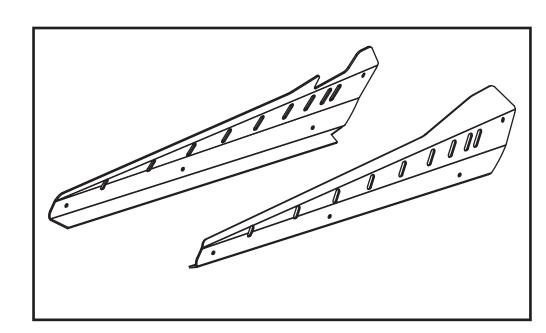

POLARIS RZR 900 / 1000 XP 4 SEATS

1/8" - 3/16" INCH THICKNESS

SKU SKI062-A SKU SKI078-A SKU SKI096-A


THANK YOU!

FOR PURCHASING AT AFX MOTORSPORTS

MOTORSPORTS

ALUMINIUM ROCKSLIDERS KIT POLARIS RZR 900 / 1000 XP

HOW TO MAKE THE INSTALLATION

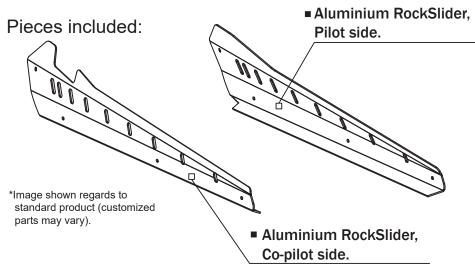

Hardware:

- (6x) 6X50mm Screws.
- (2x) 6X30mm Screws.

Tools needed (Not Included):

- 4mm Allen Screwdriver.
- T40 Torx Screwdriver.

Liability Statement

AFX Motorsports products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by AFX Motorsports and is not recommended. AFX Motorsports products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact AFX Motorsports to verify that they will work together. Although AFX Motorsports has thousands of satisfied customers, user should be aware that installing bumpers, rock sliders, spare tire carriers, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. AFX Motorsports urges operators and occupants to wear a helmet and appropriate riding gear at all times. By purchasing and installing AF1 Motorsports products, user agrees that should damages occur, AFX Motorsports will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. AFX Motorsports, nor any 3rd party, will not be held responsible for any direct, incidental, special, or consequential damages that result from any product purchased from AFX Motorsports. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim. AFX Motorsports will warranty only parts provided by AFX Motorsports. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by AFX Motorsports. AFX Motorsports parts and products are not warrantied if item was not installed properly, misused, or modified.




Remove the four screws located on the sides of the vehicle where the rocksliders will be located (Figure 1). For this step, use a T-40 Torx Screwdriver.



Figure 1. Remove this screws.


2

Place the Aluminium RockSliders (Pilot or Co-pilot's side) on the sides of the vehicle, and locate the bolts (as shown in Figure 2). It is recommended that you place the bolts in the farther side of the rockslider firts and then place the middle bolts; Do not thight them yet.

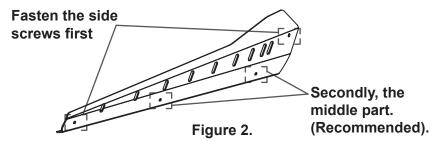



When the Rocksliders are centered, tighten the bolts to fix the them in place. For better results use a drop of LockTite on the thread of the bolts. Be careful not to overtighten the bolts, this could sweep the threads of the vehicle.



Rock Slider Drivers side.